



BaLDR BALDB0340ST2H2 Wireless Weather Station with Backlight User Guide

[Home](#) » [BALDR](#) » BaLDR BALDB0340ST2H2 Wireless Weather Station with Backlight User Guide 

Contents

- 1 BaLDR BALDB0340ST2H2 Wireless Weather Station with Backlight
- 2 POWER ON
 - 2.1 Main Unit Installation
 - 2.2 Sensor Installation
- 3 MAIN UNIT SETUP
 - 3.1 RF Signal Searching
 - 3.2 RF Signal Received
 - 3.3 Manual Setup
- 4 Documents / Resources
- 5 Related Posts



 
BaLDR BALDB0340ST2H2 Wireless Weather Station with Backlight



POWER ON


Main Unit Installation

1. Remove the battery compartment cover and insert 2xAAA batteries.
2. Take the metal stand out of the compartment and install it on the back of the uni.

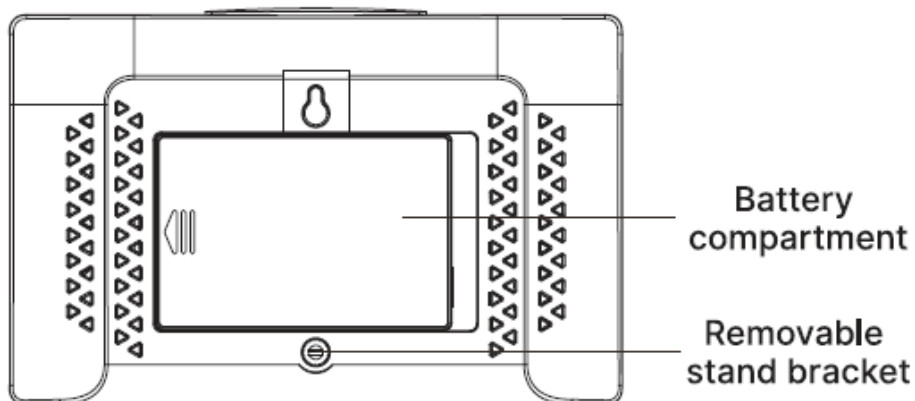


Sensor Installation

 1. Select the channel you desired to use.

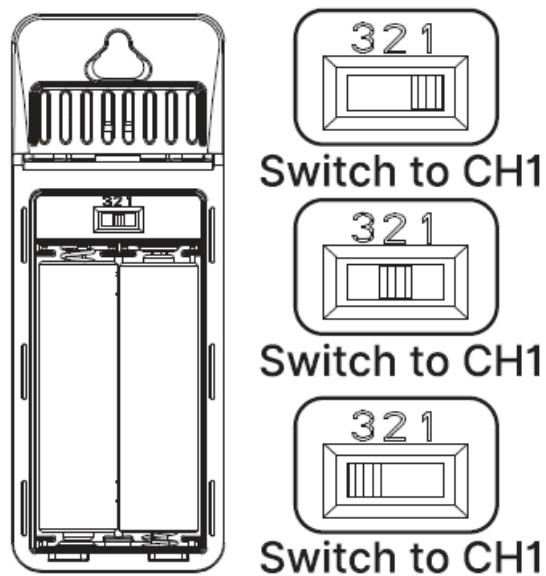


 2. Load the 2xAA batteries in 3 minutes to ensure RF signal received in time.

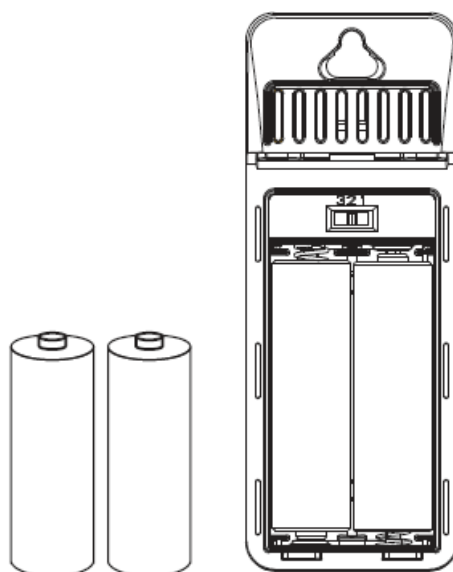

NOTE:

 
If not powered on in 3 minutes from the main unit powered on Press and hold button for 3 seconds to search RF signal again.

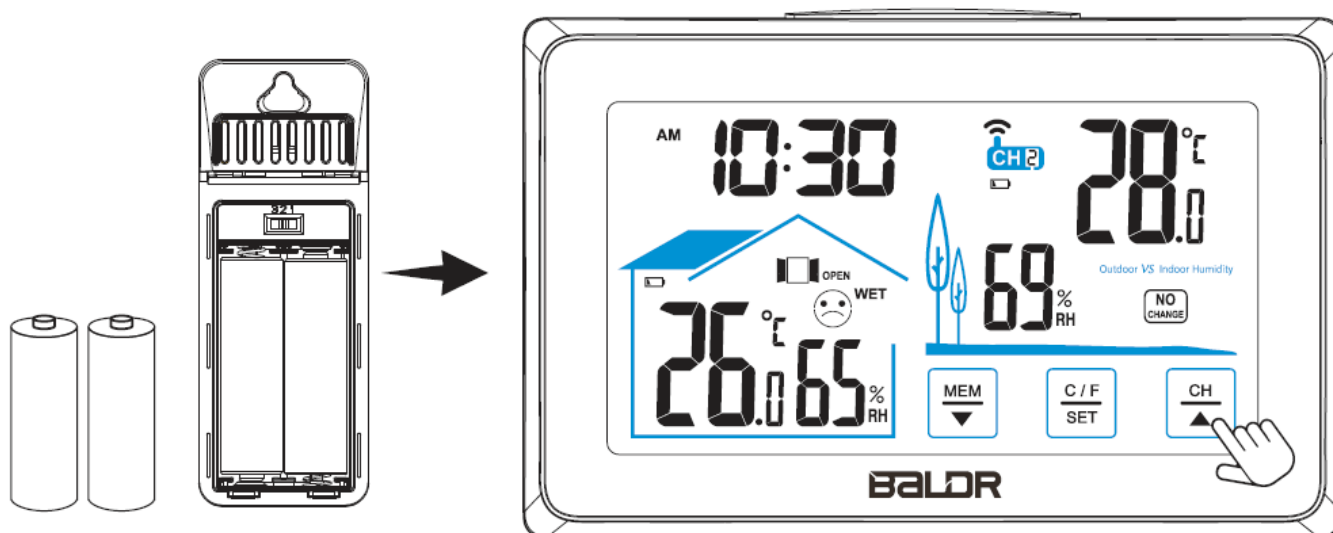


MAIN UNIT SETUP

1. Current time

 
2. Comfort level indicator
3. Indoor temperature and humidity
4. Ambient change indicator
5. Outdoor temperature and humidity
6. Window indicator

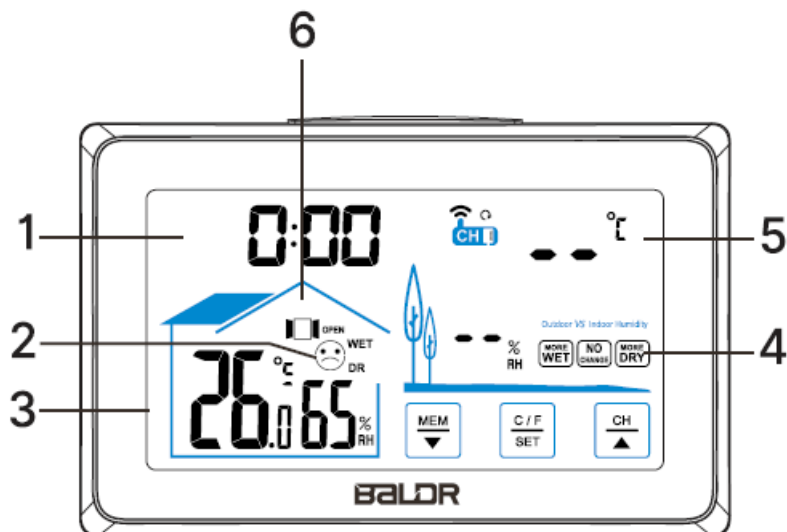


- LCD will full display for 3 seconds

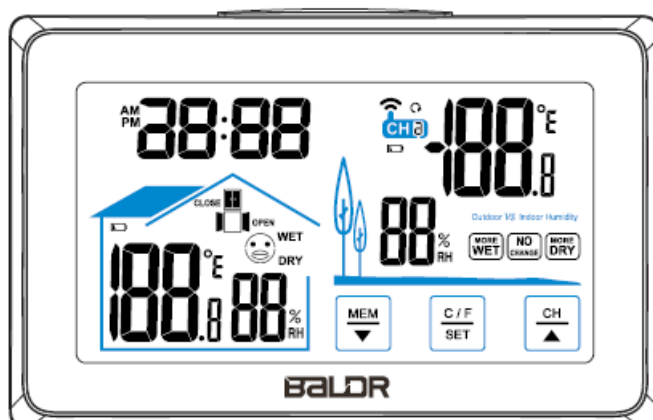 

 - Press button to select the channel on main unit you desire to use (Default in CH1)

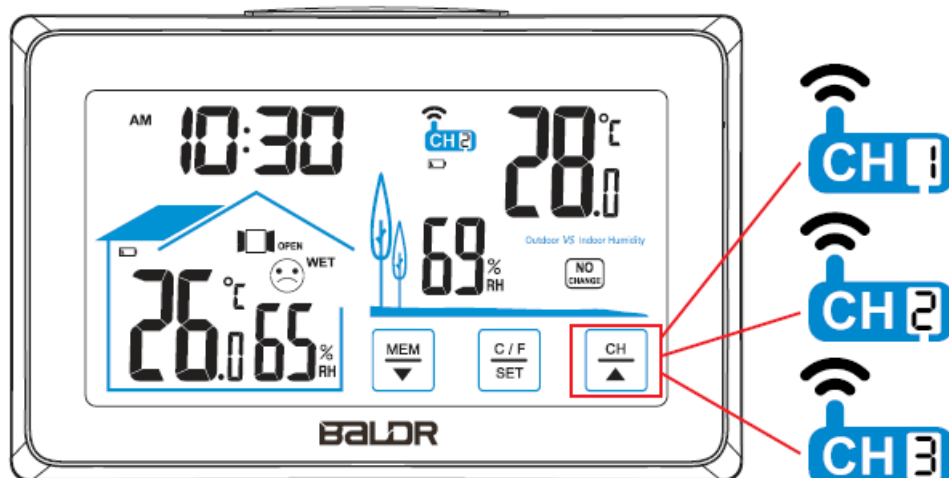


 - Select the same channel number for both the sensor and the main unit in order to synchronize.

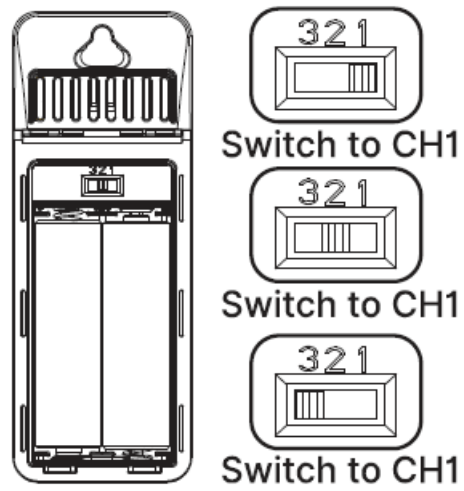


RF Signal Searching

 The receiving antenna signal '9' is flashing.

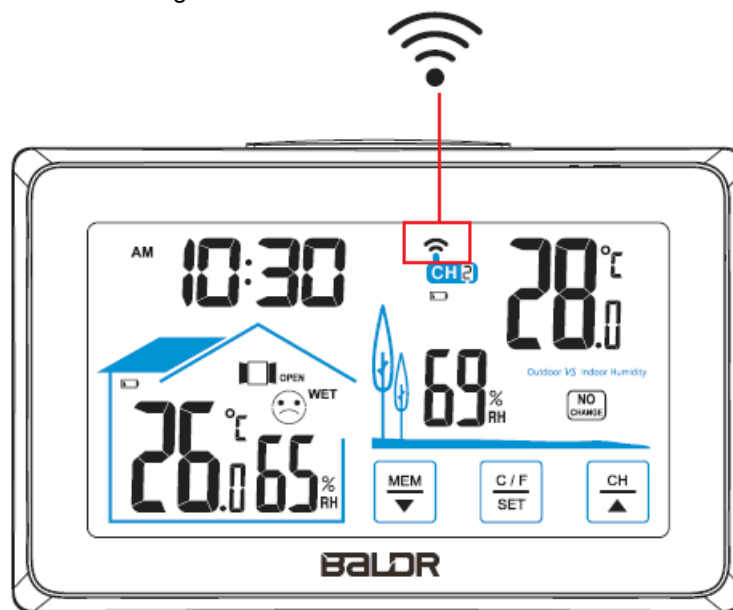

RF Signal Received

 The receiving antenna signal '9' will stop flashing.

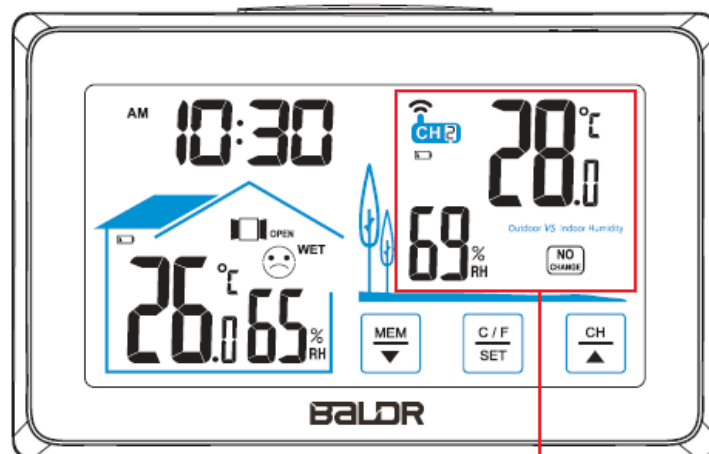


Outdoor Data will
display automatically.

Manual Setup

Press and hold “SET/C/F” button to enter into setup (3 seconds).

 
Press and release “SET/C/F” button to skip setting or go to next setting option (1 second).

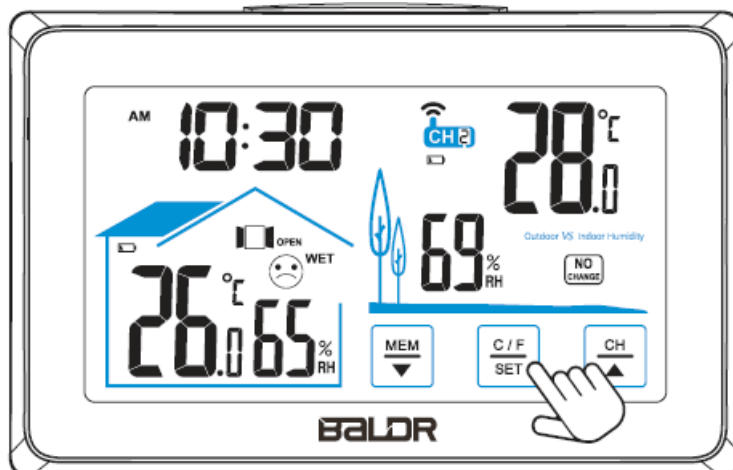


SETUP ORDER

1. Hour
2. Minute
3. 12/24 hours select
4. OFF/ON (Memory mode 24 hour or all the time)
5. Exit

 Press “CH/up..” button to increase the values.

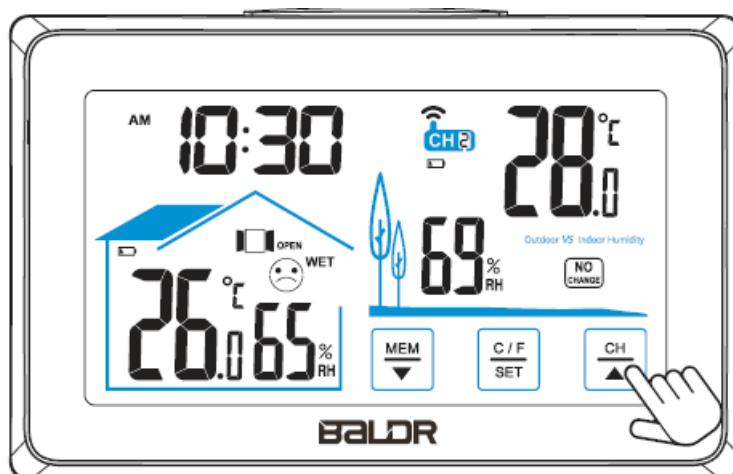

 Press “MEM/down” button to decrease the **values**.

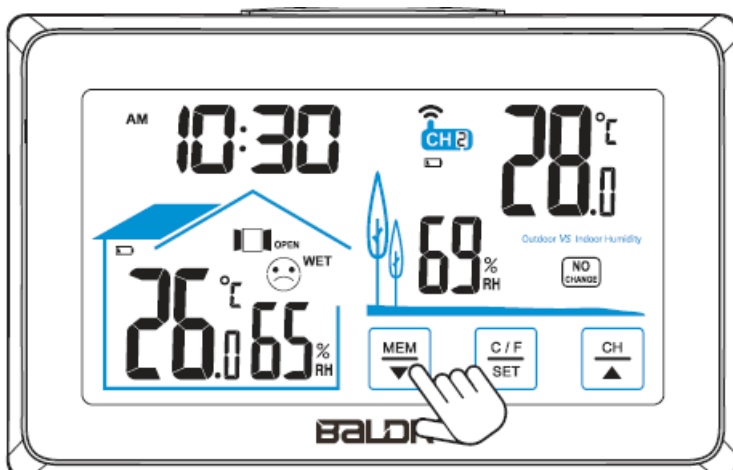


Tips: press and hold “CH/JJ..” or “MEM/ T” button will quickly change the value by 8 steps.

This Quik Start is to help you quickly set up the product. For detailed settings, please refer to the user manual, or scan the QR code below for relevant product information and operation video link. Thank you.

www.baldr.com
service@baldr.com

Documents / Resources

	<p>BaLDR BALDB0340ST2H2 Wireless Weather Station with Backlight [pdf] User Guide BALDB0340ST2H2 Wireless Weather Station with Backlight, BALDB0340ST2H2, Wireless Weather Station with Backlight, Wireless Weather Station, Weather Station, Station</p>
---	--