



## Banggood 20220105022557Z19 Remote Control with Rotating Clockwise Instructions

[Home](#) » [banggood](#) » Banggood 20220105022557Z19 Remote Control with Rotating Clockwise Instructions 

### Contents

- [1 Banggood 20220105022557Z19 Remote Control with Rotating Clockwise](#)
- [2 Remote Control Instructions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

 


### Banggood 20220105022557Z19 Remote Control with Rotating Clockwise




### Remote Control Instructions


1. Remove the back cover of the remote control by rotating 90° counterclockwise.

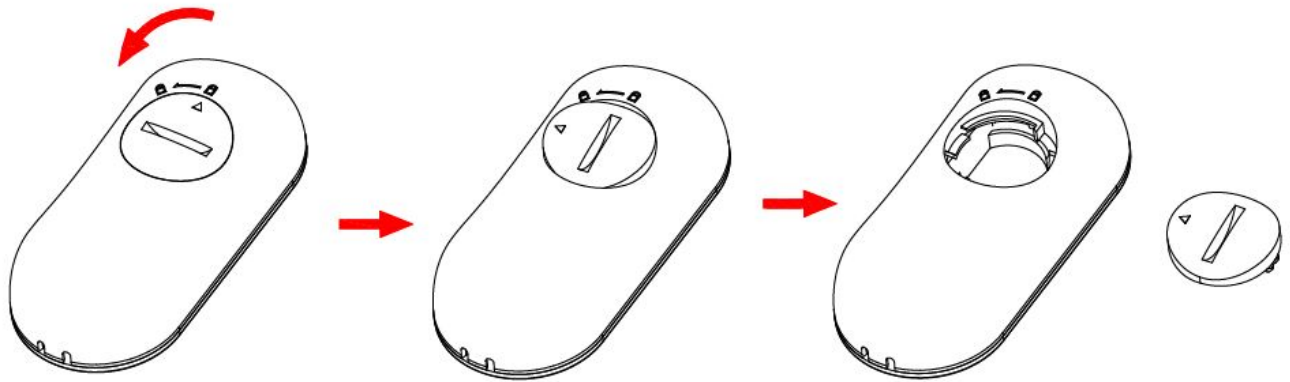

 2. Put a 3V button battery of model “CR2032” or “CR2025” into the battery box as shown in the figure, the protruding metal tips clamp one side of the battery and the finger presses the battery into the battery box. Please note that the battery “+” should face us; Place the cover back and lock it by rotating 90° clockwise.

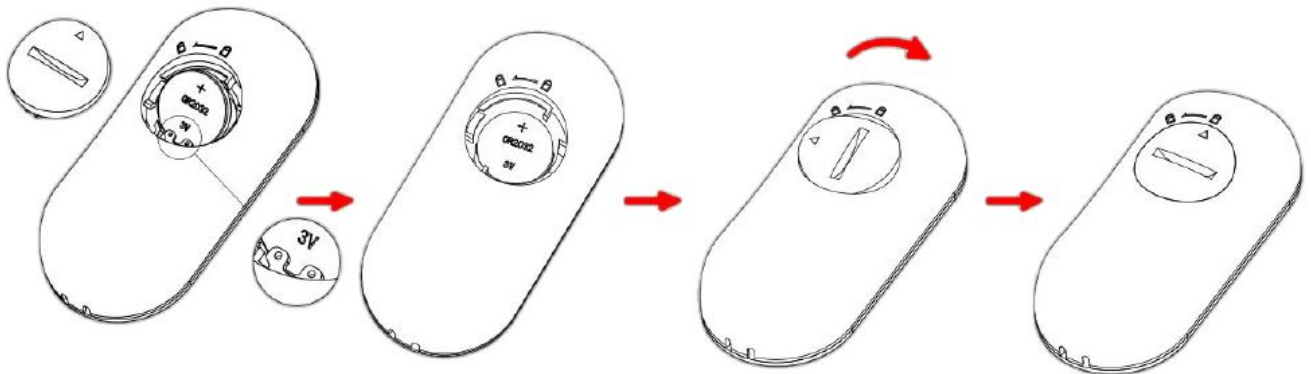

 3. Press any key on the remote control, and the indicator light of the remote control should light up.

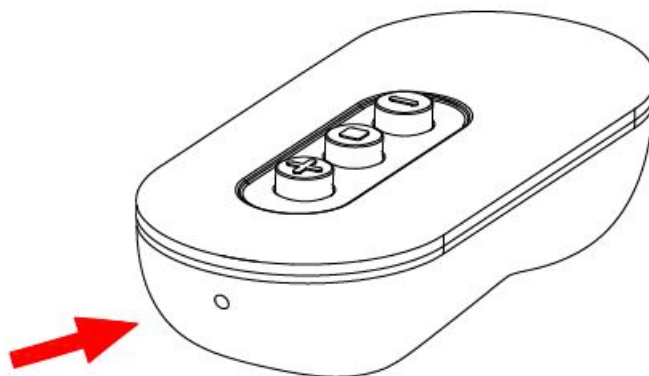

- **Power Off** is the start/stop key: when the power is on, press this key at any time to start the running of the walking machine; in the process of motion, also through this key to stop the running of the walking machine, and reset zero.
- **Plus Minus** for the speed plus or minus key: after starting for the speed adjustment, its adjustment amplitude of 0.1 km/time, when holding down +/- for more than 2 seconds automatically continue to increase or decrease fast by 0.1 km per time.

## Documents / Resources

