

BANNER R95C 8 Port Discrete Bimodal Modbus Hub User Guide

Contents

[1 R95C 8-Port Discrete Bimodal to Modbus® Hub](#)

[1.1 Quick Start Guide](#)

[1.2 Overview](#)

[1.3 Mechanical Installation](#)

[1.4 Status Indicators](#)

[1.5 Specifications](#)

[1.6 Banner Engineering Corp. Limited Warranty](#)

[1.6.1 FCC Part 15 Class B](#)

[1.6.2 Industry Canada](#)

[2 Documents / Resources](#)

[2.1 References](#)


[3 Related Posts](#)

R95C 8-Port Discrete Bimodal to Modbus® Hub



Quick Start Guide

This guide is designed to help you set up and install the R95C 8-Port Discrete Bimodal to Modbus® Hub. For complete information on programming, performance, troubleshooting, dimensions, and accessories, please refer to the Instruction Manual at www.bannerengineering.com. Search for p/n 231261 to view the Instruction Manual. Use of this document assumes familiarity with pertinent industry standards and practices.

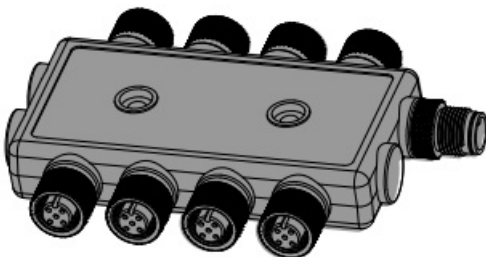

- Compact bimodal to Modbus® device converter that connects discrete inputs and outputs the value
- Enabled Delay Modes: ON/OFF Delay, ON/OFF One-shot, ON/OFF/Retriggerable Oneshot, ON/OFF Pulse-stretcher and Totalizer
- Measurement Metrics: Count, Events Per Minute (EPM), and Duration
- Discrete Mirroring: Discrete signals (In/Out) from all eight ports can be mirrored to any of the eight ports, Discrete Out, or the host white wire output
- Outputs a discrete value as an input to a defined Modbus register
- Discrete input/output can be independently configured as NPN or PNP
- Rugged over-molded design meets IP65, IP67, and IP68

- Connects directly to a sensor or anywhere in-line for ease of use
- R95C Modbus hubs are a quick, easy, and economical way to integrate non-Modbus devices into a Modbus system


Overview

The R95C-8B21-MQ hub connects two discrete channels to each of the eight unique ports, providing access to monitoring and configuring those ports via Modbus® registers. Host mirroring is available where a selected port input/output discrete signal can be routed to Pin 5 (male) on the PLC/ Host connection.

Mechanical Installation

Install the R95C 8-Port Hub to allow access for functional checks, maintenance, and service or replacement. Do not install the R95C 8-Port Hub in such a way to allow for intentional defeat.

All mounting hardware is supplied by the user. Fasteners must be of sufficient strength to guard against breakage. Use of permanent fasteners or locking hardware is recommended to prevent the loosening or displacement of the device. The mounting hole (4.5 mm) in the R95C 8-Port Hub accepts M4 (#8) hardware. See the figure below to help in determining the minimum screw length.

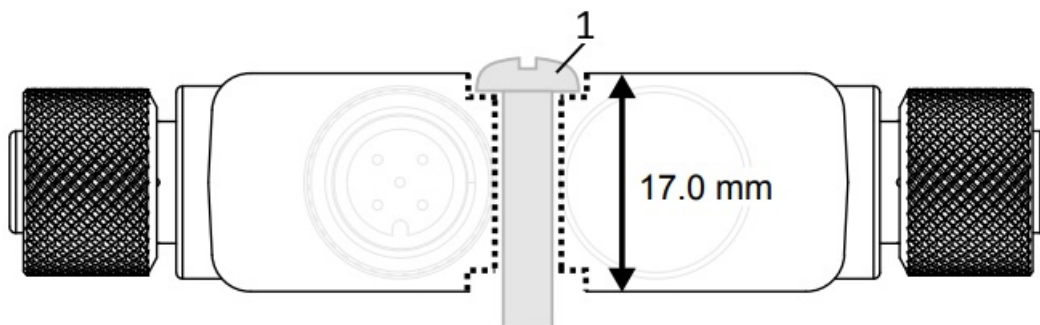

1. MOUNTING SCREW



CAUTION: Do not overtighten the R95C 8-Port Hub's mounting screw during installation. Overtightening can affect the performance of the R95C 8-Port Hub.

Status Indicators

The R95C 8-Port Discrete Bimodal to Modbus® Hub has matching amber LED indicators on both sides for each discrete device port to allow for installation needs and still provide adequate indication visibility. There is also an additional amber LED indicator on both sides of the converter, which is specific to Modbus communication.

Discrete Device Amber LEDs	
Indication	Status
Off	Discrete OUT is inactive
Solid Amber	Discrete OUT is active

Power Indicator Green LED	
Indication	Status
Off	Power off
Solid Green	Power on

Modbus Communication Amber LED	
Indication	Status
Off	Modbus communications are not present
Flashing Amber (4 Hz)	Modbus communications are active
Solid Amber for 2 Seconds, Then to Off	Modbus communications are lost after connection
Solid Amber for 2 Seconds, Then to Flashing Amber (4 Hz)	Modbus communications momentarily lost, but then communication was reestablished

Original Document
231260 Rev. A

28 March 2023



231260

Specifications

Supply Voltage

12 V DC to 30 V DC at 400 mA maximum

Power Pass-Through Current

500 mA per port maximum

Discrete Output Load Rating

100 mA

Supply Protection Circuitry

Protected against reverse polarity and transient voltages

Leakage Current Immunity

400 μ A

Indicators

Green: Power
Amber: Modbus communications
Amber: Discrete OUT status

Connections

- (8) Integral 4-pin M12 female quick disconnect
- (1) Integral 5-pin M12 male quick-disconnect connector

Construction

Coupling Material: Nickel-plated brass
Connector Body: PVC translucent black

Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitude, 5 minutes sweep, 30 minutes dwell)
Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Certifications



Banner Engineering BV Park Lane, Culliganlaan 2F bus 3, 1831 Diegem, BELGIUM
Turck Banner LTD Blenheim House, Blenheim Court, Wickford, Essex SS11 8YT, Great Britain

Environmental Rating

IP65, IP67, IP68
UL Type 1

Operating Conditions

Temperature: -40 °C to +70 °C (-40 °F to +158 °F) 90% at +70 °C maximum relative humidity (non-condensing)
Storage Temperature: -40 °C to +80 °C (-40 °F to +176 °F)

Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.
Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.
Supply wiring leads < 24 AWG shall not be spliced.
For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

FCC Part 15 Class B


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

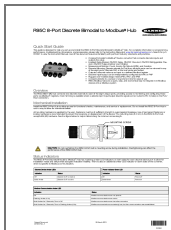

[BANNER R95C 8 Port Discrete Bimodal Modbus Hub](#) [pdf] User Guide
R95C, R95C 8 Port Discrete Bimodal Modbus Hub, 8 Port Discrete Bimodal Modbus Hub, Discrete Bimodal Modbus Hub, Bimodal Modbus Hub, Modbus Hub, Hub

References

- [Banner Engineering](#)
- [Patents](#)
- [User Manual](#)