



## BaoFeng Handheld Transceiver User Manual

[Home](#) » [BAOFENG](#) » BaoFeng Handheld Transceiver User Manual

 
### Contents [ [hide](#) ]

- [1 BaoFeng Handheld Transceiver User Manual](#)
- [2 Bao Feng BF-888S User Manual](#)
- [3 OPERATION](#)
- [4 CHARGING the LI-ION BATTERY PACK](#)
- [5 \\* VOICE PROMPT](#)
- [6 SPECIFICATIONS](#)
- [7 Read More About This Manual & Download PDF:](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## BaoFeng Handheld Transceiver User Manual



### Bao Feng BF-888S User Manual

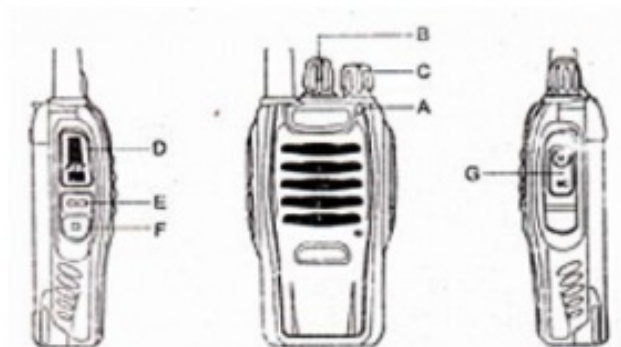

A LED Indicator Lights red during transmit, green when receiving a signal

B Channel Switch Rotate to select a channel. No. 16 is the scanning channel

C Power Switch / Volume Control Turn clockwise to switch ON the transceiver. Turn counterclockwise to switch OFF transceiver. Rotate to adjust volume.

D PTT (Push-to-Talk) Button Push button to transmit. Release to receive.

E MONI (Monitor) Button Press and Hold (Squelch OFF) to hear background noise; Release to return to normal operation.

F FUNC (Function Button) Button Press to activate LED torch function.

G Speaker Microphone / Programming Cable Jack

### OPERATION

**Switching Power ON/OFF** Turn the Power switch/Volume control (A) clockwise. You will hear a beep and speech indicating the transceiver is ON.

#### Adjusting the Volume

Hold Monitor button (E) down to listen to audio level while rotating the Power switch/Volume control (A). Rotate Volume Control to increase / decrease the volume.

## **Selecting the Channel**

Turn the Channel Switch (B) to the desired channel. No. 16 is the Scanning Channel.

## **Transmitting**

To transmit, Press and Hold PTT (D) and speak into the microphone in a normal tone of voice.

The LED indicator lights continuously red when transmitting.

For maximum sound clarity at the receiving station, hold the transceiver 2 to 3 inches from mouth and talk in a normal tone of voice.

**Note:** Yelling does not make your signal louder.

## **CHARGING the LI-ION BATTERY PACK**

Charge the battery pack before using it. The new or stored (more than 2 months) battery pack cannot reach full capacity after the first charge. After 2 or 3 charges and discharges, it will reach full charge

1. Plug adapter into electrical socket.
2. Insert transceiver or battery into the charging tray.
3. Ensure that the battery contacts connect with the drop-in charging tray. While charging is taking place, the LED will glow Red.
4. After 3 hours charging, the LED indicator will light Green.
5. Remove battery or transceiver from the charging tray.

Asterisk [ \* ] designates function changed via software

## **SQUELCH LEVEL**

The purpose of the Squelch is to mute the speaker when no signals are present. With the squelch correctly set, you will only hear sound when a signal is present

### **\* TIME-OUT TIMER (TOT)**

The TOT limits the length of a users transmission. The purpose of the TOT is to prevent transmitting for a long period of time, causing thermal damage to the radio.

And alert will sound when the limit for that transmission has been reached.

### **\* SCANNING**

Scanning is used for hands off monitoring of your favorite frequencies. When the transceiver options are set to SCAN (via software), setting the channel selector to channel 16 directs the radio to scan the selected channels from 1-15.

1. Transceiver stops scanning when a signal is detected and continues when signal is gone.
2. If there are less than 2 channels, it cannot scan. (Go figure)
3. On channel 16, Press and Hold the PTT and MONI buttons while switching ON the transceiver to turn the Scanning ON or OFF.
4. If FM radio function is activated, Radio cannot scan.

### **\* VOICE PROMPT**

1. VP can be set ON/OFF via software.
2. On channel 10, Press and Hold the PTT and MONI buttons while switching ON the transceiver to also Activate or Deactivate Voice Prompt.

3. On channel 15, Press and Hold the PTT and MONI buttons while switching ON the transceiver to change Voice Prompt Language (CHI / ENG)
4. Any channel 1-16, Press and Hold MONI only while switching ON the transceiver will Deactivate Voice Prompt for that session only.

#### **\* VOX (Voice Operated Transmit)**

VOX eliminates the need for using the PTT key to transmit. The transmitter is keyed when the VOX circuit senses you are speaking into the microphone.

1. When operating the VOX function, set the VOX Gain level to recognize the desired sound level.
2. If level is too sensitive, transceiver will key with noise in the background.
3. If level is not sensitive enough, it will not pick up your voice. Set level for smooth transmission.
4. On channel 1-5, Press and Hold the PTT and MONI buttons while switching ON the transceiver to turn the VOX ON or OFF.

#### **\* EMERGENCY ALARM**

On channel 11, Press and Hold the PTT and MONI buttons while switching ON the transceiver to turn the Alarm Function ON or OFF.

This is a function for your receiver only. You will Not transmit the alarm.

#### **BATTERY SAVER**

Reduces the battery power used when not receiving a signal. Battery saver turns on automatically 10 seconds after no signal is received and no operation is being performed.

#### **BATTERY LOW ALERT**

Reminds you that battery needs recharging. Alert tone will sound and Red LED will blink.

#### **MONITOR**

When no signal is being received, Press and Hold the MONI. This is helpful for adjusting volume level and receiving weak signals.

#### **\* BUSY CHANNEL LOCK-OUT (BCL)**

BCL prevents you from transmitting on a channel if a signal is present. Pressing the PTT switch while a channel is in use will emit an alert tone and inhibit the transmitter.

#### **\* BEEP TONE**

If turned on, radio will give short tone to indicate that there is nothing programmed for that channel.

#### **\* CTCSS / DCS**

CTCSS (Continuous Tone Coded Squelch System) or (Digital Coded Squelch). CTCSS / DCS Description

You may sometimes want to hear calls only from specific persons or groups. This option allows you to ignore unwanted calls from others on the same frequency. These tones are sub-audible (cannot be heard) and are selectable via software.

**Note:** These tones do NOT cause your conversation to be private or scrambled. It only relieves you from listening to unwanted conversations.

#### **SUMMARY of FUNCTION ACTIVATION**

Ch 1-5, Press / Hold both PTT and MONI, and Power ON VOX – ON / OFF.  
Ch 10, Press / Hold both PTT and MONI, and Power ON

Voice Prompt – ON / OFF

Ch 11, Press / Hold both PTT and MONI, and Power ON

Alarm Function ON / OFF (if selected via SW)

Ch 15, Press / Hold both PTT and MONI, and Power ON

Change Language (CHI / ENG)

Ch 16, Press / Hold both PTT and MONI, and Power ON

Scan ON / OFF (if option set via software)

Ch 1-16, Press / Hold MONI only and Power ON

Deactivates Voice Prompt for that session only.

SPECIFICATIONS	
Frequency Range	400 – 470MHz
RF Rated Power	<= 5W
Channel Capacity	16
Operating Voltage	3.7V
Dimensions	115mm x 60mm x 33mm 4.53" x 2.36" x 1.30"
Weight	150g (5.3oz)

TROUBLESHOOTING GUIDE	
No Power	Check Battery Installation and/or replace/charge battery.
Can't communicate with other members	Verify that the frequency and CTCSS tones are the same for all members. If all checks out okay, make sure you are all within rang
Hearing other stations	Change your CTCSS for that channel. Change to another channel.
I can clearly hear members of my group, but my voice is	Check if microphone is blocked. If so, return radio to dealer for maintenance. Sometimes your frequency is the same as the frequency of other groups.

intermittent.	
Can't turn on the radio, or it turns on and quickly shuts down	Check the battery contacts on the radio. If they are broken or twisted, return your radio to an authorized dealer for maintenance.

***Read More About This Manual & Download PDF:***

## Documents / Resources

<p>BaoFeng BF-888S</p> <p>User Manual</p>	<p><a href="#">Baofeng BaoFeng Handheld Transceiver</a> [pdf] User Manual  Baofeng Handheld Transceiver, BF-888S</p>
---	--

## References

- [M CTCSS DCS - Miklor](#)