



Baolira C20Plus Bluetooth Speaker with Microphone Instruction Manual

[Home](#) » [Baolira](#) » Baolira C20Plus Bluetooth Speaker with Microphone Instruction Manual 

Contents

- 1 Baolira C20Plus Bluetooth Speaker with Microphone
- 2 PRODUCT LIST
- 3 SPECIFICATION
- 4 DEVICE FUNCTION
- 5 PAIRING CONNECTION
- 6 Documents / Resources
 - 6.1 References

Baolira

Baolira C20Plus Bluetooth Speaker with Microphone



WARNING

- This device does not support fast charging plugs and fast charging cables, if the current is too large, the device will be damaged.
- This product's built-in rechargeable battery isn't replaceable, please don't throw it away or put it on fire.
- Please keep the product away from high temperature and heat sources, and also avoid sun exposure.
- Please keep the product away from rain, spray or other liquids.
- If the product is overheated, damaged or dropped into water, please stop using it.
- Don't disassemble and repair the product by yourself, should contact the authorized maintenance manufacturer.
- Don't insert any metal objects when using the product, to avoid short circuits.
- Please use the product according to local standards and regulations.

PRODUCT LIST

 
1. Mini Speaker X1
2. Microphone X1
3. TYPE-C Charging Cable X1
4. User Manual X1



SPECIFICATION

Model Name	C20 Plus
Bluetooth	5.0
Frequency	60Hz-20KHz
Receiving Distance	≥10meters
Trumpet	52mm 4Ω 5W
Charging Voltage	DC 5V 1A
Speaker Battery	3.7V 1000mAh
Mic Battery	3.7V 500mAh
Speaker Charging Time	2-3H
Speaker Playtime	2-4H
Mic Charging Time	2-3H
Mic Playtime	2-4H

DEVICE FUNCTION

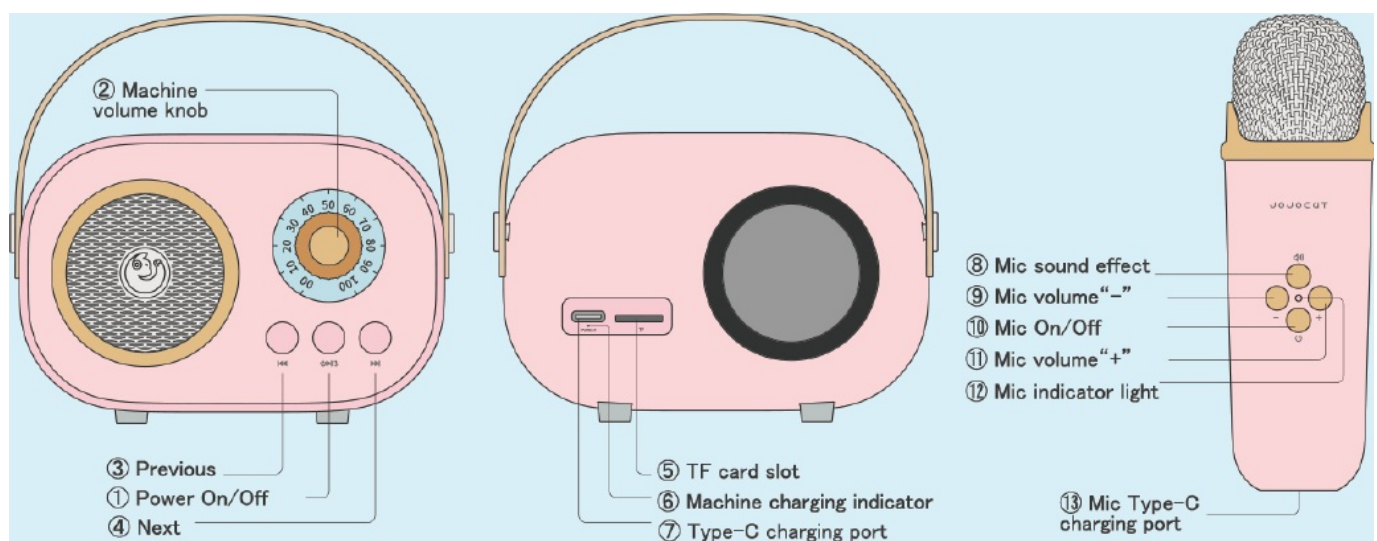


1. "Speaker Power On/Off", long press for 3s to turn on/off the speaker. Automatically enter the "BT mode" after powering on, and double-click to switch the play mode, they are "BT mode", "FM mode" and "TF card mode". Click to pause/play music while playing (Note: Since the fm mode is an auxiliary function, an external charging cable is required to act as an antenna to receive the signal. Signal strength varies by region.)
2. "Machine volume knob", turn left to decrease the volume, otherwise will increase.
3. "Previous", click to switch to the previous song.
4. "Next", click to switch to the next song.
5. "TF card slot", insert the TF card slot to switch the TF card playback mode.
6. "Machine charging indicator", the red light is always on when charging, and the light is off when fully charged.
7. "Type-C charging port" DC 5V to charge the Karaoke Machine.
8. "Mic sound effect" click to switch six sound modes, they are "KTV Mode", "Original Mode", "Male Mode",


“Female Mode”, “Baby Sound Mode”, “Magic Sound Mode”

9. “Mic”-“” , click to reduce the microphone volume.
10. “Mic on/off “button, long press for 3s to turn on/off the microphone; After the microphone is turned on, it will automatically connect to the speaker, and the ‘MIC LED light’ will stay blue.
11. “Mic” +”” ‘click to increase the volume of the microphone. “Mic indicator light” , which acts as a prompt for the operation of the microphone.
12. “Mic Type-C charging port”, the red light is always on when charging, and the light is off when fully charged.

PAIRING CONNECTION

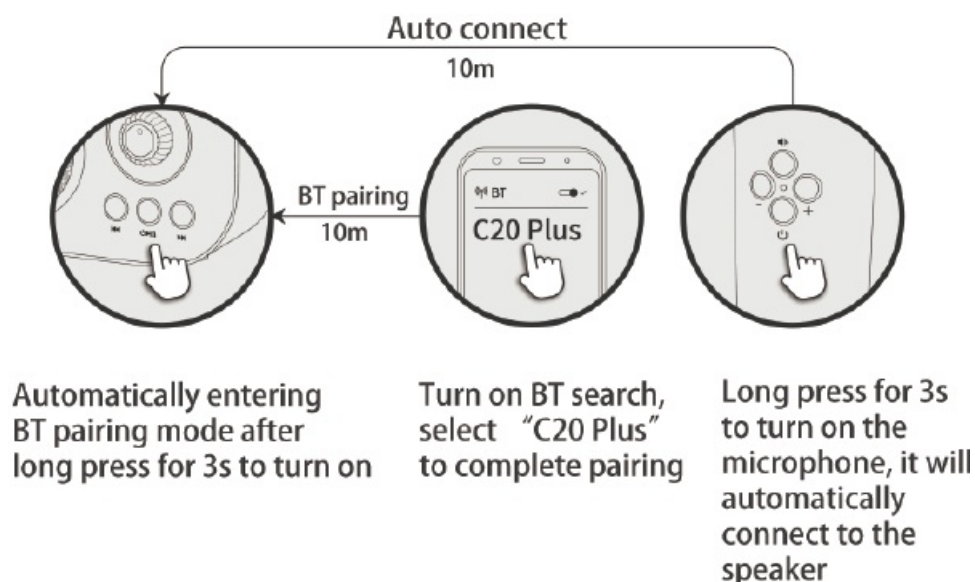

Documents / Resources

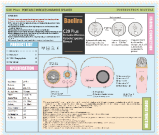	Baolira C20Plus Bluetooth Speaker with Microphone [pdf] Instruction Manual C20Plus Bluetooth Speaker with Microphone, C20Plus, Bluetooth Speaker with Microphone, S peaker with Microphone, Microphone
---	--

References

- [User Manual](#)