



Baolong TMSS6D4 TPMS Tire Pressure Monitoring System User Manual

[Home](#) » [Baolong](#) » Baolong TMSS6D4 TPMS Tire Pressure Monitoring System User Manual 

Contents

- 1 Baolong TMSS6D4 TPMS Tire Pressure Monitoring System
- 2 Specifications
- 3 Dismounting of Transmitter
- 4 PART FOUR WARRANTY
- 5 FCC
- 6 Documents / Resources
 - 6.1 References



Baolong TMSS6D4 TPMS Tire Pressure Monitoring System



Specifications

- **Model:** TMSS6D4
- **Mounting:** Snap-in sensor
- **Compatible with:** Baolong Huf TPMS
- **Valve stem material:** Plastic or aluminum caps, aluminum valves, and nickel-plated valve cores
- **Torque for Self-lock Screw:** 5 Nm (44-inch pounds)
- **Compliance:** FCC and IC authentication, EU Conformity (CE and RoHS directives)

Thank you for choosing our TPMS. This guide instructs the technician how to properly mount and dismount a Baolong Huf TPMS snap-in sensor.

Introduction of TMSS6D4

TMSS6D4 is the transmitting module in TPMS. Its working frequency is 433.92MHz; the Receiver's Low frequency: 125KHz; the supply is battery; the Radio frequency uses the FSK modulation and Manchester encoding mode; the Antenna type: is Monopole antenna, antenna Gain: -3.7dB~-3.4dB; cable loss 3.12dB. The communication mode between WARDKS and the receiving module is RF wireless communication. The module detects pressure and temperature inner the tire periodically and sends this information via the RF output circuit to the receiving module. One can manually detect data inner tires by LF wake-up tools. Install it on the rim together with the cycle valve.


PART ONE MOUNTING AND DISMOUNTING OF THE TRANSMITTER

Mounting of Transmitter


Identify Transmitter

Check whether the prepared sensor is the same as the image below.


Note: Only plastic or aluminum caps, aluminum valves and nickel-plated valve cores can be used when replaced

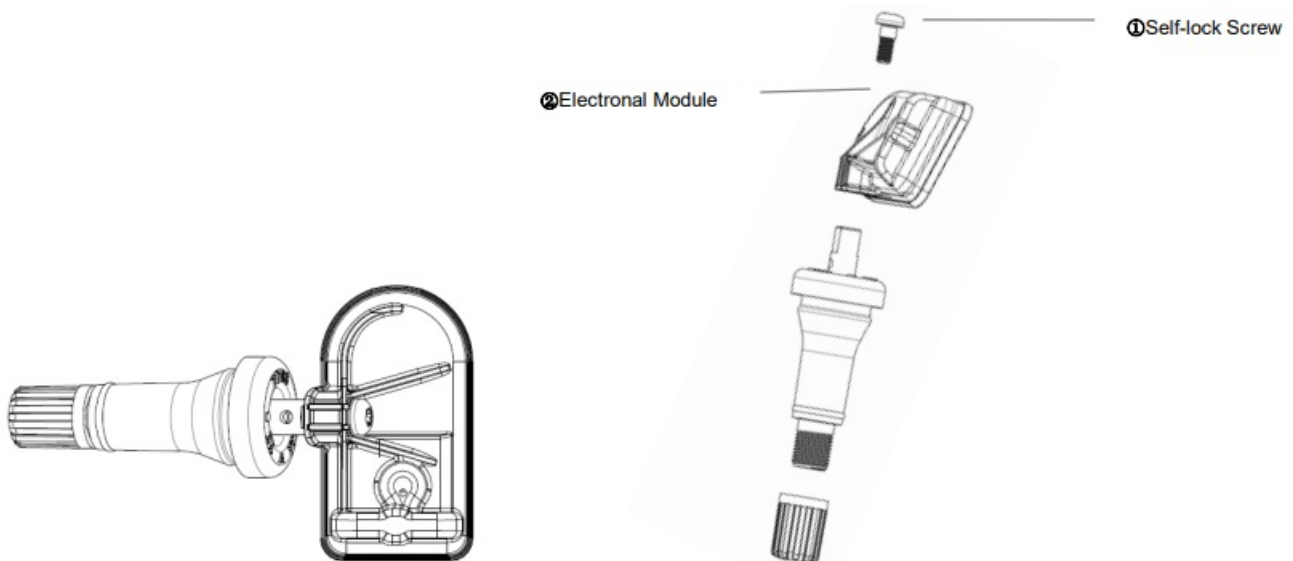


Before the transmitter is installed, the rim around the hole must be cleaned with a cloth.

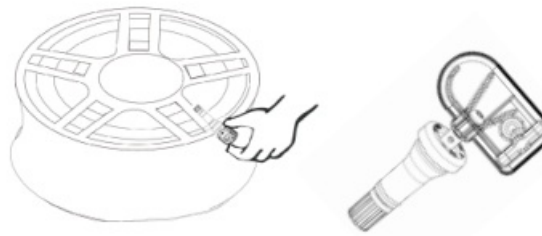


Remove the Self-lock Screw①, and insert the valve stem through the rim hole from inside.

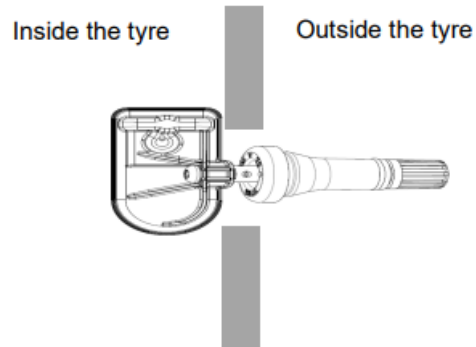


Place the Self-lock Screw① on the valve stem, and tighten with 5 Nm (44-inch pounds) torque.

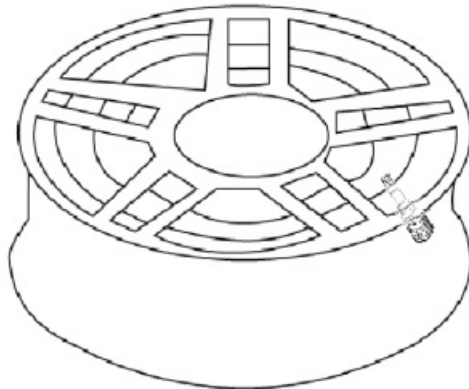

Lock the rim on the tire changer. (If the mounting head of the tire changer is positioned at noon, then the valve should be at the 7 o'clock position.) Apply lubricant on both the tire bead and rim. Mount the lower tire bead on the rim. Ensure that the tire bead does not touch the electronic module during mounting.

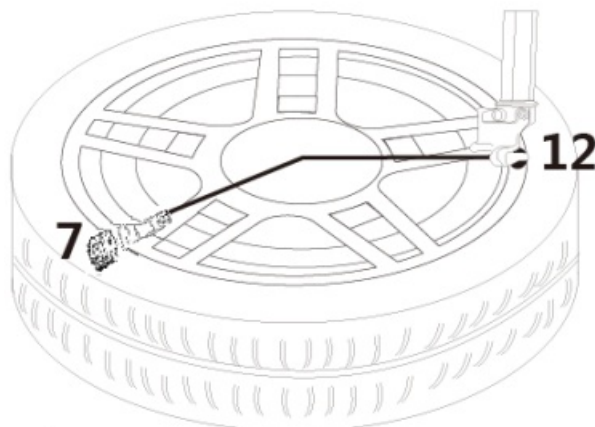

Mount the upper tyre bead the same way. (If the mounting head of the tire changer is positioned at midnight, then the valve should be at the 5 o'clock position.) Inflate the tire to nominal pressure.

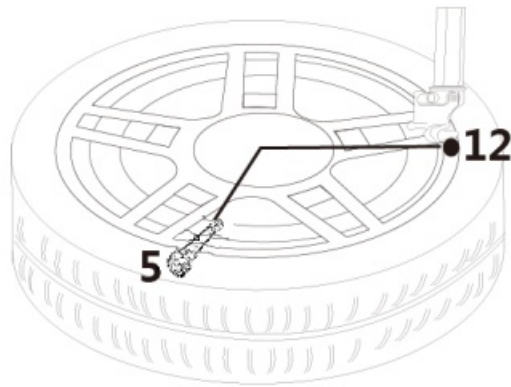

Apply soapsuds on the valve tip. If no leakage is found, put on the valve cap⁶. If unsuccessful, try again.




Dynamically balance the wheel before it is placed back on the vehicle.




Dismounting of Transmitter


Deflate the tire and remove the wheel weights from the rim. Push the tire bead away from the rim. Make sure to always set the bead breaker at least 90 degrees from the valve stem to avoid damaging the electronic module.

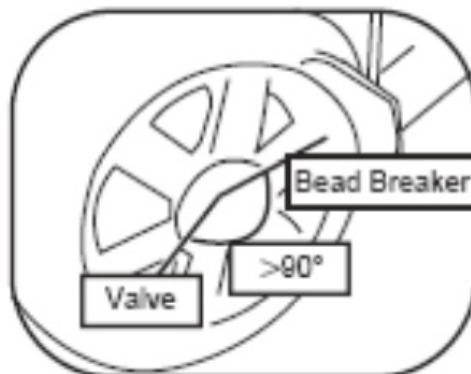

Firmly fix the wheel on the turntable clamps. (If the mounting head of the tyre changer is positioned at noon, then the valves stem should be at the 11 o'clock position.) Apply lubricant to both tyre bead and rim, and then remove the upper tyre bead.

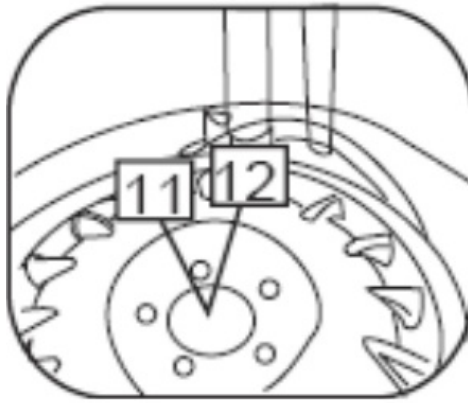

Use the same procedure to dismount the lower tire bead. (If the mounting head of the tyre changer is at the noon position, then the valve stem should also be at the 12 o'clock position.)

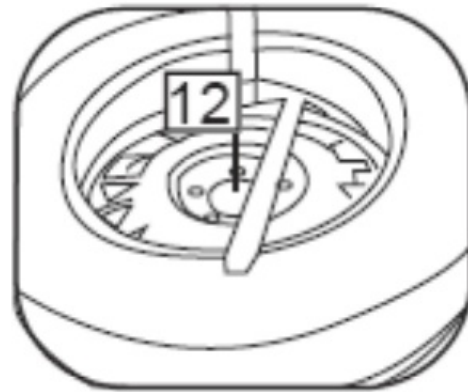

Final inspection: Visually inspect the rim, valve stem, and electronic module to ensure no damage has occurred.

PART TWO FCC's Authentication Announcements

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PART THREE IC's Authentication Announcements

CAN ICES-3(B)/NMB-3(B)

PART FOUR WARRANTY

This warranty covers substantial manufacturer defects in workmanship and materials. It does not cover any unit that is damaged beyond normal use, not properly installed, subject to chemical contact, or other acts not sanctioned by the Owner's Manual.

All components are covered for one year following the date of purchase. If the warranty period specified in local law exceeds the period provided by Baolong Huf, the former will supersede the latter.

The warranty will be honored by any authorized Baolong Huf dealer. The owner is required to provide a date of proof of purchase. The authorized dealer will determine if there is a warranty condition associated with materials and/or manufacturing workmanship. If a warranty condition exists, the component will be replaced free of charge and shipping prepaid. The owner is responsible for any labor and installation charges.

The warranty does not include any further obligation whatsoever, including but not limited to the actual installation of the replacement unit on the customer's vehicle.

All other warranties, expressed or implied, are disclaimed. All collateral agreements, that purport to modify this limited warranty, are of no effect. The absolute limit of liability is the purchase price of the unit.

EU Conformity Statement

This product and – if applicable – the supplied accessories are marked with “CE” and comply therefore with the applicable harmonized European standards listed under the RED Directive 2014/53/EU, the RoHS Directive 2011/65/EU.

EU Conformity Statement

This product is marked with “CE” and complies therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU.

RF Exposure Information

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

FCC

Please pay attention that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

IC Statement

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Baolong Huf Shanghai Electronics Co., Ltd. is not liable for any direct, consequential, indirect or punitive damages of any kind.

Hereby, Baolong Huf Shanghai Electronics Co., Ltd. declares that the radio equipment type TMSS6D4 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address:

<https://www.intellisens.com/downloads>

- **Frequency band:** 433.92 MHz
- **Maximum Transmit Power:** < 10 mW

Manufacturer:

Baolong Huf Shanghai Electronics Co., Ltd., 1st Floor, Building 5, 5500 Shenzhuan Rd, Songjiang Shanghai, China

Importer


- Huf Baolong Electronics Bretten GmbH
- Gewerbestraße 40
- D-75015 Bretten

NOTE: Baolong Huf Shanghai Electronics Co., Ltd. reserves the right to change the contents of this manual at any time without notice. The information contained in this manual is proprietary and must not be reproduced without prior written consent from Baolong Huf Shanghai Electronics Co., Ltd.

CONTACT

- **Company:** Baolong Huf Shanghai Electronics Co., Ltd.
 - **Address:** 1st Floor, Building 5, 5500 Shenzhuan Rd, Songjiang, Shanghai
 - **TEL:** +86-21-31273333
 - **Fax:** +86-21-31190319
 - **E-mail:** sbic@baolong.biz
 - **Web:** www.baolong.biz
-

Documents / Resources

	<p>Baolong TMSS6D4 TPMS Tire Pressure Monitoring System [pdf] User Manual TMSS6D4 TPMS Tire Pressure Monitoring System, TMSS6D4, TPMS Tire Pressure Monitoring System, Pressure Monitoring System, Monitoring System</p>
---	---

References

- [!\[\]\(9063468a59e93f469b71000ac5796bc3_img.jpg\) _____](#)
- [!\[\]\(1db6320223680ab4bd04b0d269ab6c8a_img.jpg\) HOME](#)
- [!\[\]\(cd69309a3e813d8c682e56d54a0f4a01_img.jpg\) Wenn Verantwortung zur Hauptsache wird! WIR sind BH SENS: BH SENS](#)
- [User Manual](#)