



BAPI 33128 Fixed Range Pressure Sensor FRP Instruction Manual

[Home](#) » [BAPI](#) » BAPI 33128 Fixed Range Pressure Sensor FRP Instruction Manual 



Zone Pressure Sensor, Fixed Range (FRP)
Installation and Operation Instructions
33128_ins_FRP.pdf
rev. 02/01/2023



Contents

- 1 Product Identification and Overview
- 2 Mounting
- 3 Mounting Template
- 4 Wiring Termination
- 5 Auto-Zero Procedure
- 6 Multicolor LED Status Indicator
- 7 Diagnostics
- 8 Specifications
- 9 Documents / Resources
 - 9.1 References

Product Identification and Overview

BAPI's Fixed Range Pressure Sensor (FRP) is an economical solution for any cost-conscious application. The FRP features one factory-set pressure range and one factory-set output range. A single button is used to auto-zero the unit.

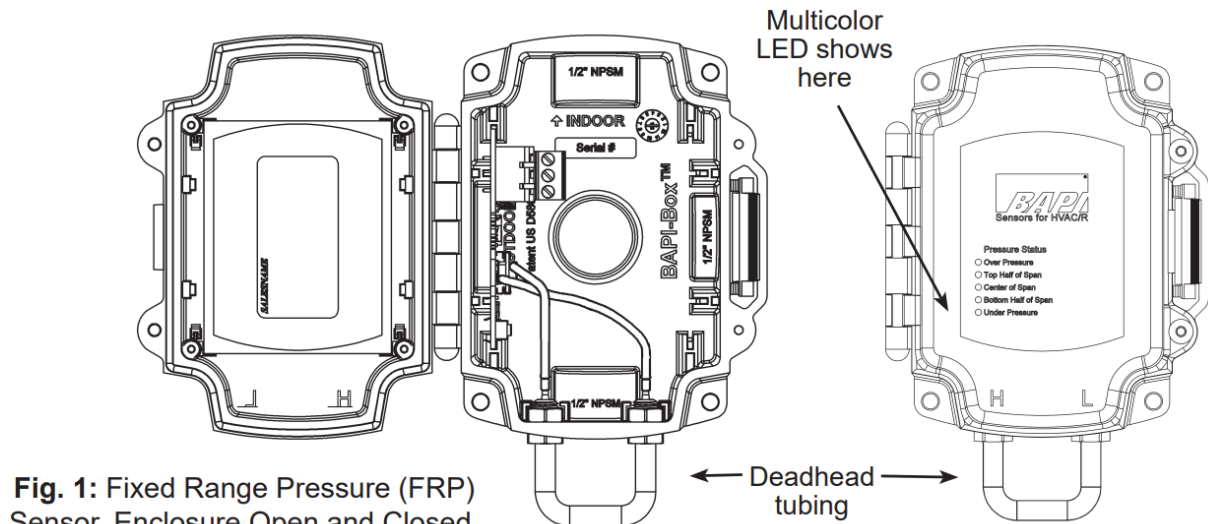


Fig. 1: Fixed Range Pressure (FRP) Sensor, Enclosure Open and Closed.


Mounting

Attach the unit to its mounting surface with the four self-tapping #10×3/4" sheet metal screws through the holes in the mounting feet. The preferred mounting orientation is with the pressure ports facing down to prevent condensation from entering the pressure transducer. Do not mount to a vibrating surface as vibration may cause issues with the accuracy of the sensing element. See page 2 for an actual size mounting template for the unit.

The two cover latch screws must be installed to achieve an IP66 rating.

After Auto-Zeroing, remove the deadhead tubing and push the system tubing onto the port nipple without creating any kinks or holes.

If a hole must be cut into the plastic plugs in the 1/2" NPSM threaded ports of the BAPI-Box enclosure, it's recommended to use BAPI's Clean-Cut Tool. Not using this tool could cause damage to the electronics of the sensor. See the Accessories section of BAPI's website or product catalog for more info on the Clean-Cut Tool.

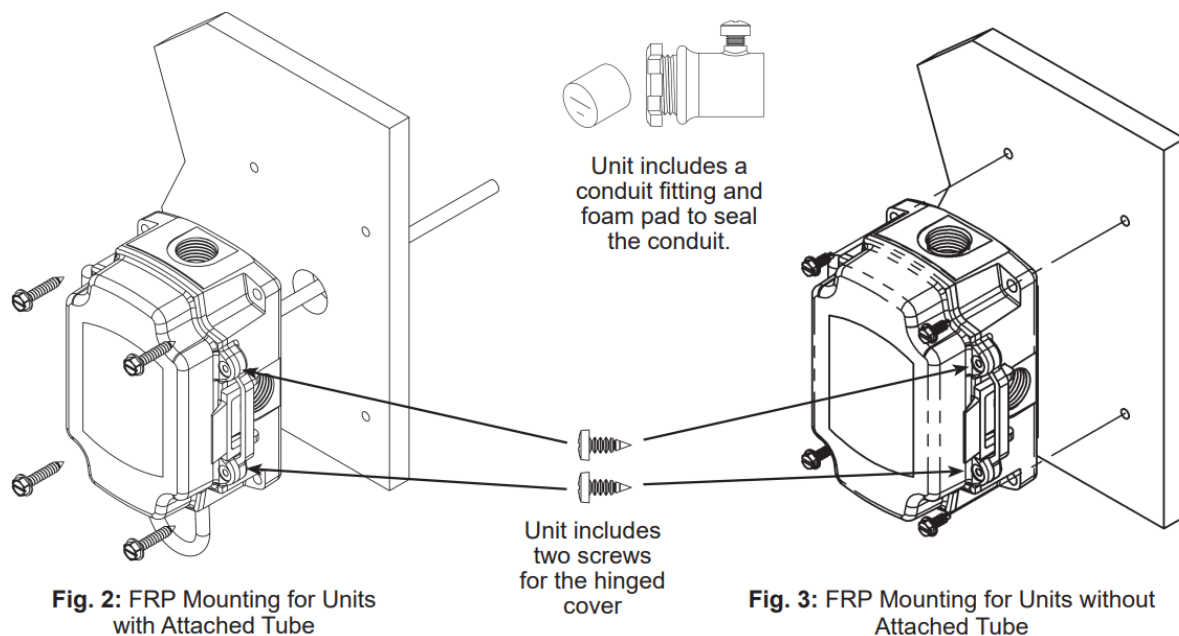

Mounting Template

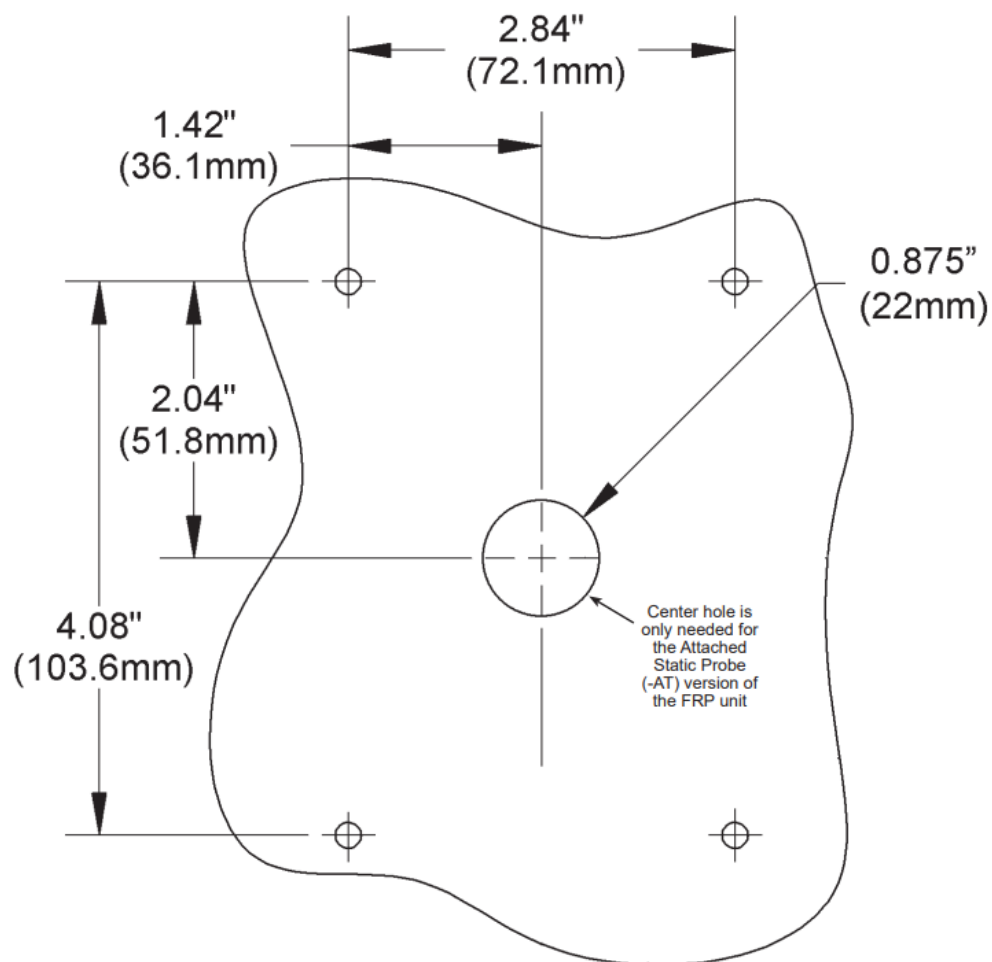


Fig. 4:
Mounting Hole Template - shown actual size

(BAPI recommends creating 5/32" (4mm) pilot holes for the #10×3/4" self-tapping mounting screws.)

Wiring Termination



BAPI recommends wiring the product with power disconnected. Proper supply voltage, polarity and wiring connections are important to a successful installation. Not observing these recommendations may damage the product and void the warranty

NOTE: The connectors use a rising block screw terminal to hold the wires. It is possible for the block to be in a partially up position allowing the wire to be inserted under the block. Be sure that the connector screws are turned fully counterclockwise before inserting the wire. Lightly tug on each wire after tightening to verify proper termination.

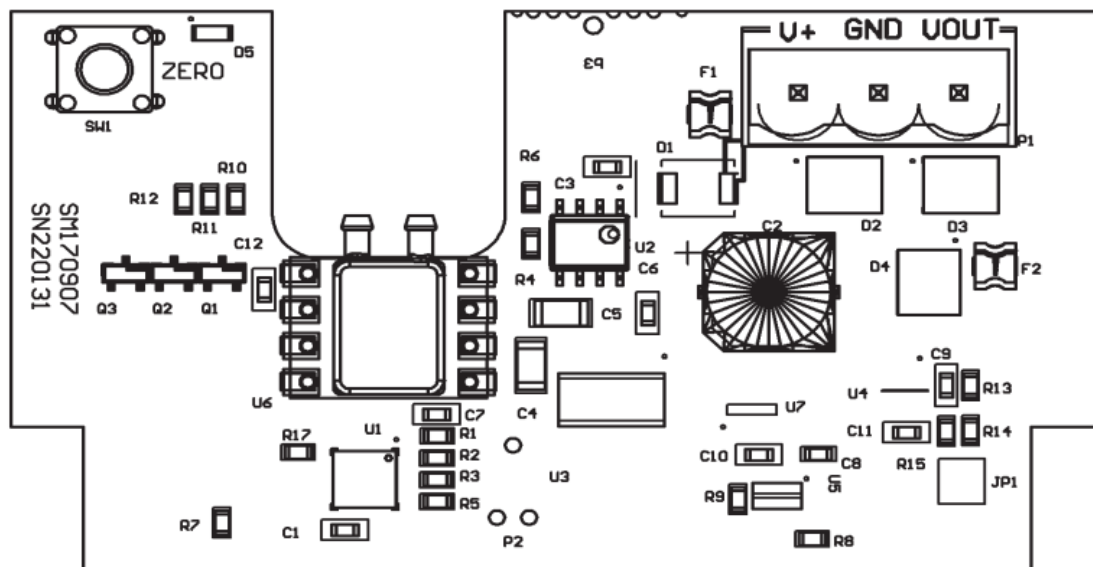


Fig. 5: Circuit Board (Wiring plug removed for clarity)

| Terminal | Function |
|----------|--|
| V+ | Power, referenced to GND See the “Specifications” section on the next page for Power specs |
| GND | To Controller Ground [GND or Common] |
| VOOUT | Voltage Output, Pressure Signal, referenced to GND |

Auto-Zero Procedure

The FRP must be mounted at its location prior to auto-zeroing. Auto-Zeroing must be done after the initial setup, changing mounting orientation or changing any settings. For most applications, perform an auto-zero whenever it appears that the sensor has drifted. For critical applications, the unit should be zeroed 2-3 times a year.

STANDARD UNITS

1. Power must be on.
2. Detach system tubing and deadhead ports using the supplied tubing or other short length of tubing. Do not kink tubing.
3. Press and hold the Auto-Zero button for 1-2 seconds. The Status LED will stop flashing when completed.
4. Remove deadhead tubing and reattach system tubing.

UNITS WITH ATTACHED TUBE (See Fig. 6)

1. Power must be on.

2. Disconnect the system tubing from the Low Pressure brass fitting and attach the supplied 6" deadhead tubing to the brass fitting.
3. Disconnect the short clear tubing from the 90° black Attached Tube fitting with your fingers. A pliers may cut the tubing.
4. Connect the clear tubing to the supplied straight black fitting on the 6" tubing. Do not kink the tubing.
5. Press and hold the Auto-Zero button for 1-2 seconds. The Status LED will stop flashing when completed.
6. Disconnect the deadhead tubing and reattach the clear tubing and system tubing. Confirm that the clear tubing is pressed all of the way onto the fitting and that it is not kinked.

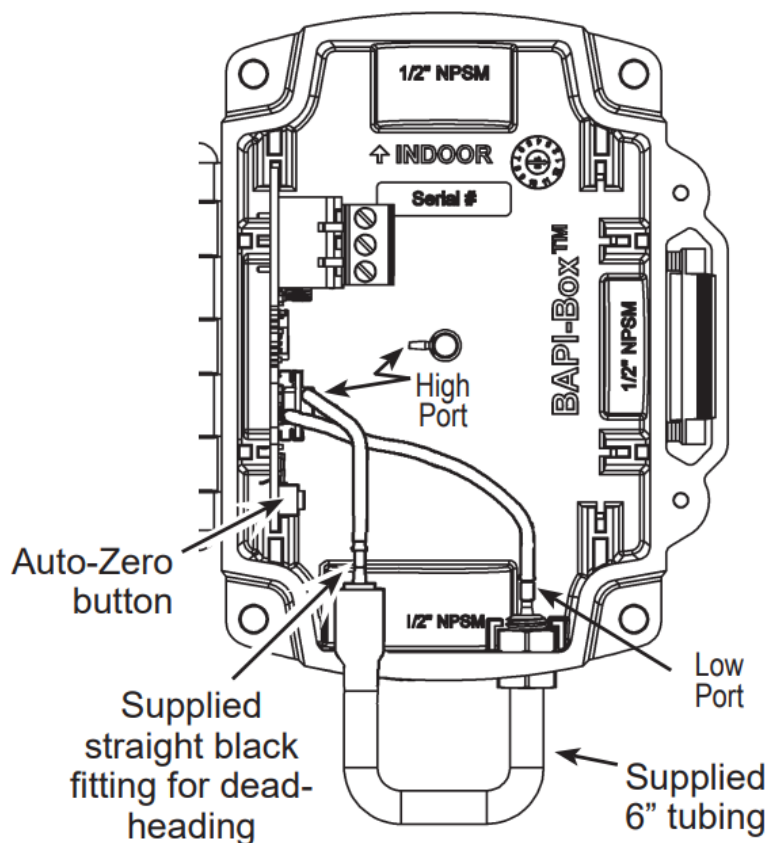


Fig. 6: Deadheading ports on units with attached tube (-AT)

Multicolor LED Status Indicator

The LED is on whenever power is applied. The LED color varies according to the following list:

- **Red** = Over pressure
- **Green** = Top half of span
- **Amber** = Center of span
- **Blue** = Bottom half of span
- **Purple** = Under pressure.
-

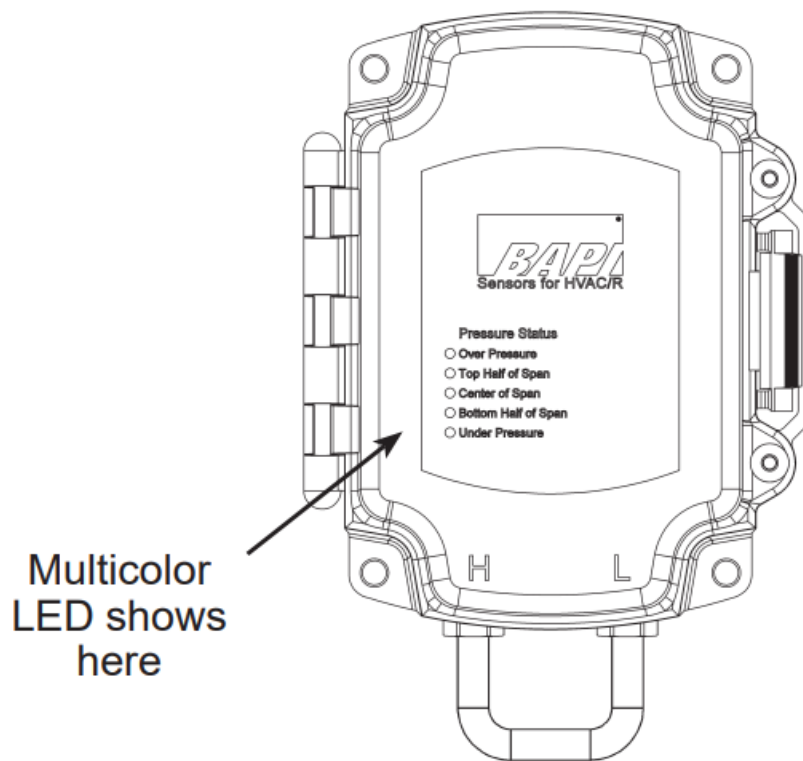


Fig. 7: LED Status Indicator

Diagnostics

Possible Problem

LED does not light Output not tracking pressure properly

Possible Solutions

Check power connections for proper power Remove pressure from ports and perform auto-zero procedure

Specifications

Power:

For All Outputs and Ranges: 18 to 28 VAC @ 1 VA Max POWER FOR STANDARD PRESSURE RANGES (Ranges FR51-55, FR61-65, FR56-60, FR66-70)

For 0 to 5 VDC Output Units:

10 to 32 VDC @ 12 mA max (10 to 24 VDC recommended)

For 0 to 10 VDC Output Units:

18 to 32 VDC @ 12 mA max (18 to 24 VDC recommended) POWER FOR LOW PRESSURE RANGES (RANGES FR91, FR73-75, FR82-85, FR96, FR78-80, FR87-90)

0 to 5 VDC Output Units:

9 to 32 VDC @ 10 mA max (9 to 24 VDC recommended)

0 to 10 VDC Output Units:

13 to 32 VDC @ 10mA max (13 to 24 VDC recommended)

Accuracy at 72°F:

±1.0% FS of input range for units ≥ 0.25" WC (62.5 Pa) ±0.5% FS of input range for units < 0.25" WC (62.5 Pa)

Stability: ±0.25% F.S. per year

Storage Temperature: -40 to 185°F (-40 to 85°C)

Environmental Operating Range: -4 to 140°F (-20 to 60°C)

Humidity: 0 to 95% RH, non-condensing

Wiring: 3 wires (AC or DC powered, Voltage out)

Overpressure: Proof 300" WC (74 kPa)

Port Size: 1/4" barb

Enclosure Material: UV-resistant Polycarb., UL94 V-0

Enclosure Rating: IP66, NEMA 4

Media: Clean, dry, non-corrosive gases

Pressure & Output Ranges: Specified at time of order

Status Indicator: 5-color LED

Agency: RoHS

Ranges: Imperial or metric units, specified at time of order

Specifications subject to change without notice.

Building Automation Products, Inc., 750
North Royal Avenue, Gays Mills, WI 54631 USA


Tel: +1-608-735-4800

Fax: +1-608-735-4804

E-mail: sales@bapihvac.com

Web: www.bapihvac.com

Documents / Resources

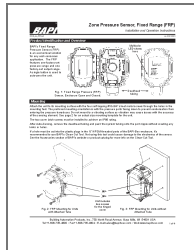

[BAPI 33128 Fixed Range Pressure Sensor FRP](#) [pdf] Instruction Manual

33128 Fixed Range Pressure Sensor FRP, 33128, Fixed Range Pressure Sensor FRP, Range P
ressure Sensor FRP, Pressure Sensor FRP, Sensor FRP

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.