




Barracuda SC2.5 Secure Connector User Guide


[Home](#) » [Barracuda](#) » Barracuda SC2.5 Secure Connector User Guide 

Contents

- [1 Barracuda SC2.5 Secure Connector](#)
- [2 Technical Support](#)
- [3 Barracuda Community](#)
- [4 Documentation](#)
- [5 Before You Begin](#)
- [6 Power](#)
- [7 Connect](#)
- [8 Provision](#)
- [9 Connect WAN and LAN](#)
- [10 Electrical Safety](#)
- [11 General Safety](#)
- [12 Electrostatic Discharge](#)
- [Precautions](#)
- [13 FCC Statement](#)
- [14 United States Patents](#)
- [15 Software License](#)
- [16 Warranty](#)
- [17 Export Compliance](#)
- [18 Documents / Resources](#)
 - [18.1 References](#)
- [19 Related Posts](#)

Barracuda®

Barracuda SC2.5 Secure Connector

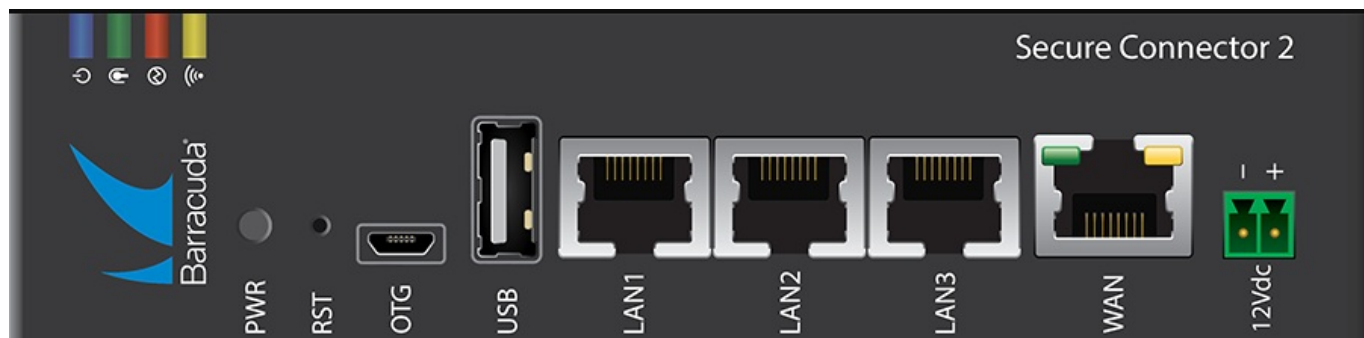

Dear Valued Customer

Thank you for choosing a Barracuda Secure Connector appliance. Please contact technical support if you have any questions or need help. Barracuda's on a mission to protect and support our customers for life, so we're here for you 24x7. Our team is driven by five core values: think customer, drive innovation, take ownership, deliver outcomes, and succeed together. More than 200,000 customers around the world trust Barracuda to safeguard their employees, data, and applications from a wide range of threats with easy, comprehensive, and affordable solutions for email protection, application and cloud security, network security, and data protection. Let us know what we can do to help secure your journey.

Sincerely,

- Hatem Naguib
- President & CEO

Technical Support

Barracuda's award-winning technical support is available 24x7 worldwide. You'll always be connected with a person and not an automated system. If you have technical problems or questions about your Barracuda product, please do not hesitate to reach out.

- Open a Technical Support case online: barracuda.com/support
- Call Technical Support: barracuda.com/support/phone
- To cover your evolving business needs, Barracuda offers a variety of support options. Get more information: barracuda.com/support/premium

Barracuda Community

- Access helpful tools and information to get the most out of your Barracuda solution: barracuda.com/join-community

Documentation

- Get technical documentation online: campus.barracuda.com

Before You Begin

- Adhere to standard electrical safety precautions to protect yourself from harm and to protect the appliance from damage.
- Place your appliance in a stable location.
- Verify the package contents for your appliance type as listed in the table below:

1. Security Appliance
2. Ethernet Crossover Cable
3. USB Cable
4. 2-Pin Power Connector*
5. DIN Rail Mount Bracket
6. Integrated WiFi 2.4Ghz and Antennas
7. Integrated 3G/UMTS Modem and Antennas
8. Integrated 4G/LTE Modem and Antennas

- Compatible PSU must be purchased separately.

	1	2	3	4	5	6	7	8
SC20	✓	✓	✓	✓	✓	-	-	-
SC21	✓	✓	✓	✓	✓	✓	-	-
SC22	✓	✓	✓	✓	✓	-	✓	-
SC23	✓	✓	✓	✓	✓	✓	✓	-
SC24	✓	✓	✓	✓	✓	-	-	✓ (EMEA, APAC)
SC25	✓	✓	✓	✓	✓	✓	-	✓ (EMEA, APAC)
SC26	✓	✓	✓	✓	✓	-	-	✓ (NA)
SC27	✓	✓	✓	✓	✓	✓	-	✓ (NA)

Power

Power via Power over Ethernet

- Connect the WAN port to a PoE-compatible device. The Secure Connector powers on automatically.
- Verify that the power LED on the front of the Secure Connector is on.

Power via Power Supply Unit

- Make sure pin connector is installed correctly.
- Plug-in pin connector to appliance 12Vdc.
- Plug in power cord of the power supply to outlet. The Secure Connector powers on automatically.
- Verify that the power LED on the front of the Secure Connector is on.

Connect




- Connect the USB cable to the Secure Connector OTG port.
- Connect the other end of the USB cable to your PC.
- The Secure Connector is mounted as mass storage device on your PC. This can take up to two minutes.

Provision

- Copy the sca.conf file to the Secure Connector.
- Unplug the Secure Connector from your PC and remove the USB cable from the OTG port.
- Reboot the Secure Connector by pressing the PWR button for 5 seconds.

Connect WAN and LAN

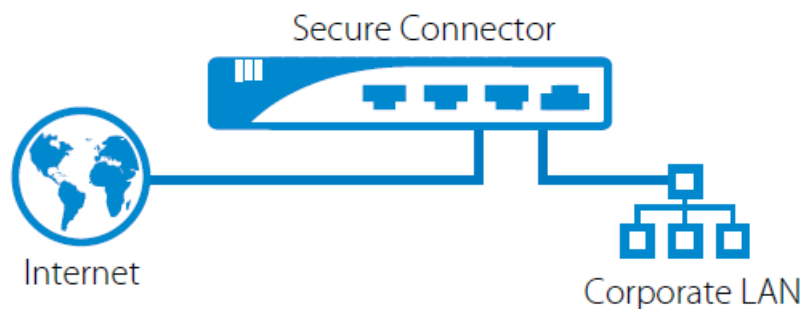

- Connect the WAN port of the Secure Connector to the Internet.
- Connect the LAN port of the Secure Connector to the network/device.

Electrical Safety

Follow these basic electrical safety precautions to protect yourself from harm and to protect the appliance from damage:

- Be aware of the power switch locations on the appliance chassis, the emergency power-off switch for the housing room, the disconnection switch, and the electrical outlet.
- This awareness allows quick removal of electrical power from the system should an electrical accident occur.
- Do not work alone when working with high-voltage components.
- When working around exposed electrical circuits, another person familiar with the power-off controls should be nearby to switch off the power if necessary.
- Use only one hand when working with powered-on electrical equipment. This prevents making a complete circuit, which can cause electrical shock. Use extreme caution
- when using metal tools, which can easily damage electrical components or circuit boards when they come into contact with them.

- Do not use mats designed to decrease electrostatic discharge to protect from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cord must include a grounding plug and must be plugged into grounded electrical outlets.
- To prevent fire or shock hazards, do not expose the unit to rain or moisture, or install this product near water.
- Avoid installing this product during a lightning storm.
- Ensure that the air vents (openings along the sides and back) are never blocked and that there is sufficient airflow through the vents to prevent overheating.

General Safety

- Keep the area around the appliance clean and free of clutter.
- Locate a safe and dry location to set this product, keeping it away from wet surfaces/surroundings.
- While working on the system, do not wear loose clothing, such as neckties and unbuttoned shirt sleeves, which can contact electrical circuits or be pulled into a cooling fan.
- Remove any jewelry or metal objects from your body, which can act as excellent metal conductors, creating short circuits, and potentially harming you if they contact printed circuit boards or powered areas.
- For plugged-in equipment, the socket outlet must be installed near the equipment and be easily accessible.

Electrostatic Discharge Precautions

Electrostatic discharge (ESD) is generated by two objects with different electrical charges coming into contact with one another. An electrical discharge, which can damage electronic components and printed circuit boards, neutralizes this difference.

- Use a grounded wrist strap designed to prevent static discharge.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags until ready for use.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Do not let components or PCBs contact your clothing, which may result in a charge despite wearing a wrist strap.
- Handle a board by its edges only; do not touch its components, peripheral memory modules, or contacts. When handling chips or modules, avoid touching their pins.
- Put the server board and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the server board.
- After accessing the inside of a system, close the system back up and secure it to the rack unit with the retention screws after ensuring that all connections have been made.

This is Class A equipment. The operation of this equipment in a residential environment could cause radio interference. In such a case, the user may be required to take corrective actions.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference.
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

United States Patents

This Barracuda product is covered by one or more of the following U.S. patents:

9,021,017 8,559,450 8,122,493 7,861,300 7,093,287 8,849,836 8,558,888 8,069,244 7,836,267 7,010,611
8,843,612 8,555,365 8,050,251 7,788,291 6,778,941 8,838,965 8,463,797 7,996,475 7,688,815 6,324,582
8,831,030 8,447,856 7,987,267 7,519,727 6,266,701 8,789,178 8,443,193 7,974,288 7,328,247 6,098,108
8,788,831 8,434,140 7,970,899 7,272,155 6,097,697 8,788,597 8,285,997 7,930,428 7,254,038 5,999,967
8,775,604 8,280,895 7,917,943 7,149,795 5,796,948 8,726,384 8,219,644 7,917,756 7,149,222 5,503,561
8,725,704 8,204,948 7,898,953 7,103,913 8,571,042 8,194,174 7,877,789 7,093,294.

Software License

Barracuda software is provided under license from Barracuda Networks, Inc. and other licensors, and certain of the programs included in the software may be provided under the GNU General Public License (GPL) or the Lesser General Public License (LGPL). In accordance with the terms of the GPL and LGPL, you may request a copy of the relevant source code. This offer is valid for up to three years from the date of the original purchase of the product. For details and information about the applicable licenses, please contact Barracuda at contact@barracuda.com

Barracuda software license terms are located at: <https://www.barracuda.com/legal/software-license-agreement>

Warranty

- The hardware and software is warranted as set forth in the warranty located at: <https://www.barracuda.com/legal/warranty>

Export Compliance

Barracuda is committed to complying fully with U.S. government and host country government laws and regulations, including export and import laws. Any person or entity exporting or re-exporting Barracuda Networks products directly or indirectly and via any means, including electronic transfer, is wholly responsible for doing so in accordance with the U.S. Export Administration Regulations and the laws of host countries and must obtain and maintain all approvals and licenses from the appropriate governmental authorities. U.S. export laws restrict product from being shipped to embargoed countries and denied persons or entities. For details on U.S. export laws, please visit <http://www.bis.doc.gov>.











To assist you meet your obligations with regard to export compliance, Barracuda Networks provides a product

export classification matrix located at: www.barracuda.com/tradecompliance. Should your organization have any questions regarding this obligation or our trade compliance policies, please contact your Barracuda Networks Channel Account Manager or send an email to TradeCompliance_Team@barracuda.com The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”

Documents / Resources

 Barracuda Secure Connector Quick Start Guide Kurzanleitung Guide de Démarrage Rapide Guia de Instalação Rápida Hand Bookings, Berlin	Barracuda SC2.5 Secure Connector [pdf] User Guide BNET101, 2AHVQ-BNET101, 2AHVQBNET101, BNGFSC25A, 007402265, 26121604, SC2.5, Secure Connector, SC2.5 Secure Connector
---	--

References

-  [Barracuda Networks](#)
-  [Barracuda Networks](#)
-  [Community Forum - Connecting Barracuda Networks Users Around the Globe | Barracuda Networks](#)
-  [Contact Support | Barracuda Networks](#)
-  [Support - A global support network of experts at your service | Barracuda Networks](#)
-  [Contact Support | Barracuda Networks](#)
-  [Barracuda Campus](#)
-  [Company | Barracuda Networks](#)
-  [Company | Barracuda Networks](#)
-  [Company | Barracuda Networks](#)