

BARSKA BC506 LEVEL ED User Manual

Home » BARSKA » BARSKA BC506 LEVEL ED User Manual



Contents

- 1 BARSKA BC506 LEVEL ED User Manual
- 2 Read all instructions before use
- 3 Parts Of The Binocular
- 4 Focusing
- **5 Eye Cups**
- **6 Eye Cups Down**
- 7 Eye Cups Up
- 8 Waterproof / Fog Proof
- 9 Tripod Adapter Fitting
- 10 Care and Cleaning
- 11 Care
- 12 Cleaning
- **13 LIMITED LIFETIME WARRANTY**
- **14 BARSKA OPTICS**
- 15 Read More About This Manual & Download PDF:
- 16 Documents / Resources
 - 16.1 References

BARSKA BC506 LEVEL ED User Manual



Read all instructions before use

 


DO NOT use this optical product to view the Sun or any light source. CAUTION: Viewing the Sun can cause permanent eye damage.

Parts Of The Binocular

- 1. Eyepiece
- 2. Right Eye Diopter
- 3. Center Focus
- 4. Twist Up Eye Cups
- 5. Neck Strap Eyelet
- 6. Objective Lens
- 7. Tripod Adaptable Fitting

Interpupillary Distance Adjustment



The distance between the eyes, called "interpupillary distance" (IPD), varies from person to person. To achieve perfect alignment of lens to eye, follow these steps.

Hold your binocular in the normal viewing position and look at an object in the

Grasp each of the binocular barrels firmly. Move the barrels closer together or further apart until you see a single circular field.

Focusing

After adjusting the interpupillary distance, follow steps below to focus the binoculars

 
- 1. Close your right eye and look at an object in the distance through the left eyepiece with your left eye. Rotate the center focus until image is
- 2. Close your left eye and look at the same object in the distance through the right eyepiece with your right Rotate the right eye diopter until the imageis clear.
- 3. Look through the binocular with both eyes and image should be clear, rotate the center focus for any further image adjustments

Eye Cups

The binocular is designed with twist up eye cups for your comfort. To exclude extraneous external light thus providing improved field of view.


Eye Cups Down

Sunglasses / Eyeglasses Wearers



Eye Cups Up

 Non Sunglasses / Eyeglasses Wearers



The binocular is O-ring sealed for complete waterproof protection to keep the inside dry after contact with moisture. Fog proof protection is achieved from argon purging which removes all internal moisture to prevent antifogging inside the optical surfaces.

Tripod Adapter Fitting

The binocular is equipped with a built in tripod adapter fitting. Carefully unscrew the cover screw located at the base of the binocular hinge to expose the threaded mounting socket for the tripod adapter to attach to. Tripod adapter NOT included.

Care and Cleaning

Care

If handled with care, this binocular will provide years of trouble-free service. Like any fine optical instrument your binocular should be given sensible care.

- Keep the lens covers on the lenses when binoculars are not in
- Store binoculars with the eye cups
- Avoid banging and Store in a cool, dry place.

Cleaning

- Blow away any dust or debris on the lens (or use a soft lens brush)
- To remove dirt or fingerprints, clean with a soft cotton cloth rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent
- For a more thorough cleaning, photographic lens tissue and photographic-type lens cleaning fluid or isopropyl alcohol may be Always apply the fluid to the cleaning cloth never directly on the lens.

NEVER attempt to clean your binocular internally or try to take it apart

LIMITED LIFETIME WARRANTY

BINOCULARS

BARSKA® Optics, as manufacturer, warrants this new precision optical product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty.

This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America.

In the event of a defect within 30 days, the consumer must return the defective unit to the BARSKA dealer (the place of purchase) at his/her own expense.

Beyond 30 days, BARSKA products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

BARSKA OPTICS

For additional and updated information please visit our website at www.barska.com
Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. NOTE: All merchandise received without a valid RMA # will be returned to shipper at his/her own expense. Please include all of the following when returning BARSKA products for service and/or replacement:

- 1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#,)
- 2. Purchase receipt or Proof of (Original/Copy)
- 3. A brief explanation of the

*Please allow 6-8 weeks for delivery.

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing of your optical products are always provided at a reasonable cost.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.

Read More About This Manual & Download PDF:

Documents / Resources



BARSKA BC506 LEVEL ED [pdf] User Manual BC506 LEVEL ED, BC506, LEVEL ED, ED

References

- Darska Your Ultimate Source for Premium Safes and Outdoor Gear
- Manual-Hub.com Free PDF manuals!
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.