



BARSKA BC620 Fireproof Safe Instruction Manual

[Home](#) » [BARSKA](#) » BARSKA BC620 Fireproof Safe Instruction Manual 



User's Manual for Fireproof Safe
Read all instructions before using this safe.

Contents

- [1 BC620 Fireproof Safe](#)
- [2 BATTERY INSTALLATION](#)
- [3 FACTORY DEFAULT MODE \ CREATING A PERSONAL PIN CODE](#)
- [4 TESTING PERSONAL PIN CODE](#)
- [5 OPENING & CLOSING SAFE WITH PERSONAL PIN CODE](#)
- [6 LOCK OUT MODE](#)
- [7 CHANGING PERSONAL PIN CODE](#)
- [8 BEEP SOUND OPTIONS](#)
- [9 SAFE ALARM](#)
- [10 LOW BATTERY WARNING](#)
- [11 FLOOR MOUNTING INSTRUCTIONS](#)
- [12 CARE AND MAINTENANCE](#)
- [13 1 YEAR LIMITED WARRANTY](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

BC620 Fireproof Safe


WARNING


- For security purposes, change the factory default code as soon as possible. Factory default code is 159#.
- Test registered pin code a few times before closing the safe door.

- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Do NOT storage combustible materials in this unit.
- The interior will reach up to 350°F. Avoid storing items such as pearls, digital media, back up tapes, data cartridge, CD's etc. These items sustain heat damage at temperatures much lower than 350°F.
- The safe has a proprietary insulation that has a high moisture content. To avoid humidity damage to contents we recommend placing a desiccant or dehumidifier inside the safe to protect the contents from rust or mildew.
- If you are storing delicate items such as jewelry, photos, etc. we recommend putting them in an air-tight container, prior to placing them in the safe for storage.
- In the event of a fire, we recommend caution when opening the safe. If you feel unsure about opening the safe because of the contents stored, contact your local fire department for assistance.
- Store emergency keys in a secure place; NOT inside of the safe.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible for any damage or lost contents in the safe due to moisture.

NOTE: BARSKA is not responsible if the safe is stolen or contents in the safe.

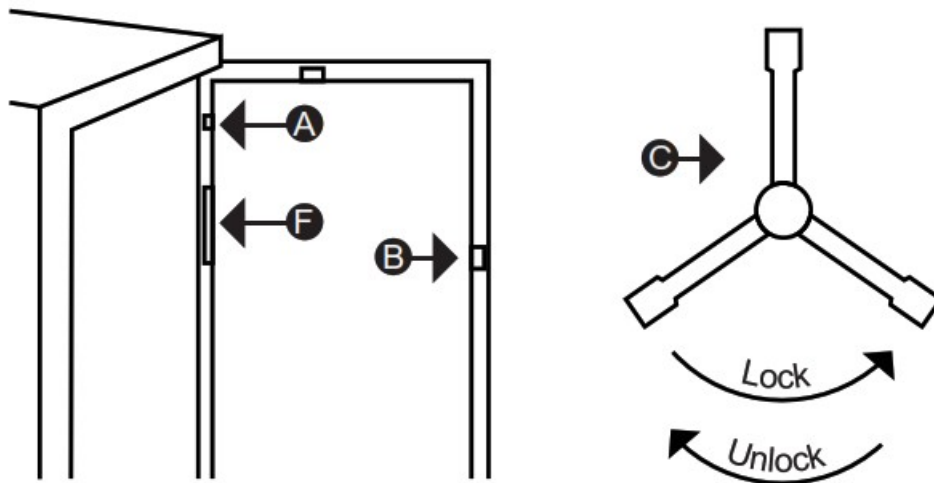

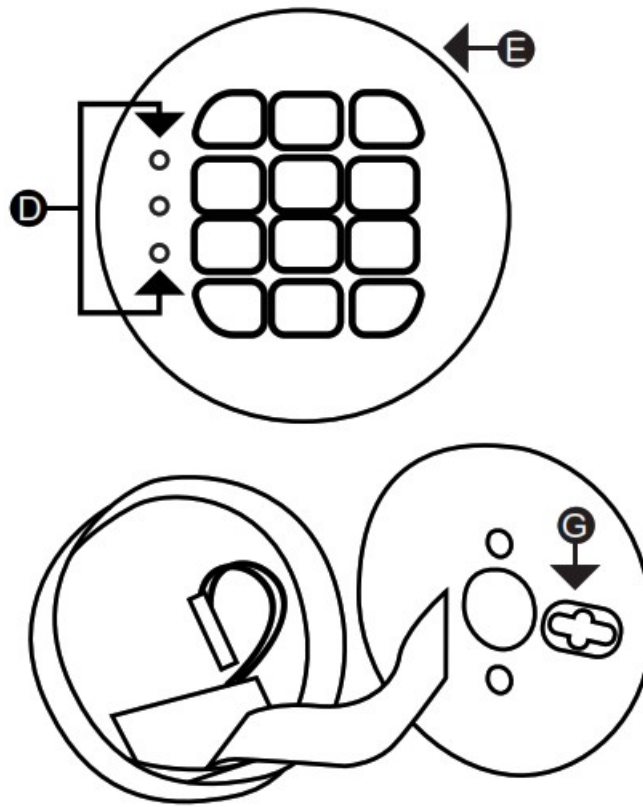

- A. Initialization Button
- B. Bolts
- C. Handle
- D. Indicator Lights
- E. Keypad
- F. Battery Compartment
- G. Emergency Key Access

* Actual model may vary

BATTERY INSTALLATION

1. Remove Batter Compartment (F) cover
2. Insert 4AA batteries and restore batter cover

FACTORY DEFAULT MODE \ CREATING A PERSONAL PIN CODE

Safe retains one 3-8 digit pin code.

1. On the Keypad (E) enter in factory default code "159#".
2. Turn the Handle (C) clockwise to unlock and open the safe door. You have 5 seconds before the locking mechanism is reactivated.
3. Locate the Initialization Button (A) on the inside of the safe door.
4. Press and release the Initialization Button (A), you will hear one beep. The yellow Indicator Light (D) on the Keypad (E) will be on, you can only enter your code while the yellow Indicator Light (D) is on.
5. Enter your 3-8 digit personal pin code and press "*" to confirm the new code.

TESTING PERSONAL PIN CODE

1. With the safe door open and the Bolts (B) extended in the locked position, enter in your personal pin code on the Keypad (E) and press the “#” symbol.
2. Turn the Handle (C). If pin code was registered correctly the Bolts (B) will retract. If pin code was NOT registered correctly the Bolts (B) will stay in the locked position.
If pin code was NOT registered correctly repeat steps in “FACTORY DEFAULT MODE \ CREATING A PERSONAL PIN CODE”.
3. Test a pin code that is not registered to ensure the Bolts (B) will stay in the locked position.

OPENING & CLOSING SAFE WITH PERSONAL PIN CODE

OPEN:

1. Enter in your personal pin code on the Keypad (E) and press the “#” symbol.
2. Turn the Handle (C) clockwise to the unlock and pull the safe door open.

CLOSE:

To close safe, close door and turn Handle (C) counter clockwise to the lock position.

LOCK OUT MODE

Lock out mode is activated when the wrong pin code is entered

- 3 consecutive times, lock out mode will last 20 seconds
- 6 consecutive times, lock out mode will last 5 minutes

CHANGING PERSONAL PIN CODE

Follow steps 3, 4 and 5 in “ FACTORY DEFAULT MODE \ CREATING A PERSONAL PIN CODE”

BEEP SOUND OPTIONS

Beep OFF: On the Keypad (E) enter in *633

Beep ON: On the Keypad (E) enter in *66

OPENING THE SAFE WITH THE EMERGENCY ACCESS KEY

1. Turn Keypad Cover (E) counter clockwise to reveal the Emergency Key Access (G). Hold the Keypad Cover (E) with one hand.
2. Insert access key into Emergency Key Access (G) and turn clockwise to open.

NOTE: Store keys in a secure place. NOT inside of the safe.

SAFE ALARM

Press “*00” to activate the Alarm-U System. If anyone tries to temper with safe, the safe alarm will sound for 20 seconds. To turn off the alarm from sounding, please enter the correct pin code or use the emergency key to open the safe and remove the batteries.

LOW BATTERY WARNING

When a button is pressed on the Keypad (E), a red Indicator Light (D) will come on momentarily warning that the battery is low. To replace the battery, see steps in "BATTERY INSTALLATION".

NOTE After replacing the batteries safe retains the last pin code saved.

FLOOR MOUNTING INSTRUCTIONS

The safe may be mounted to the floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

- Barska recommends that this safe be anchored to the floor.
- Your safe must be shimmed level to assure proper lock functions and to keep the door from swinging open too quickly or closing by itself.
- To avoid rust on the safe, never set the safe directly on a cement floor. We recommend a spacer be placed between the safe and the cement.
- Exposure to chemicals or other adverse environments may cause the warranty to become invalid.
- The safe is designed to support itself when the doors is opened. However caution should be used to avoid pulling it over. To maximize security and stability, bolting the safe to the floor is recommended.
- This safe come with a pre-drilled electrical hole, measuring 3/8" diameter, located on the bottom right-hand side of the safe (if you are facing the safe, it is on your right-hand side).
- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

CARE AND MAINTENANCE

- Your safe is built to last a lifetime. However, please understand that the locking mechanism has some precisions parts. If you experience ANY difficult opening or closing your safe, DO NOT FORCE THE HANDLE, call 888.666.6769 for technical support. If the handle is forced or ABUSED, it may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience for both the owner and Barska and may lead to a claim denials.
- Keep liquids away from the keypad. Spills on the keypad will cause damage and possibly electric shock.
- If necessary use a damp cloth to clean the safe. DO NOT use chemicals or cleaning agents.
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent it from falling and causing damage or injury.
- The mechanism inside the door and the hinges are permanently lubricated, this needing no maintenance. Occasionally it may be necessary to lubricate the door bolts. To do so, extend the door bolts completely with the door open. Wipe a small amount of oil around each bolt.
- DO NOT over stuff the contents of the safe, it can damage the motor mechanism or the contents.
- DO NOT disassemble the product. For all repairs and maintenance, contact BARSKA Customer Service

1 YEAR LIMITED WARRANTY

FIRE SAFE VAULTS

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), excessive fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.

*Please allow 6-8 weeks for delivery.


BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period.

If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA warranties.

© 2019 BARSKA®
855 Towne Center Drive | Pomona, CA 91767
(t) 888.666.6769 | (f) 909.445.8169 | www.barska.com

11/19
BC371

	<p>BARSKA BC620 Fireproof Safe [pdf] Instruction Manual</p> <p>AX12216, AX12218, AX12220, BC620, BC620 Fireproof Safe, BC620, Fireproof Safe, Safe</p>
--	---

References

- [Barska - Your Ultimate Source for Premium Safes and Outdoor Gear](#)
- [User Manual](#)