

BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker



BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker User Manual

[Home](#) » [BASICS](#) » BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker User Manual 

Contents

- [1 BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Parts List](#)
- [6 Installation Instructions](#)
- [7 Assembly Instructions](#)
- [8 Maintenance](#)
- [9 Additional Precautions](#)
- [10 One Year Warranty](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

BASICS

BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker



Product Information

Specifications:

- Model: ML-26LBM-FW-16005F-S-NEW
- Parts Included: Left Main Frame, Right Main Frame, Connecting Tube, Rear Leg with Rubber, Front Leg with Wheel, Screw, Ski Fits
- Warranty: One Year

Product Usage Instructions

Parts List

The product accessories include:

- Left Main Frame – Quantity: 1
- Right Main Frame – Quantity: 1
- Connecting Tube – Quantity: 4
- Rear Leg with Rubber – Quantity: 2
- Front Leg with Wheel – Quantity: 2

Installation Instructions

Before Assembly:

1. Check the Parts List carefully and remove contents from the carton.
2. Verify that all parts are present. Contact customer service for missing or damaged parts.

Assembly Instructions:

1. Take out the Right Main Frame (Part B) and insert it into the Left Main Frame (Part A).
2. Secure the frames using the provided screws (Part F).
3. Insert the Connecting Tubes (Part C).
4. Install the Rear Leg with Rubber (Part D) and Front Leg with Wheel (Part E) as shown.

Maintenance:

1. Keep rubber discs clear of oil and dust.
2. Clean rubber discs with standard household cleaning agents.
3. Avoid prolonged exposure to sunlight to maintain elasticity.
4. Regularly check for damage and replace if necessary.
5. Check and tighten screws and components regularly.

Additional Precautions:

1. Ensure height adjusting snap buttons lock securely in position.
2. Tighten all thumb screws.
3. Check rubber tips and wheels for wear or damage.
4. All four leg extensions must touch the floor simultaneously.

FAQ

Q: What should I do if I find missing or damaged parts during assembly?

A: Contact customer service immediately with your order number, part number, quantity, and any relevant pictures or videos for quick replacement.

Q: How often should I perform maintenance on the product?

A: Regularly check and maintain the product as per the maintenance instructions provided in the manual. Ensure all components are in good condition.

Please Read this Manual Carefully Before Using







Thank you for choosing us

We have a professional Customer Service Support Team. Please feel free to contact us when you have any suggestions on our products or when you need any help. We will always be here for you and be responsible for our products.

Parts List



The product accessories are as follows:

Part Number	Part Image	Part Name	Quantity
A		Left Main Frame	1
B		Right Main Frame	1
C		Connecting Tube	4
D		Rear Leg with Rubber	2
E		Front Leg with Wheel	2
F		Screw	1
G		Ski Fits	2

Installation Instructions

Before Assembly


1. Please check the Parts List carefully and remove contents from carton. And then verify that all the parts are present. When missing parts or some parts are damaged, please contact us immediately.
2. We provide replacement parts to our customers if you need any replacement parts. Please provide the order number, part number, quantity, and pictures or video clips (if applicable) so that you can get what you need as

soon as possible.




Assembly Instructions


- Step 1. Take out the Right Main Frame (Part# B), and press the push pin to insert it into the Left Main Frame (Part# A) .

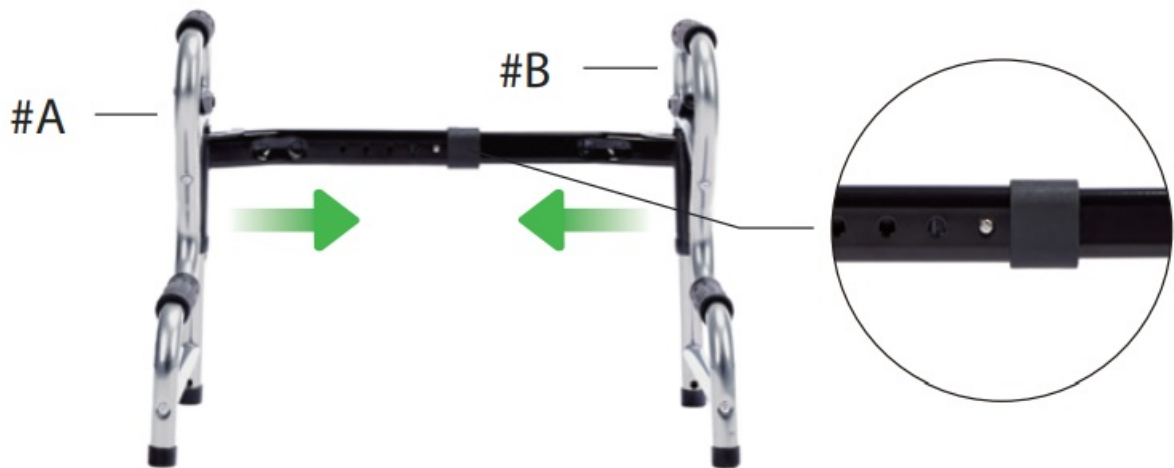

- Step 2. After adjusting to the appropriate width, continue to use Screw (Part# F) to secure the frames on the back.

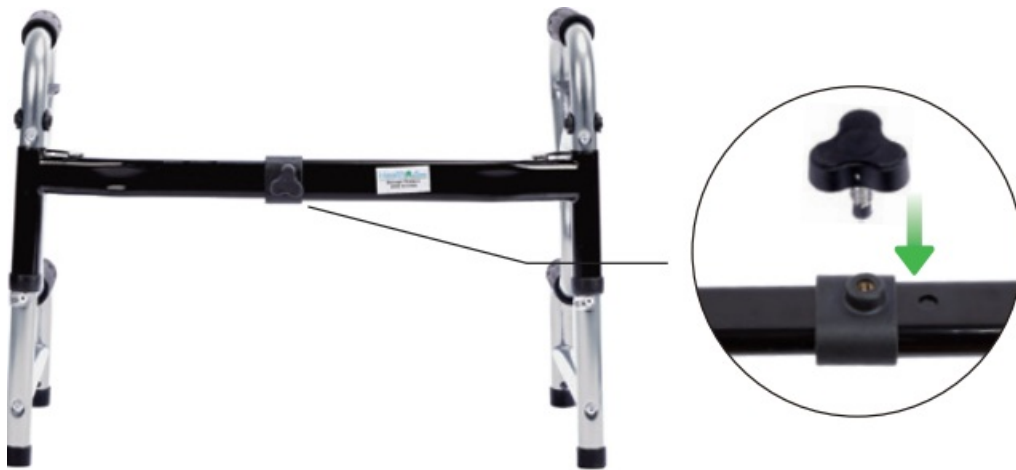



- Step 3. Insert the Connecting Tubes (Part# C) .

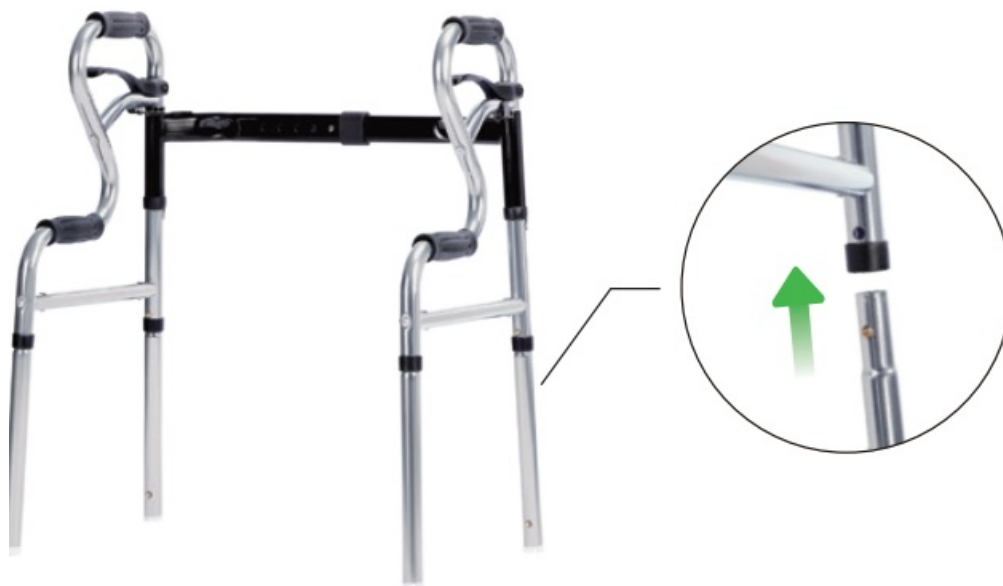

- Step 4: Install the Rear Leg with Rubber (Part# D) and Front Leg with Wheel (Part# E) as shown.
Note: Make sure the wheels are facing out and adjust four legs to the same height when installing.



- Replacement Rubber Feet

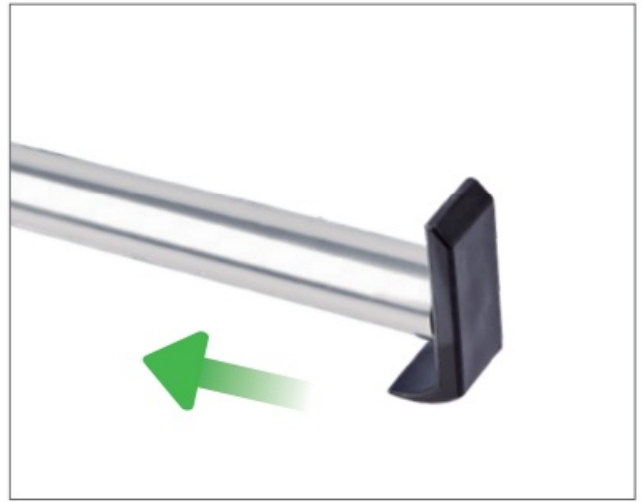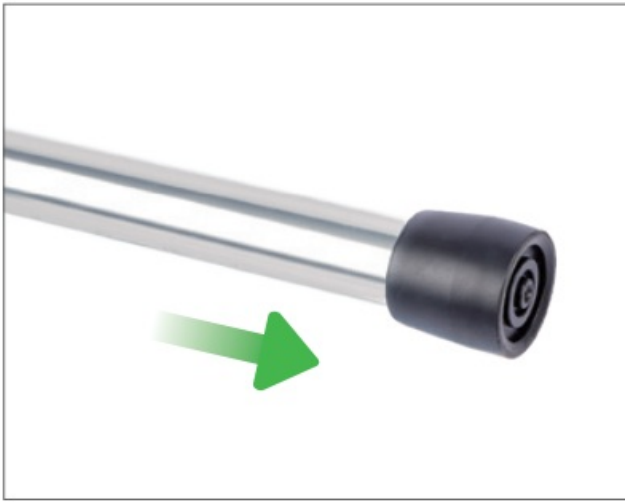

Maintenance

1. Always keep the rubber discs clear of oil and dust.
2. Clean the rubber discs with standard household cleaning agents.
3. Never expose the rubber discs to sunlight for long periods otherwise they will quickly lose their elasticity.
4. Check the rubber discs for possible deterioration. If the suction cups show damage, replace immediately.
5. Please check whether screws and components are loose regularly. If they are loose, tighten them in time.

Additional Precautions

1. Inspect all parts for shipping damage before assembly. If there is shipping damage – DO NOT USE. Contact dealer/carrier for further instructions.
2. Make certain that the height adjusting snap buttons fully protrude through the same respective hole of each leg extension. This will ensure that the leg extensions are securely locked in position and an even height is achieved.
3. Ensure All thumb screws are tightened.
4. Check the rubber tips and wheels on the leg extensions for rips, wear or if they are missing. Immediately replace any or all if any of these imperfections exist.
5. All four leg extensions MUST touch the floor simultaneously at all times.

One Year Warranty

Our brand product is warranted to be free of defects in materials and workmanship for One Year for the original purchaser.


This device was built to exacting standards and carefully inspected prior to shipment. This One Year Warranty is an expression of our confidence in the materials and workmanship of our products and our assurance to the consumer of dependable service.

In the event of a defect covered by this warranty, we will, at our option, repair or replace the device. This warranty does not cover device failure due to owner misuse or negligence, or normal wear and tear.

The warranty does not extend to non-durable components, such as rubber accessories, casters, and grips, which are subject to normal wear and need periodic replacement.

If you have a question about device or this warranty, please contact us.

Documents / Resources

	<p>BASICS ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker [pdf] User Manual ML-26LBM-FW-16005F-S-NEW, ML-26LBM-FW-16005F-S-NEW 3 In 1 Folding Walker, 3 In 1 Folding Walker, Folding Walker, Walker</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.