



Basilico L600i Red Can Magic Instruction Manual

[Home](#) » [Basilico](#) » Basilico L600i Red Can Magic Instruction Manual 

Basilico L600i Red Can Magic



Please read and retain these instructions for future reference

Contents

- 1 Product View
- 2 User Instructions
- 3 How to use
- 4 Care and Maintenance
- 5 Trouble Shooting
- 6 WARNINGS AND SAFETY
- INSTRUCTIONS
- 7 BATTERIES
- 8 CUSTOMER SERVICES
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Product View



Power Details: 4x AA batteries (not included)

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Red Can Magic.

ALWAYS USE ALKALINE BATTERIES.
DO NOT USE LITHIUM BATTERIES.
DO NOT USE RECHARGEABLE BATTERIES.

User Instructions

Unpack the components carefully. Please check all parts have been removed from the packaging.

Part



How to use

Step 1



Lightly push from the front to release the flip tab, then gently push cover back in the direction of the arrow to lift the lid.

To close the cover, push from back to front. Make sure cover sits firmly in place and does not move.

Make sure the batteries are inserted with the correct polarity and the cover is locked back in place.

Step 2





Put the can opener on top of a can, making sure the edge of the can is between the blade and the metal gear.

Step 3



Push the button and let the can opener rotate around the can on its own.

Once done, the can opener automatically stops and unlatches from the edge.

Remove the can opener and lift the lid.

Step 4



When the can opener has completed cutting, the magnet at the bottom of the can opener will hold the lid.

Care and Maintenance

- DO NOT submerge in water, wash under running water, or wash in a dishwasher.
- Remove batteries before cleaning. Wipe the cutter with a damp cloth or a sponge, using a mild nonabrasive cleaner. Wipe dry with a clean, dry cloth.
- Store the appliance in a cool, dry place.

Trouble Shooting

1. The can opener is not working. What do I do?

Check the battery compartment. Make sure the batteries are in the right polarity and that the cover is securely in place.

2. Why is it rotating so slowly? It looks like it's struggling.

The batteries might be drained. Replace them and try again.

3. Why doesn't it latch off the edge once it's done?

First, don't forcefully remove the can opener. Restart it by taking off the batteries in that position. Put them back in, including the lid and push the button again.

4. Why can't the small magnet keep the lid in place?

Some canned food suck in the lid due to moisture. You can manually lift the lid to open the can.

5. Why can't it open the can?

Make sure that it is in the right position on the can. Check the can for any dents or bends on the edges. If there are no problems with the can, restart the opener.

6. Not to be used on cans with curved body.

Note: The can opener will not open rimless cans or cans with odd corners.

WARNINGS AND SAFETY INSTRUCTIONS


WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE.
- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.


BATTERIES

- ALWAYS USE ALKALINE BATTERIES. DO NOT USE LITHIUM BATTERIES.
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- KEEP BATTERIES AWAY FROM CHILDREN AND PETS.
- IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.
- DO NOT MIX USED AND NEW BATTERIES.
- NEVER DISPOSE OF BATTERIES IN A FIRE.
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

DISPOSAL

<ul style="list-style-type: none">• Coopers of Stortford use recyclable or recycled packaging where possible.• Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.	
--	---

Plastics, polybags – this is made from the following recyclable plastic

Code & Symbol	
Type of Plastic	ABS

CUSTOMER SERVICES

Distributed by.

UK: The Enterprise Department Ltd.


11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU
Tel: 0330 331 0300

NI/EU:
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269



Basilico 

Documents / Resources

	<p>Basilico L600i Red Can Magic [pdf] Instruction Manual L600i, L600i Red Can Magic, Red Can Magic, Can Magic, Magic</p>
---	--

References

- [User Manual](#)