



## Basilico M938 Portable Induction Hob Instruction Manual

[Home](#) » [Basilico](#) » Basilico M938 Portable Induction Hob Instruction Manual 



### Contents

- [1 Basilico M938 Portable Induction Hob Instruction Manual](#)
- [2 OPERATE](#)
- [3 CARE AND CLEANING INSTRUCTIONS](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

**Basilico M938 Portable Induction Hob Instruction Manual**



**Item No: M938/639950**

Please read and retain these instructions for future reference

Power Details: Voltage details: 220-240V  
Frequency details: 50Hz-60Hz  
Wattage details: 2000W

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new product description here.



**CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.**

**Attention:**

To avoid the risk of injury or electric shock, please note:

1. Do not touch the device or power outlet with wet hands.
2. Do not connect this device to the same power outlet as other devices.
3. The device must be connected to a suitable outlet.

4. Do not pull the device to the power cable.
5. During the cooking process, do not move the induction stove to the stove, and do not place the hot pot on the stove.
6. Do not place empty containers on the device.
7. Do not place or place any metal objects on the device.
8. Do not heat food in airtight containers,
  1. For example, cannot be heated without removing the lid.
9. Check the power cord for damage from time to time.
  1. Do not use the device if the cable is damaged. If the power cord is damaged, it must be replaced by a qualified electrician.
10. If the device is not working properly, damaged or dropped, do not use the device.
11. Do not leave equipment unattended during operation. Stay away from children and other incompetent people, and people under the influence of alcohol or drugs.
12. Warning: This device is not suitable for the following human use  
(including children), persons with limited physical, sensory or intellectual capacity or lack of experience.

## OPERATE

Temperature/power adjustment

Levels set by power:										
Power (W)	200	400	600	800	1000	1200	1400	1600	1800	2000
Level by temperature setting:										
温度 (C)	60	80	100	120	140	160	180	200	220	240

## ELECTRIFY

Plug in the power supply, the board will beep, and the indicator and screen will flash for 1 second. The screen will display "C" and the induction heater will turn on.

## ON/OFF TOUCH ICON

- When the induction heater is connected to the power supply, press the on/Off touch icon; The screen will turn on and say Open then enter standby mode.
- In standby mode, if no function is selected within 30 seconds, the unit will turn off.

## TOUCH ICON FUNCTION

- Click the function touch icon to select temperature or power.
- After selecting the function, touch the icon to Increase (+) or Decrease (-) the temperature or power
- There are 10 power gears, from 200W to 2000W, and temperatures from 60°C to 240°C.

- The touch icon is also used to adjust the time in the timer function.

## **TIMER TOUCH ICON**

- Press the timer touch icon to select timer Settings (from 1 minute to 4 hours).
- Click the Add (+) or Decrease (-) icon to adjust the operation time. Briefly press +/- to control the timer at 1-minute intervals, and long hold +/- to control the timer at 10-minute intervals.

## **TOUCH ICON LOCK**

- Click the Lock touch icon to lock the sensor.
- If you press the lock touch icon for 3 seconds, the induction heater will unlock, and it remain in the same status as before.

## **CHOOSING THE RIGHT COOKWARE FOR THE INDUCTION HOTPLATE**

- Only use Cookware with a suitable induction plate base. These will have the sensing symbol on the bottom of the base.
- Cookware made of the following materials are not compatible: pure stainless steel, aluminum or copper with non-magnetic bases, glass, wood, porcelain, ceramic and clay pots.
- Do not use cookware with serrated edges or curved bottoms.
- Make sure the bottom of your cookware is smooth and sits flat on the glass, and the same size as the cooking area. Always place cookware in the centre of the cooking area. The diameter of the cookware cannot be less than 12cm to ensure that the pan is detected. Do not use cookware larger than 26cm in diameter.
- Always lift kitchen utensils up from the sensor plate and do not drag them away as they may scratch the glass.
- You can check the compatibility of the base with a magnet test. Place the magnet on the bottom of the kitchenware. If it sticks this means it is compatible with the induction hotplate.

## **WARNINGS AND SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- DO NOT USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND

KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.

- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORKSTATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALLPAPER, ETC. – FOR OVENS / HEATERS / CHIP PANS / DEHUMIDIFIERS / ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS. – FOR OVENS / HEATERS / WATER BOILERS / ANY ITEM WITH HEATING ELEMENTS.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET. (For heaters and Ovens and Dehumidifiers)
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, MAINS ADAPTOR/ CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/ CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- DO NOT LEAVE UNATTENDED.
- ALWAYS SWITCH OFF AFTER COOKING OR IF YOU HAVE TO LEAVE THE ROOM.
- THE USE OF OVEN GLOVES IS RECOMMENDED WHEN HANDLING HOT FOOD OR HOT APPLIANCES.
- ALLOW TO COOL BEFORE CARRYING OR PLACING IN STORAGE.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

#### **PLUG WIRING (UK & IRELAND)**

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or

damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

## CARE AND CLEANING INSTRUCTIONS


- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

Code & Symbol	
Type of Plastic	Low Density Polyethylene

At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

#### **Distributed by**

UK:  
The Enterprise Department Ltd.  
11 Bridge Street, Bishops Stortford  
Herts, UK, CM23 2JU  
Tel: 0330 331 0300

**NI/EU:**  
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France  
Tel: (+44) 1279 701269

DE/FR/CZ/SK:  
hergestellt für 3Pagen  
Sankt-Joeris-Strasse 16-28  
52477 Alsdorf  
Tel: +49(0)2404/980-204  
kontakt@3pagen.de


UK  
CA

CE



**Read More About This Manual & Download PDF:**

## Documents / Resources

	<p><a href="#">Basilico M938 Portable Induction Hob</a> [pdf] Instruction Manual M938, 639950, M938 Portable Induction Hob, Portable Induction Hob, Induction Hob, Hob</p>
---	--

## References

- [User Manual](#)

### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.