



BASS JAXX EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds Instruction Manual

[Home](#) » [BASS JAXX](#) » BASS JAXX EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds Instruction Manual 

Contents

 
- [1 BASS JAXX EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds](#)
- [2 Product Overview](#)
- [3 Specifications](#)
- [4 Functions](#)
- [5 Multifunction Touchscreen Smart Case](#)
- [6 FAQ](#)
- [7 FCC Statement](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



BASS JAXX EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds



Product Overview

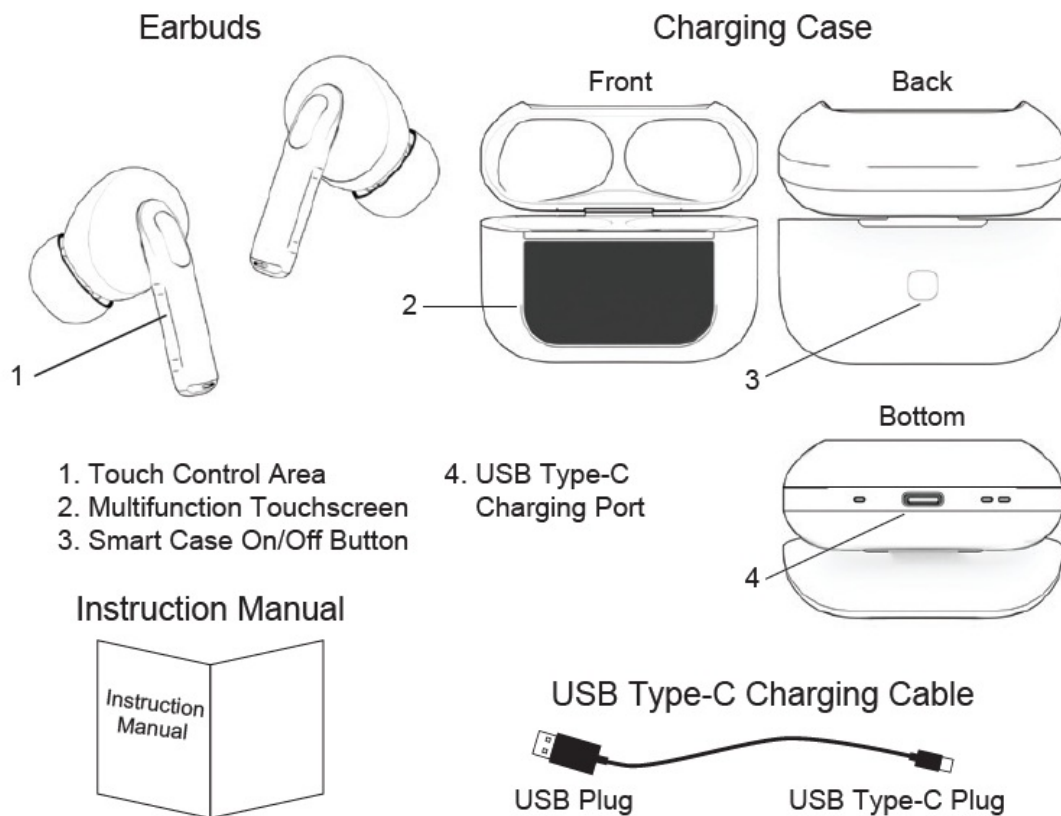

Package Contents

- 1 (One) Pair Earbuds

- 1 (One) Portable Charging Case
- 1 (One) USB Type-C Charging Cable
- 1 (One) Instruction Manual

Specifications

- Driver Diameter: 10 mm
- Impedance: 32 Ohms
- Frequency Response: 20 Hz – 20 kHz
- Sensitivity: 98 dB +/- 3 dB
- ANC: -18 dB +/- 3 dB
- Earbud Battery Capacity: Li-ion 3.7V 30 mAh Per Earbud
- Charging Case Battery Capacity: Li-ion 3.7V 380 mAh
- Bluetooth Version: 5.3
- Bluetooth Range: 32.8 Feet
- Playtime: 6 – 8 Hours (BT+ANC)
- Charging Time: 8 – 10 Hours (BT only)
 - USB Type-C Charging Cable Included 2 Hours
 - USB Type-C Charging Cable Rating 5V/1A Max.

Power On/Off

• Power On the Smart Case

Press and hold the On/Off button for 5 seconds and the Multifunction Touchscreen will be On.

Note: Press and hold the On/Off button for more than 8 seconds will reset the Smart Case.

• Power Off the Smart Case

Double click the On/Off button, and then select Power Off on the Multifunction Touchscreen.

• Power On the Earbuds

When the Smart Case is powered on and the earbuds are inside the Smart Case, open the cover will turn on the Earbuds.

• Power Off the Earbuds

Place the Earbuds in the Smart Case and close the cover will turn off the Earbuds.

Pair the wireless earbuds with your mobile device

1. Keep the distance between the earbuds and mobile device within 32.8 feet.
2. De-activate the Bluetooth function on your mobile device.
3. Put the earbuds back to charging case before use. Take both earbuds out from charging case and wait for 3 to 5 seconds for auto pairing.
4. Activate the Bluetooth function on your mobile device and select “EP-0719 TWS” from the list shown.

Reconnect the wireless earbuds to your mobile device

When powered on, the wireless earbuds will automatically connect with the last successfully paired device.

Disconnect the wireless earbuds from your mobile device

- Power off the wireless earbuds; or
- Switch off the Bluetooth on your mobile phone; or
- Leave the earbuds 60ft away from your mobile phone or further.

Answer / Reject a call

When receive a call, press the touch control area once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Double tap the touch control area to reject it.

End a call

To end the call, just press touch control area at any side of earbud.

Functions

- Play/Pause Music: Single tap on the touch control area.
- Go back to previous song: Double tap the left touch control area.
- Advance to next song: Double tap the right touch control area.
- Volume down: Triple tap the left touch control area.
- Volume up: Triple tap the right touch control area.
- Active Noise Cancelling(ANC) and Transparent mode: Press and hold the left touch control area for 2 seconds.
- Voice Assistant: Press and hold the right touch control area for 2 seconds.

Charging your Earbuds

 
1. Open the charging case cover.
2. Insert the Earbuds into the charging case and close the cover.
3. The earbuds will start the charge automatically.
4. Earbuds battery level will be displayed on the screen.

Note: If the charging is not start, take out both earbuds from the charging case and insert again after few seconds.


Multifunction Touchscreen Smart Case




Lock Screen
Swipe right to unlock

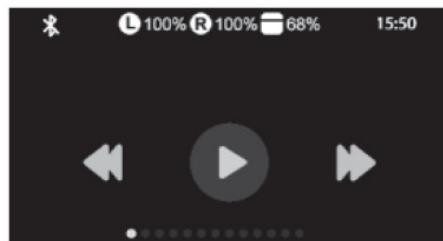

 
Music Control
Song Name Display
Pause / Play Music
Previous song
Next song

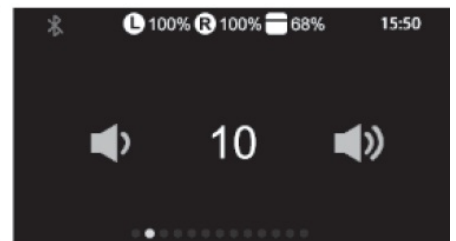


Volume Control
Volume + / - adjustment

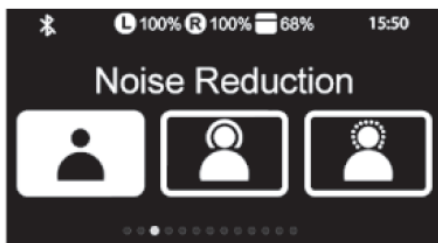 


ANC Control
ANC mode
Transparent mode

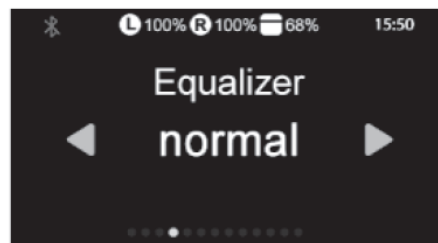 


Equalizer
Normal/Rock/Pop/
Classic/Jazz

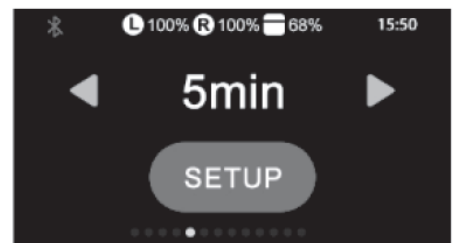 


Timer
5min/10min/
30min/60min

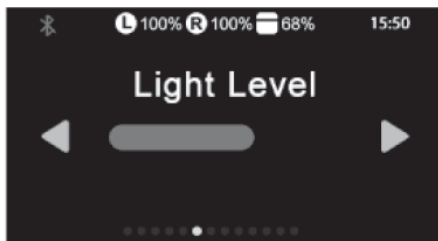 

 
Screen Brightness Adjustment
Screen brightness adjustment

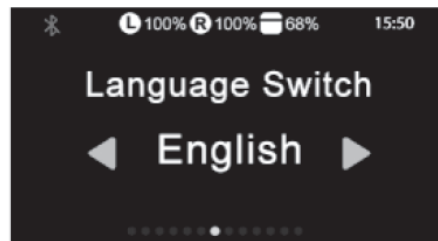

 
Language Selection
16 system language selection

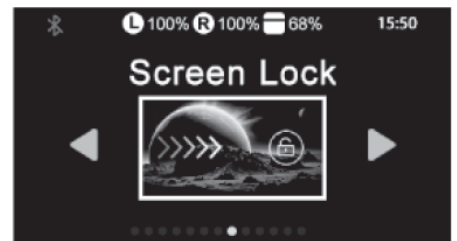

 
Lock Screen Wallpaper Selection
4 options

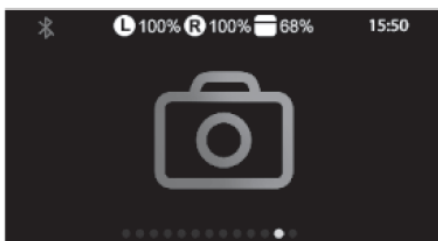

 Camera Control
Camera shutter button
(While connected to the smartphone and the Camera App's shutter can be triggered by Volume buttons)

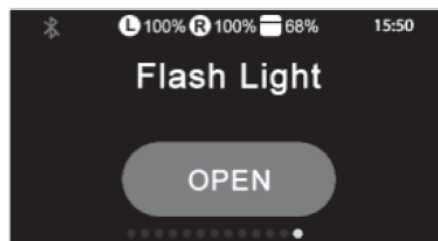


Flash Light
Screen turn to bright white

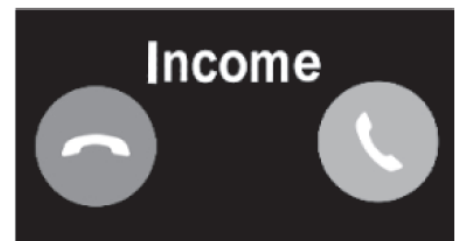 


Phone Call Control
Answer Call/
Cancel Call



 Battery Low
Smart Case battery low indication

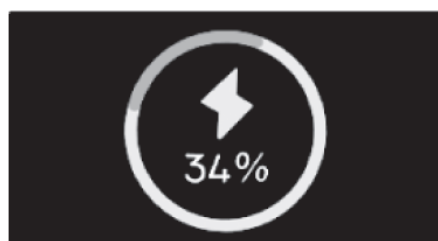

 Charging
Smart Case battery charging indication

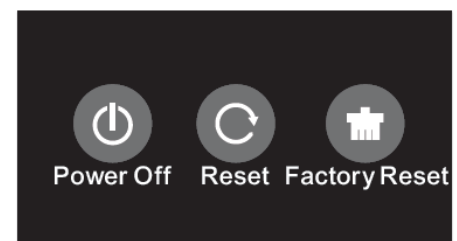

On/Off Control
Double Click the Smart Case On/Off Button to access On/Off control

Recharge Charging Case

For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with the packaging.

2. Connect the USB plug to a USB port on a wall adapter, then connect the USB Type-C plug to the USB Type-C charging port on the charging case to begin charging
3. Charging icon and the battery level will be displayed on the screen during charging.
4. The battery level will be 100% when fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the charging case and earbuds if it has been not used for more than 6 months.



CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FAQ

• **If the wireless earbuds cannot be paired with your device, please try the following:**

Ensure that your earbuds are in pairing mode or reconnection mode

Ensure that Bluetooth search function of your mobile device is activated.

• **If the wireless earbuds will not turn on:**

Make sure the earbuds are fully charged.

Make sure the protective stickers are removed from the Earbuds

• **Can I change the battery for the earbuds and the charging case?**

The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed.

• **If the charging case cannot be recharged:**

If you use a power outlet, ensure that the power supply is connected securely and the outlet works.

Safety instructions for the lithium battery and charging the product

- The input voltage to the product is 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10 °C/ 50 °F and 40 °C/104 °F.
- Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:

 
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners. Keep all relevant information for future reference.

Item# EP-0719

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106.

Documents / Resources

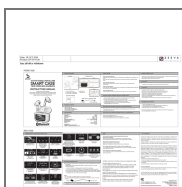

[BASS JAXX EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds](#) [pdf] | Instruction Manual
EP-0719V2, EP-0719V2 Active Noise Cancelling Smart Case True Wireless Earbuds, Active Noise Cancelling Smart Case True Wireless Earbuds, Noise Cancelling Smart Case True Wireless Earbuds, Smart Case True Wireless Earbuds, True Wireless Earbuds, Wireless Earbuds, Earbuds

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.