

BASS JAXX REVERB Wireless Speaker with Cord Handle Instruction Manual

Contents

- 1 REVERB Wireless Speaker with Cord Handle
- 2 Product Information:
 - 2.1 Product Overview:
 - 2.2 Package Contents:
 - 2.3 Power On/Off:
 - 2.4 Pairing with Mobile Device:
 - 2.5 Reconnecting with Mobile Device:
 - 2.6 Charging the Speaker:
 - 2.7 Technical Specifications:
 - 2.8 Frequently Asked Questions (FAQ):
 - 2.9 Documents / Resources

REVERB Wireless Speaker with Cord Handle

Product Information:

Date	18 JUL 2023
Product	SP-0227 IM
Size	322.5(w) x 100(h) mm
SKU	

Product Overview:

The Reverb Wireless Speaker is a portable speaker with a cord handle. It features a water-resistant design (IPX4) and offers wireless connectivity through Bluetooth. The speaker also has a built-in FM radio mode and comes with a USB Type-C charging port.

Package Contents:

- 1(One) Reverb Wireless Speaker – Size: 3.54in. x 7.87in. x 3.54in. (8.5cm x 23cm x 8.5cm)
- 1(One) Charging Cable – Length: 11.8in. (30cm)
- 1(One) Instruction Manual

Power On/Off:

To power on the speaker, press and hold the Power Button for 2 seconds. To power off the speaker, press and hold the Power Button for 2 seconds. It is recommended to always power off the speaker when not in use.

Pairing with Mobile Device:

1. Ensure that the wireless speaker and your mobile device are within 32.8 feet of each other.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your mobile device and select "BT REVERB SPK" from the list of available devices.
4. You will hear a beep sound when the pairing is successful.

Reconnecting with Mobile Device:

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Charging the Speaker:

For safety reasons, always use a 5V output charger/adaptor to charge the product. Do not use a Quick Charging USB Adapter, as it may damage the product.

1. Use the provided USB Type-C charging cable.
2. Open the water-resistant cover and connect the USB plug to a USB port on a computer or wall adapter.
3. Connect the USB Type-C plug to the charging port on the speaker to begin charging.
4. The LED Indicator will turn red while charging and will turn off once fully charged.

Technical Specifications:

Driver Diameter	52 mm
Impedance	4 Ohms
Power Supply	Li-ion Battery 3.7V 300 mAh
Playtime	1.5-2 Hours
Charging Time	1.5-2 Hours
Bluetooth Range	32.8 Feet
Bluetooth Version	5.3
USB Type-C Charging Cable Included	Yes
FM Radio Mode	Yes
IPX4 Water Resistant	Yes

Frequently Asked Questions (FAQ):

If the wireless speaker cannot be paired with your device, please try the following:

- Ensure that your speaker is in pairing mode or reconnection mode.
- Ensure that the Bluetooth search function of your mobile device is activated.

If the wireless speaker cannot be recharged:

- If using a power outlet, ensure that the power supply is securely connected and the outlet works.
- If using a computer, ensure that it is connected and the USB port is powered.

FCC STATEMENT:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

[View Fullscreen](#)

Date: 18 JUL 2023 Product: SP-0227 IM
SP-0227 IM
Size: 322.5(w) x 100(h) mm

SKU:

Product Overview

Front

Back

REVERB
WIRELESS SPEAKER
WITH CORD HANDLE
Instruction Manual

Thank you for purchasing the Reverb Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using.

WATER IPX4 RESISTANT

USB

1 2 3 4

1. Volume Down/Previous Song Button 2. Power/Bluetooth/FM Radio Mode Button 3. Volume Up/Next Song Button 4. Water Resistant Cover
(Inside have USB Type-C Charging Port)

LED

Indicator

DC 5V

When open the water resistant cover

Package Contents

Includes: 1(One) Reverb Wireless Speaker 3.54in. x 7.87in. x 3.54in. (8.5cm x 23cm x 8.5cm) 1(One) Charging Cable 11.8in. (30cm) / 1(One) Instruction Manual

Power On/Off

Power on: Press and hold 2 second on the Power Button. Power off: Press and hold 2 second on the Power Button. Note: Always power off the speaker when not in use.

Pair Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet. 2. Power on the wireless speaker. 3. Activate the Bluetooth function on your phone within range and select "BT REVERB SPK" from the list shown. 4. You will hear a beep sound when pairing is successful.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Charging your Wireless speaker

For your safety, please always use appropriate 5V output charger/ Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with this wireless speaker. 2. Open the water resistant cover, connect the USB plug to a USB port on

a computer or wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker to begin charging. 3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE: · You must select a qualified charger from a regular manufacturer. · You must charge the Wireless speaker if it has been not used for more than 6 months.

USB Plug

USB Type-C Charging Plug

CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

Bluetooth Speaker Mode

Play/Pause: Short press the Power Button once. Next Track: Short press the "+" Button Previous Track: Short press the "" Button Volume Up: Long press the "+" Button Volume Down: Long press the "-" Button

FM Radio Mode

Switch to FM Radio Mode: Short press the Power Button 2 times. Short press the Power Button 2 times again will back to Bluetooth Speaker mode. Auto Scan: Short press the Power Button. Next Channel: Short press the “+” Button Previous Channel: Short press the “-” Button Volume Up: Long press the “+” Button Volume Down: Long press the “-” Button

Technical specification

Specifications: Driver Diameter: 52 mm Impedance: 4 Ohms Power Supply: Li-ion Battery 3.7V 300 mAh
Playtime: 1.5-2 Hours Charging Time: 1.5-2 Hours Bluetooth Range: 32.8 Feet Bluetooth Version: 5.3 USB Type-C Charging Cable Included FM Radio Mode IPX4 Water Resistant

FAQ

If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.
If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/TV technician for help.

Safety instructions for the lithium battery and charging the product

-The input voltage to the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adaptor for charging the product. -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F. – Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADM5-SP-0227

Keep All Relevant Information For Future Reference

ITEM# SP-0227

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106

Made in China

Approval:

Date:

Documents / Resources

	<p>BASS JAXX REVERB Wireless Speaker with Cord Handle [pdf] Instruction Manual SP-0227, REVERB Wireless Speaker with Cord Handle, Wireless Speaker with Cord Handle, S peaker with Cord Handle, Cord Handle</p>
---	--

[Manuals+.](#)