



BASS JAXX SP-0242 Pulsewave Wireless Speaker Instruction Manual

[Home](#) » [BASS JAXX](#) » BASS JAXX SP-0242 Pulsewave Wireless Speaker Instruction Manual 

Contents

- [1 BASS JAXX SP-0242 Pulsewave Wireless Speaker](#)
- [2 Instruction](#)
- [3 Product Overview](#)
- [4 Package Contents](#)
- [5 Bluetooth Speaker Mode](#)
- [6 Technical Specification](#)
- [7 FCC STATEMENT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



BASS JAXX SP-0242 Pulsewave Wireless Speaker



Package Contents

- 1 Wireless Speaker (Size: 14.2in. x 7.7in. x 5.9in.)
- 1 USB Type-C Charging Cable (Length: 19.7in.)
- 1 Instruction Manual

Power On/Off

To power on the speaker, press and hold the On/Off/Mode Button for 2 seconds. To power off the speaker, press and hold the On/Off/Mode Button for 4 seconds. It is recommended to always power off the speaker when not in use.

Pairing with Mobile Device

1. Ensure that the wireless speaker and your mobile device are within 32.8 feet of each other.
2. Power on the wireless speaker. The Status Indicator will start flashing, indicating it is ready for pairing.
3. Activate the Bluetooth function on your mobile device and search for available devices.
4. Select "SP-0242 SPK" from the list of available devices.
5. You will hear a beep sound when pairing is successful. The Status Indicator will stop flashing and remain on.

Charging the Wireless Speaker

For safety reasons, always use an appropriate 5V output charger/adaptor to charge the product. Do not use a Quick Charging USB Adapter.

1. Use the provided USB Type-C charging cable.
2. Connect the USB plug to a wall adapter.
3. Connect the USB Type-C plug to the charging port on the speaker.
4. The LED Indicator will turn red while charging and will turn off once fully charged.

Bluetooth Speaker Mode

In Bluetooth Speaker Mode, you can control playback and adjust volume.

- Play/Pause: Short press the Play/Pause Button once.
- Next Track: Short press the Next Song Button.
- Previous Track: Short press the Previous Song Button.
- Volume Up: Long press the Volume Up Button.
- Volume Down: Long press the Volume Down Button.

FM Radio Mode

In FM Radio Mode, you can switch between Bluetooth Speaker and FM Radio Mode and control channel scanning and selection.

- Mode Change: Short press the Mode Button once to toggle between Bluetooth Speaker and FM Radio Mode.
- Scan Channels: Short press the Play/Pause Button once to scan all available channels. The Status Indicator will flash during scanning.
- Next Channel: Short press the Next Channel Button.
- Previous Channel: Short press the Previous Channel Button.
- Volume Up: Long press the Volume Up Button.
- Volume Down: Long press the Volume Down Button.

Reconnecting with Mobile Device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

FAQ

Q: What is the playtime of the wireless speaker?

A: The playtime of the wireless speaker is approximately 1.5-2 hours.

Q: Can I use a Quick Charging USB Adapter to charge the product?

A: No, it is not recommended to use a Quick Charging USB Adapter as it may damage the product. Please use an appropriate 5V output charger/adaptor.


Q: What is the Bluetooth range of the wireless speaker?

A: The Bluetooth range of the wireless speaker is 32.8 feet.

Instruction

Thank you for purchasing the Pulsewave Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using.

Product Overview

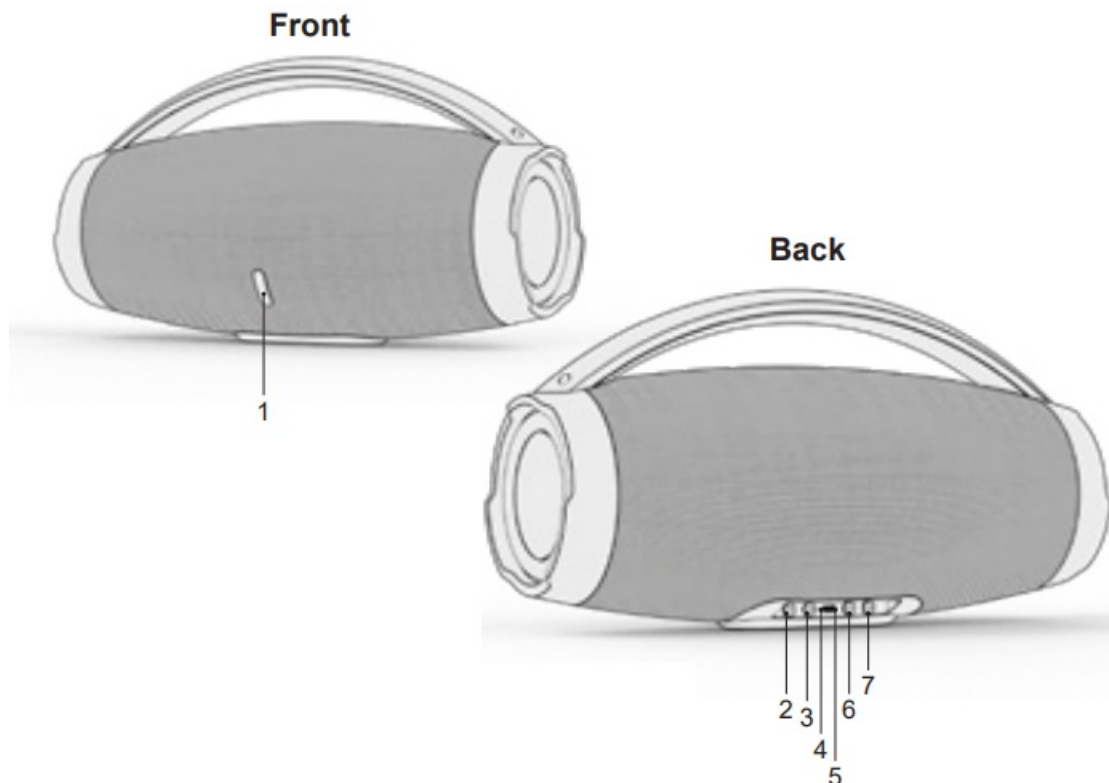

1. Status Indicator
2. On/Off/Mode Button
3. Play/Pause Button
4. LED Indicator
5. USB Type-C Charging Port
6. Volume Down/Previous Song/ Previous Channel Button
7. Volume Up/Next Song/Next Channel Button

Package Contents

- 1(One) Wireless Speaker 14.2in. x 7.7in. x 5.9in. (36cm x 19.5cm x 15m)
- 1(One) USB Type-C Charging Cable 19.7in. (50cm)
- 1(One) Instruction Manual

Power on / Power off

- Power on: Press and hold 2 second on the On/Off Button.
- Power off: Press and hold 4 second on the On/Off Button. Note: Always power off the speaker when not in use.

Pair a Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless speaker. And the Status Indicator will flashing when ready for pair.
3. Activate the Bluetooth function on your phone within range and select “SP-0242 SPK” from the list shown.
4. You will hear a beep sound when pairing is successful. And the Status Indicator will stop flashing and keep On.

Charging your Wireless speaker

For your safety, please always use appropriate 5V output charger/ Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with this wireless speaker.
2. Connect the USB plug to a wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:

You must select a qualified charger from a regular manufacturer. You must charge the Wireless speaker if it has been not used for more than 6 months.



CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

Bluetooth Speaker Mode

- Play/Pause: Short press the Play/Pause Button once.
- Next Track: Short press the Next Song Button
- Previous Track: Short press the Previous Song Button
- Volume Up: Long press the Volume Up Button
- Volume Down: Long press the Volume Down Button

FM Radio Mode

- Mode Change: Short press the Mode Button once to toggle between Bluetooth Speaker and FM Radio Mode.
- Scan Channels: Short press the Play/Pause Button once to scan all available channels. The Status Indicator will flashing when scanning channels.
- Next Channel: Short press the Next Channel Button.
- Previous Channel: Short press Previous Channel Button.
- Volume Up: Long press the Volume Up Button.
- Volume Down: Long press the Volume Down Button.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Technical Specification

- Driver Diameter: 102 mm

- Impedance: 4 Ohms
- Power Supply: Li-ion Battery 3.7V 400 mAh
- Playtime: 1.5-2 Hours
- Charging Time: 1.5-2 Hours
- Bluetooth Range: 32.8 Feet
- Bluetooth Version: 5.3
- Output Power: 5 Watt
- USB Type-C Charging Cable Included
- USB Type-C Charging Cable Rating 5V/1A Max.

FAQ

If the Wireless speaker cannot be paired with your device, please try the following:

- Ensure that your speaker is in pairing mode or reconnection mode.
- Ensure that Bluetooth search function of your mobile device is activated.

If the Wireless speaker cannot be recharged:

- If you use a power outlet, ensure that the power supply is connected securely and the outlet works.

Safety instructions for the lithium battery and charging the product

- The input voltage to the product is DC 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.
- Do not heat above 70°C/ 158°F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Keep All Relevant Information for Future Reference Distributed by 1616 Holdings, Inc. Philadelphia, PA 19106

Documents / Resources

	BASS JAXX SP-0242 Pulsewave Wireless Speaker [pdf] Instruction Manual SP-0242 Pulsewave Wireless Speaker, SP-0242, Pulsewave Wireless Speaker, Wireless Speaker, Speaker
---	--

References

- [User Manual](#)