



BATRIBIKE Graphic Display Control System Owner's Manual

[Home](#) » [BATRIBIKE](#) » BATRIBIKE Graphic Display Control System Owner's Manual 

Contents

- [1 BATRIBIKE Graphic Display Control System](#)
- [2 DISPLAY](#)
- [3 THROTTLE](#)
- [4 ASSIST FUNCTIONS](#)
- [5 WHEEL SIZE SETTINGS](#)
- [6 DISPLAY SETTINGS](#)
- [7 TROUBLESHOOTING](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

BATRIBIKE®
ELECTRIC BICYCLES

BATRIBIKE Graphic Display Control System



DISPLAY

The display is accessed with 5 buttons and the throttle from the left side of the handlebar. The display is mounted on the stem. Read this guide for more information about display and bike functionality.

ILLUSTRATION 1: DISPLAY LAYOUT



THROTTLE

When the throttle is turned then the assist functionality is by-passed and the “Booster effect” is activated. Release the throttle and the system returns to assist mode. Using the throttle is suitable in heavy traffic where short bursts of extra power is required e.g. in situations with overtaking of slow cyclists.



ASSIST FUNCTIONS

The system has two assist function options. The assist function will show in the display, when selected:

- Assist level 1–5. Select by using the “Up” and “Down” buttons
- “Walk-Assist” function is activated by holding the down button or by using the throttle without pedalling. When “Walk Assist” is activated then the bike travels at 6 km/h. (4 mph)
“Walk-Assist” is usable if you need help to push the bike up a hill.

DISPLAY INFO

Toggle between the following in the display “Bike info” with the “Menu” button

- Total distance
Trip distance
- Trip time
- Remaining distance
- Bike power
- Clock

BIKE INFO

Information about the bike and trip(s) is found in the “info” menu.

1. Press “Menu” down until the main menu is displayed
2. Go to “Info” with “Up” or “Down” – Select with “Menu”
3. Go to “Bike” with “Up” or “Down” – Select with “Menu”
4. When the sub menu “Bike” is selected, it is possible to see the following info:
 1. Total distance
 2. Trip distance

3. Trip time
4. Average speed
5. Max speed

All values except “Total Distance” can be reset.

- In the “Bike” sub menu, go to the information you want to reset with “Up” or “Down” – Select the “Menu”. Reset the value by selecting “Reset” in the display with “Menu”
- Return to the main display by pressing the “Menu” button down for 2 seconds or by selecting the “back” arrow in the display with “Menu”

WHEEL SIZE SETTINGS

Setting wheel size


1. Press “Menu” down until the main menu is displayed
2. Go to “Bike Settings” with “Up” or “Down” – Select with “Menu”
3. Go to “Wheel Size” with “Up” or “Down” – Select with “Menu”
4. Adjust the value with “Up” or “Down” to match the circumference of the wheel, press “Menu” to save. Now the speed will be displayed correctly
5. Return to the main display by pressing the “Menu” button down for 2 seconds or by selecting the “back” arrow in the display with “Menu”

The speed display can be adjusted by changing the wheel size. The wheel size is found by measuring the inner circumference of the tyre or by reading the numbers on the side of the tyre.

(Check the table below for reference)

TO (European Tyre and Rim Technical Organization):

ETRTO	TYRE	LENGTH
40-406	20x1.50	1490
47-406	20x7.75	1515
50-406	20x1.95	1565
47-507	24x1.75	1890
50-507	24x2.00	1925
54-507	24x2.125	1965
40-559	26x1.50	2010
47-559	26x1.75	2023
50-559	26x1.95	2050
54-559	26x2.10	2068
35-622	700x35C	2168
38-622	700x38c	2180
40-622	700x40C	2200
42-622	700x42C	2224
44-622	700x44C	2235
45-622	700x45C	2242
47-622	700x47C	2268

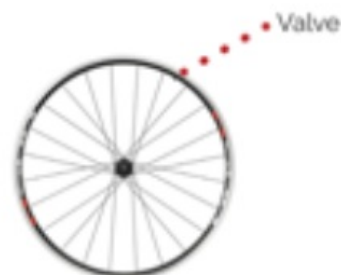

DISPLAY SETTINGS

You can toggle between km/h or mph in the display:

1. Press "Menu" down until the main menu is displayed
2. Go to "Display" with "Up" or "Down" – Select with "Menu"
3. Go to "Units" with "Up" or "Down" – Select with "Menu"
4. Select "Imperial" for miles, inch, etc. Save by pressing "Menu" down
5. Select "Metric" for km, cm, etc. Save by pressing "Menu" down
6. Return to the main display by pressing the "Menu" button down for 2 seconds or by selecting the "back" arrow in the display with "Menu"

BACK LIGHT SETTINGS

It is possible to toggle two back light settings in the display. Day setting is used if the "Light" is off. Night setting is used if the "Light" is on. Both light settings can be adjusted from 1–10 with 10 as the highest value.

1. Press "Menu" down until the main menu is displayed
2. Go to "Display" with "Up" or "Down" – Select with "Menu"
3. Go to "Back Light" with "Up" or "Down" – Select with "Menu"
4. Go to "Day" or "Night" with "Up" or "Down" – Select with "Menu"
5. Adjust the intensity value with "Up" or "Down" and press "Menu" to save
6. Return to the main display by pressing the "Menu" button down for 2 seconds or by selecting the "back" arrow in the display with "Menu"

TIME AND DATE SETTINGS

1. Press "Menu" down until the main menu is displayed
2. Go to "Clock" with "Up" or "Down" – Select with "Menu"
3. Go to "Adjust Date and Time" with "Up" or "Down" – Select with "Menu"
4. Go to "Adjust Date" with "Up" or "Down" – Select with "Menu" to adjust the "Adjust Date" settings
5. Adjust the value with "Up" or "Down" – select with "Menu" and continue to next value
6. Go to "Time" with "Up" or "Down" – Select with "Menu" to adjust the "Time" setting
7. Adjust the value with "Up" or "Down" – select with "Menu" and continue to next value
8. Return to the main display by pressing the "Menu" button down for 2 seconds or by selecting the "back" arrow in the display with "Menu"

TIME FORMAT

1. Press "Menu" down until the main menu is displayed
2. Go to "Clock" with "Up" or "Down" – Select with "Menu"
3. Go to "Time Format" with "Up" or "Down" – Select with "Menu" to adjust the "Time Format" settings
4. Go to the desired time format with "Up" or "Down" – Select with "Menu"
5. Return to the main display by pressing the "Menu" button down for 2 seconds or by selecting the "back" arrow in the display with "Menu"

ASSIST TYPE

Dependant on the electrical system installed on your bike, there are 2 different system options. Each system includes 3 different assist types:

Pedal speed sensor system

- Speed mode.
- ECO mode.
- Set distance.

Pedal torque sensor system

- Normal mode.
- Torque mode.
- Set distance.

Changing assist type:


1. Press “Menu” down until the main menu is displayed
2. Go to “Driving mode” with “Up” or “Down” – Select with “Menu”
3. Toggle the assist type with “Up” or “Down” – Select and save with “Menu”
4. Return to the main display by pressing the “Menu” button down for 2 seconds or by selecting the “back” arrow in the display with “Menu”

Conditions that may affect system capacity and performance:

- Tyre pressure
- Temperature
- Wind and weather
- Load including user weight
- Charging the battery

SPEED MODE

At a given “Assist Level” the system will supply full driving force up to the selected speed level

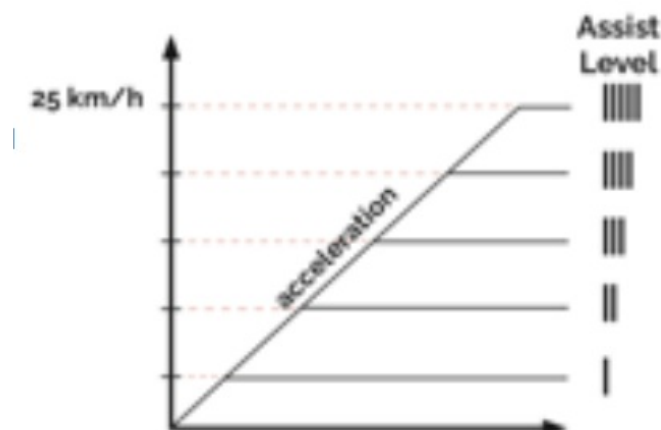

Usability


- Smooth ride

NORMAL + ECO MODE

At a given “Assist level” the system will supply a specified amount of driving force between 0 – 25km/h (0 – 15.5 mph)

Usability

- Variable speed
- Relaxed ride

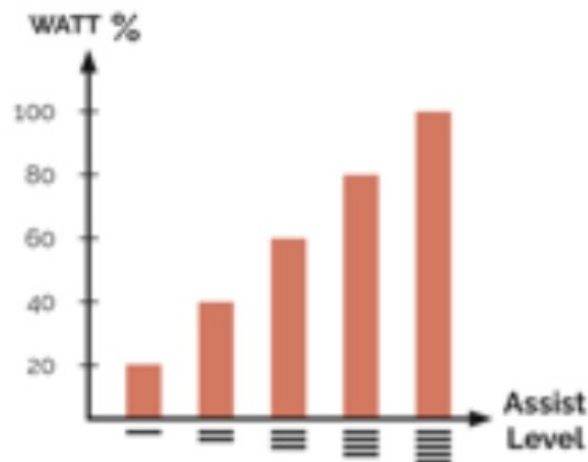


TORQUE MODE

The system provides driving force to the bike according to the amount of force applied to the pedals. At assist level 1 the user will need to provide more effort than at level 5 to reach the same speed.

Note: Available on centre motors with torque sensor only. Selecting higher gears enables the user to provide propulsion to the bike easier.

Usability

- Variable speed
- More usability

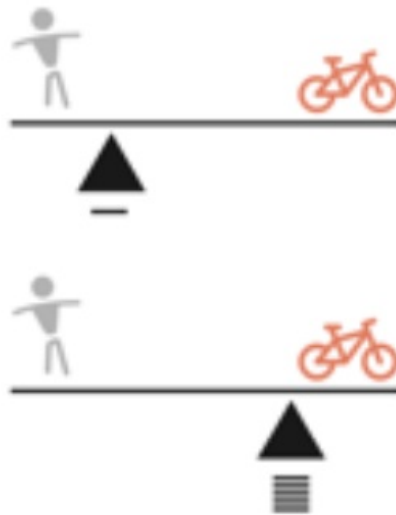


SET DISTANCE

By setting a distance the system will manage power consumption and motor assistance for the entire ride ensuring the entered distance will be reached.

Usability

When trip length exceeds battery capacity.

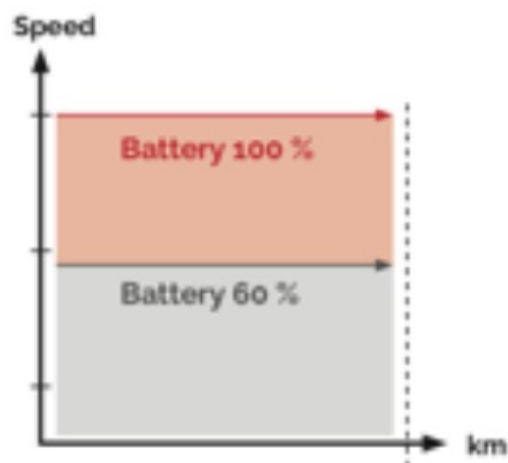

TROUBLESHOOTING

Errors are displayed with a code and a description in the display info area. If an error is displayed then it is a signal about an error in the electrical system. When an error is displayed it must be remedied before the motor is able to start. Check the table below for more information covering error codes.

ERROR CODE	MEANING	SOLUTION
1	Motor error	Check that the connectors are connected (at the front fork) or contact your dealer
2	Controller error*	Contact your dealer.
3	Throttle error	Release the throttle and restart the system or contact your dealer
4	Low voltage error*	Recharge the battery
5	Front brake error	Release the brake and restart the system or contact your dealer
6	Speed sensor error*	Contact your dealer.
7	Battery malfunction*	Contact your dealer.
8	System overload*	Reduce the load Restart the system or contact your dealer
9	Communication error*	Contact your dealer.
10	High voltage error	Contact your dealer.
11	Display error*	Contact your dealer.

www.batribike.com



Batribike Limited


- Unit 4, Ingleby Grange Ingleby
- Lincoln
- LN1 2PQ
- Phone: 01427 787774

- E-mail: support@batribike.com



BATRIBIKE are
Members of the
Bicycle Association
of Great Britain

Documents / Resources

 The image shows the cover of the BATRIBIKE Graphic Display Control System Owner's Manual. It features a black and white photograph of the control system unit and a small inset image of a bicycle handlebar with the unit installed. The text on the cover includes "GRAPHIC DISPLAY CONTROL SYSTEM", "OWNER'S Manual", "COMPATIBLE WITH CONNECT+", "BATRIBIKE ELECTRONICS", and "Quality Design and Build".	<p>BATRIBIKE Graphic Display Control System [pdf] Owner's Manual Graphic Display Control System</p>
---	---

References

- [B Home - BATRIBIKE Electric Bicycles](#)
- [B Home - BATRIBIKE Electric Bicycles](#)

Manuals+.