



BATTAT 22D24R15 Remote Control Front End Loader Instruction Manual

[Home](#) » [BATTAT](#) » BATTAT 22D24R15 Remote Control Front End Loader Instruction Manual 

Contents

- [1 BATTAT 22D24R15 Remote Control Front End Loader](#)
- [2 TO START PLAYING](#)
- [3 Troubleshooting](#)
- [4 User Guide](#)
- [5 BATTERY ADVICE](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



BATTAT 22D24R15 Remote Control Front End Loader



TO START PLAYING

1. Make sure the ON/OFF switch on the front-end loader and remote are on the ON position (Fig. 1 & Fig. 2).
2. Press lights & sounds button on the front-end loader, as indicated in Fig. 4, then press ignition button on the remote, as indicated in Fig. 3.
3. The front-end loader will automatically go into sleep mode after 2 minutes of inactivity to save power. Wake up by pressing the lights & sounds button on the front-end loader, as indicated in Fig. 4. and remote ignition button as indicated in Fig.3.
4. In case the front-end loader disconnects from the controller, switch the vehicle and the controller OFF, then switch them back ON again (Fig. 1 & Fig. 2). Continue with step 2.

FIG. 1

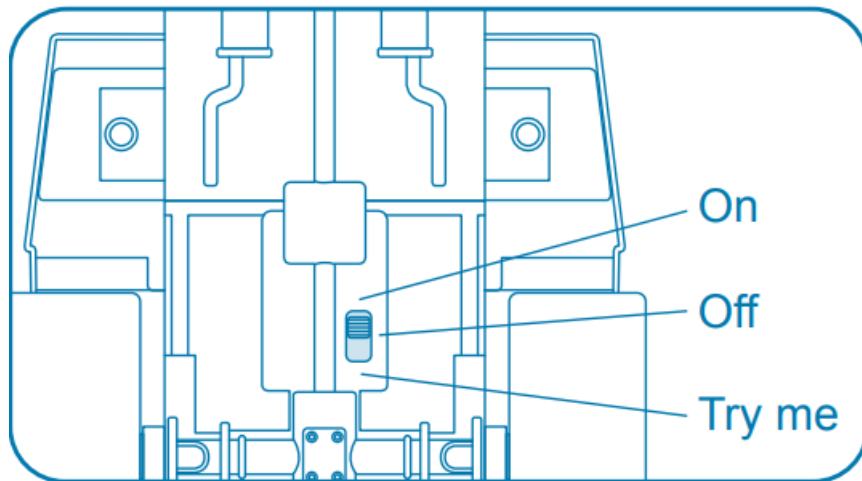 


FIG. 2

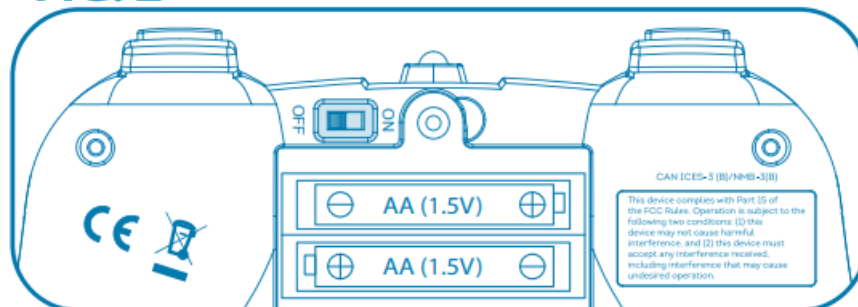 


FIG. 3




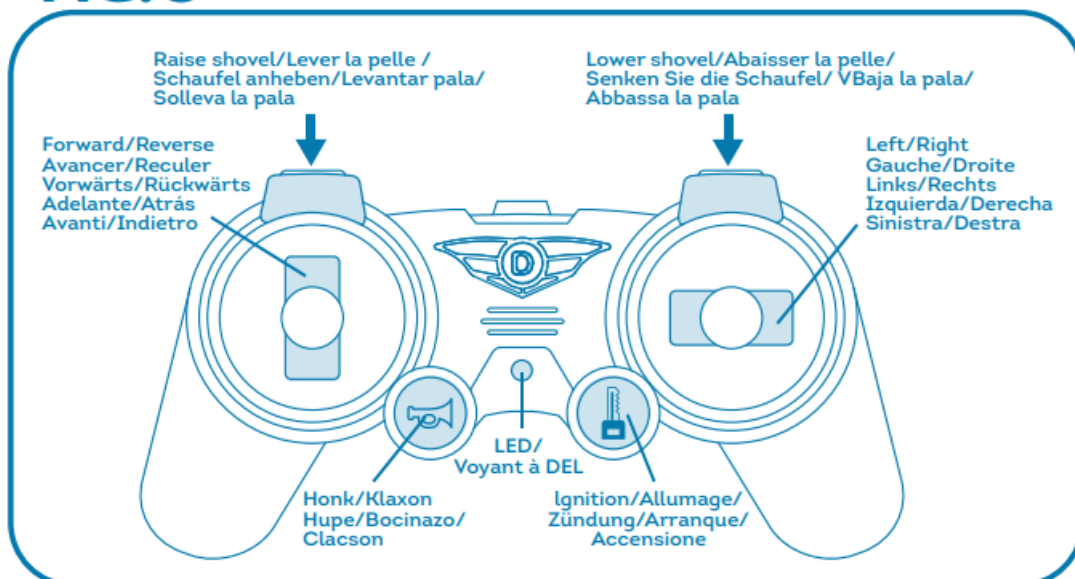


FIG. 4

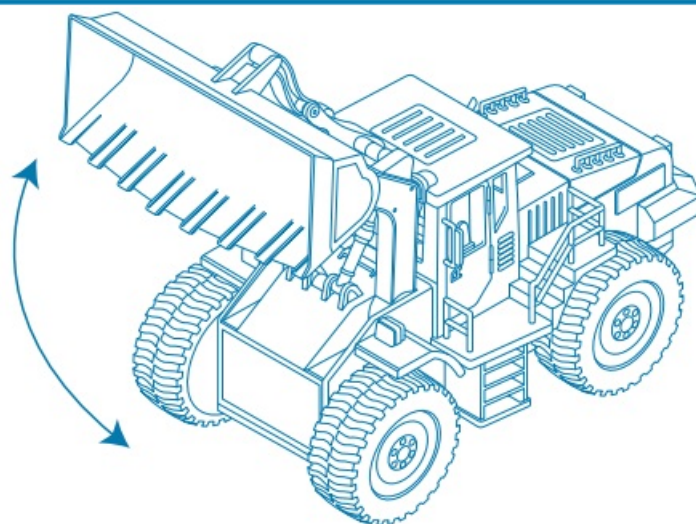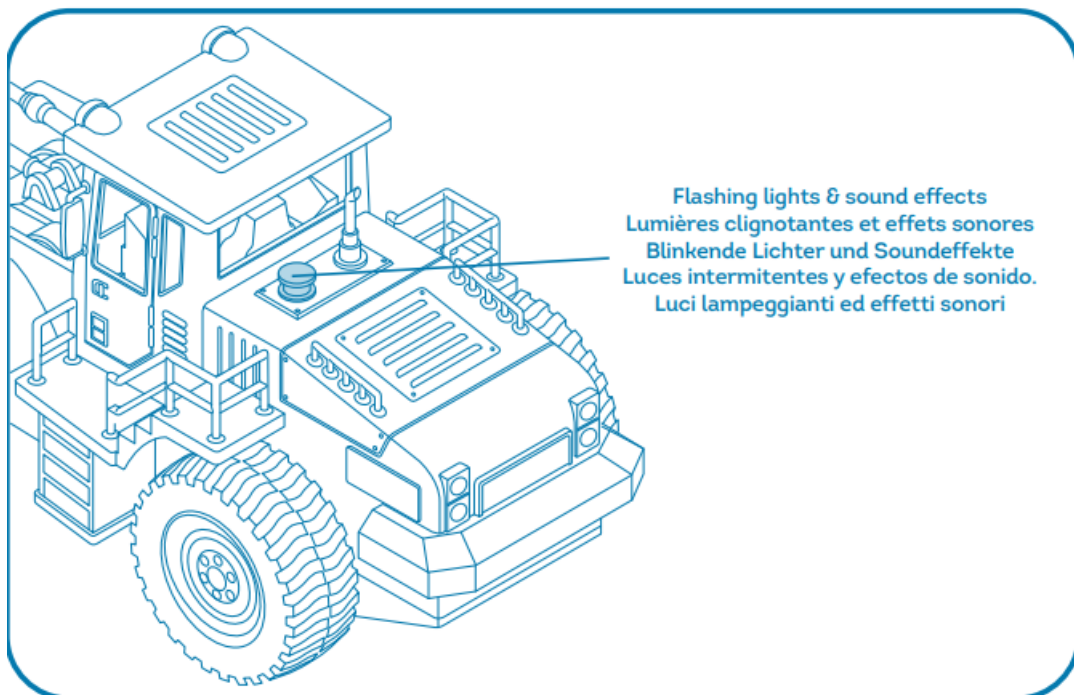

Troubleshooting

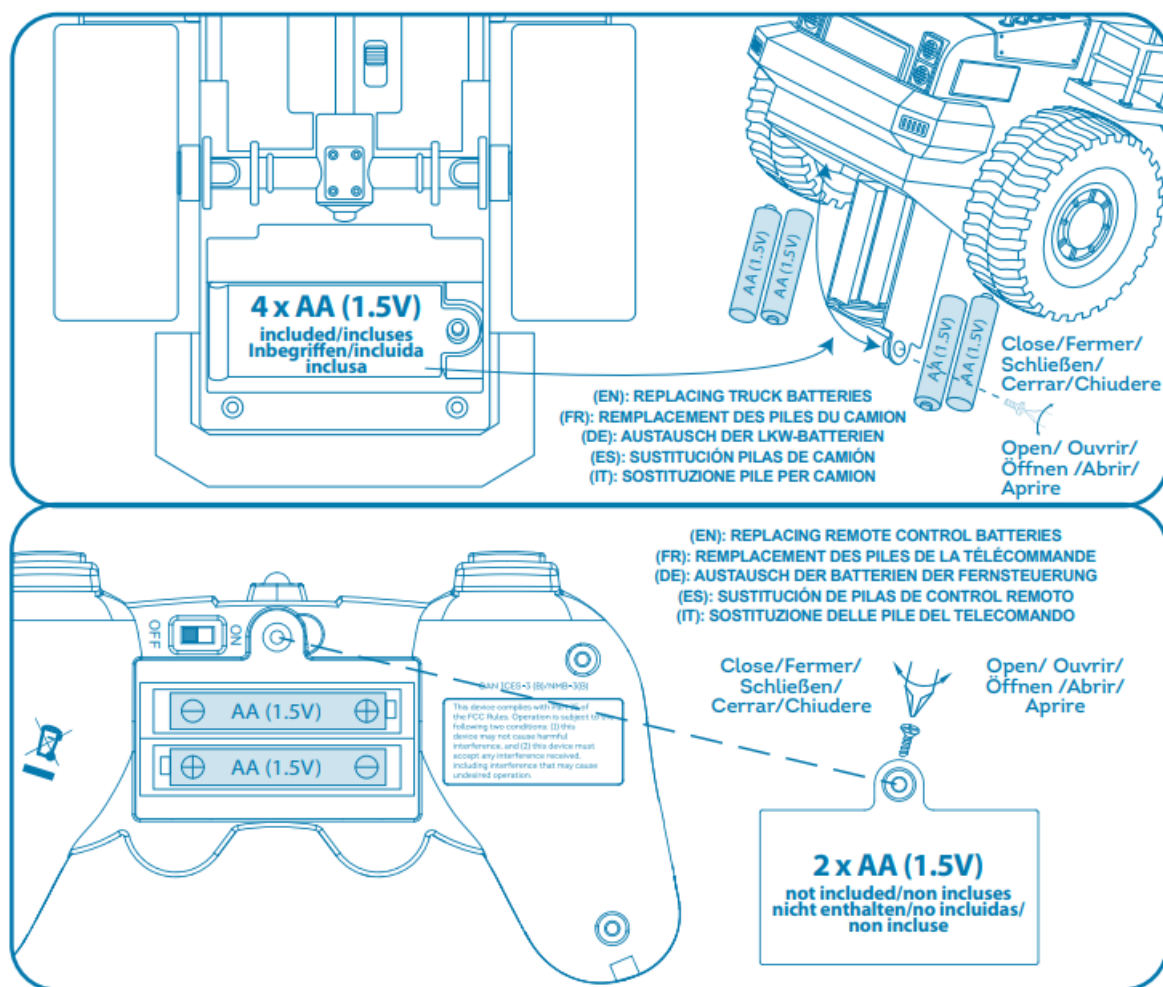

Frequency bands: 2405MHz-2475MHz
Maximum radio-frequency power: 5dbm
 Use alkaline batteries for longer play time.

WARNING!: SMALL PARTS – CHOKING HAZARD. Not suitable for children under 3 years.

User Guide

1. Do not use near seawater or in dirty and dusty environments. For indoor play only.
2. Do not use in the rain or immediately after rainfall.
3. If the front-end loader gets wet, open the battery compartment immediately, remove batteries, and turn the vehicle upside down to dry.
4. Always clean and dry the vehicle and remote after using outdoors to avoid damage.
5. Don't load over 300g to avoid shovel arm lifting damage.
6. The remote's control distance may be reduced when using indoors.
7. The vehicle's remote control may not work after long storage. Follow next steps to restart:
 - A) Always replace the batteries in the front-end loader with 4 new AA alkaline batteries (Fig. 1).
 - B) Follow steps 1 and 2 on first page to start playing.
 - C) If the front-end loader does not work, put 2 new AA alkaline batteries in the remote (Fig. 2).
 - D) Follow steps 1 and 2 on first page to start playing.

BATTERY ADVICE

Requires 4 x AA (1.5V) batteries for the truck (included). Requires 2 x AA (1.5V) batteries for the remote control (not included). Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development

FCC


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Documents / Resources

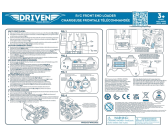	BATTAT 22D24R15 Remote Control Front End Loader [pdf] Instruction Manual 22D24R15, SLU22D24R15, 22D24R15 Remote Control Front End Loader, Remote Control Front End Loader, Front End Loader, Loader, 22D24R15 RC
---	--