

BAUHN®

OS1008S 2 In 1
Bluetooth
Speaker With
TWS Earbuds



BAUHN OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds Instruction Manual

[Home](#) » [BAUHN](#) » BAUHN OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds Instruction Manual 

Contents

- 1 [BAUHN OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds](#)
- 2 [Product Usage Instructions](#)
- 3 [Charging the Bluetooth Earbuds](#)
- 4 [Speaker Turn On/Off](#)
- 5 [Getting Started](#)
- 6 [Package Contents](#)
- 7 [Key Features](#)
- 8 [SAFETY INSTRUCTIONS](#)
- 9 [Description of Parts](#)
- 10 [INSTRUCTIONS FOR USE](#)
- 11 [Speaker](#)
- 12 [TWS Earbuds](#)
- 13 [Care and maintenance](#)
- 14 [Product Specifications](#)
- 15 [TROUBLESHOOTING](#)
- 16 [FCC](#)
- 17 [Documents / Resources](#)
 - 17.1 [References](#)
- 18 [Related Posts](#)

BAUHN®

BAUHN OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds



Specifications

- Product Name: Bluetooth Speaker with TWS Earbuds 2-In-1
- Model Number: 710865
- Key Features:
 - New Bluetooth Speaker with TWS Earbuds
 - 2-in-1 design, small and portable
 - Built-in 5W speaker for amazing sound
 - TWS Earbuds with great sound and bass
 - Rechargeable battery with included charging cable
 - USB slot, TF card slot, Aux in with included cables

Product Usage Instructions

Getting Started

Remove the product from the packaging. Retain all packaging until you have checked and counted all parts

against the Package Contents list.

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water, and liquids. Do not operate if exposed to water or moisture. Avoid using wet hands. Keep free from dust and lint. Do not use for anything other than intended purpose.

Description of Parts

- Micro SD (TF) card slot
- Aux-in port
- Charging LED indicator for Speaker

Instructions for Use Charging the Speaker

1. Connect Type-C charging cable to DC 5V port of speaker and other end to power source.
2. Red LED indicates charging. When fully charged, LED turns off (takes about 3 hours).

Charging the Bluetooth Earbuds

1. After speaker is charged, put Earbuds in correct slots.
2. Charging LED for Earbuds turns green. Red LED on Earbuds indicates charging (takes about 1.5 hours).

Speaker Turn On/Off

Long press ON/OFF button to turn speaker on/off.

FAQ

Q: How do I pair the Bluetooth Earbuds with a device?

A: To pair the Earbuds, ensure they are fully charged, then turn them on and follow the device's Bluetooth pairing instructions.

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Getting Started

- Remove the product from the packaging.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Bluetooth Speaker with TWS Earbuds 2-In-1
- Type-C Charging Cable
- 3.5mm Aux Cable
- Instruction Manual

Key Features

- New Bluetooth Speaker that comes together with TWS Earbuds
- Creative 2-in-1 design, small and portable
- Speaker with built-in 5W speaker that delivers amazing sound
- TWS Earbuds with great sound and bass
- TWS Earbuds small and elegant fits well in your ears
- Rechargeable battery, charging cable included
- USB slot
- TF card slot
- Aux in, Aux cable included

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent electric shock, explosion, and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

Description of Parts



Number	Item	Number	Item
1	Micro SD (TF) card slot	9	Volume decrease – / Previous track
2	Aux-in port	10	Left Earbud charging slot
3	Charging LED indicator for Speaker	11	Charging LED indicator for TWS Earbuds
4	USB slot	12	Right Earbud charging slot
5	Charging port	13	Touch pad of Earbud (Multi-function)
6	Volume increase + / Next track	14	LED indicator on TWS Earbuds
7	On/Off button	15	Built-in microphone
8	Play/Pause / Phone / Scan / Mode button	16	Charging connectors of Earbuds

INSTRUCTIONS FOR USE

Charging the Speaker

For best results, fully charge the unit before use.

1. Connect the Type-C charging cable (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take about 3 hours to fully charge the battery.

To charge the Bluetooth Earbuds

1. After fully recharging the speaker, disconnect it from charging.
2. Put the Bluetooth Earbuds into their respective charging slots correctly.

3. The charging LED indicator for the TWS Earbuds turns green and the LED indicator on Earbuds turns red to indicate that the battery of the Earbuds is being charged. It takes about 1.5 hours for the Earbuds to fully charge. When the battery is fully charged, the red LED indicator light on Earbuds will turn off, and the charging LED indicator for the TWS Earbuds will also turn off.

Speaker

Turn On/Off the Speaker

Long press the ON/OFF button to turn on/off the speaker.

Pairing your device with the Speaker

Your Bluetooth Speaker can stream audio from any Bluetooth-enabled device within the range of up to 33 feet. Simply follow the below steps.

1. Turn ON the speaker.
2. An indication would be heard, and white LED flashes rapidly. The speaker is now entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. The Bluetooth Speaker would appear as "BAUHN SPEAKER", in the list of searched devices. Select it from the available list of devices.
6. You might be prompted with "Pair with BAUHN SPEAKER?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
7. If required, enter the password '0000' to confirm pairing.
8. Once paired successfully, an indication tone would be heard, and white LED will stay on.
9. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.
Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Press and hold the volume increase/decrease button.
Pause	Playing music	Short press Play/Pause button once to pause music
Play	Pause	Short press Play/Pause button once to resume music

Previous track	Playing music	Short press the Previous track button to the previous track
Next track	Playing music	Short press the Next track button to the next track

Note: An indication tone will alert you when the volume is adjusted to maximum level.

Making a call with the Bluetooth Speaker in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Short press the Phone button to answer an incoming call
Reject Incoming Call	Incoming Call	Short press the Phone button twice
End a call	Incoming Call	After your phone conversation, short press the Phone button.
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or Micro SD (TF) card into the Micro SD (TF) card slot accordingly.
Music would play automatically.
3. Short press the Next track button or Previous track button to move forward or backward on your playlist.
4. Short press Play/Pause button to Play or Pause a track.

Note: USB / Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3, WAV. USB Flash Drive or Micro SD (TF) Card not included.

Listening to FM radio

1. Turn on the speaker.
2. Connect the Type-C charging cable (included) to the DC 5V charging port of the speaker, and leave the other end of the cable open. This cable serves as FM antenna for better reception.
3. Long press the Mode button for 2 seconds, until it reaches FM radio mode with sound from a FM radio station.
4. Short press the Scan button once for searching and record all radio stations within the frequency range 87.5-108MHz.
5. Short press the Next Track button or Previous Track button to listen next or previous already saved radio station.

Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the speaker.
3. Plug the other end of the cable to the audio device (such as computer/tablet / MP3 Player etc.).
4. Select your favorite song at the source device to play.

(**Note:** While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

Tips!!

1. Long press the Mode button to switch different functions of the speaker. The functions are – Bluetooth / AUX / FM / USB-Micro SD (TF).
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

TWS Earbuds

Turning on/off the Bluetooth Earbuds

- Take out the Earbud from the speaker, it will turn on automatically. (Or, if the Earbud is not stored inside the speaker, long press the Touch Pad of the Earbud for 4 seconds and release to turn ON.)
- Put the Earbud back to the speaker, it will turn off for recharging automatically. (Or, Earbud will also turn off, if taking it out from the speaker and not Bluetooth pairing to any device for few minutes.)

Pairing both Bluetooth Earbuds with Bluetooth devices (phone or tablet that support call-answering)

- Take out both Earbuds from the speaker, it will turn on automatically and the LED flashes blue and red.
- After few seconds, you would hear another indication tone when both Earbuds connected together.
The LED light indicator on one Earbud will flash blue and red, and the LED light indicator on the other Earbud will turn off.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the “BAUHN TWS” from the list of available Bluetooth devices.
- You might be prompted with “Pair with BAUHN TWS?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- Once paired successfully, an indication tone will be heard and the LED on both units will turn off.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Touch pad of one Earbud to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the Touch Pad of one Earbud.
End call	Incoming Call	After your phone conversation, short press the Touch pad of one Earbud

Note: Both Earbuds support phone conversation.

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device

Function	Operation	Button
Pause	Playing music	Short press the Touch pad of one Earbud will pause the music
Play	Pausing	Short press the Touch pad of one Earbud will resume the music
Next track	Playing music	Short press the Touch pad of one Earbud twice
Previous track	Playing music	Short press the Touch pad of one Earbud three times

Note: Other functions including volume increase/decrease will need to adjust on your device.

Pairing either one Bluetooth Earbud with Bluetooth devices (phone or tablet that support call-answering)

- Take out one Earbud from the speaker, it will turn on automatically and the LED flashes blue and red.
- Place the Bluetooth Earbud and Bluetooth device (phone or tablet that support call answering) no further than 3 feet apart from each other;
- Activate the Bluetooth function on your mobile device. Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your mobile device, select the "BAUHN TWS" from the list of available Bluetooth devices.
- You might be prompted with "Pair with BAUHN TWS?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successfully, another indication tone will be heard and the LED will turn off.
- You can now start to use the Earbud.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Bluetooth Earbud with a mobile device, the Earbud will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
- The Bluetooth Earbud will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Earbud in Bluetooth mode Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Touch pad to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the Touch pad
End call	Incoming Call	After your phone conversation, short press the Touch pad

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbud to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the Touch pad will pause the music
Play	Pausing	Short press the Touch pad will resume the music
Next track	Playing music	Short press the Touch pad twice
Previous track	Playing music	Short press the Touch pad three times

Note: Other functions including volume increase/decrease will need to adjust on your device.

Voice Assistant Operation

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with long press the Touch pad 2 seconds on your device.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device. While the Earbud is paired using Bluetooth, long press the Touch pad 2 seconds to start conversation with your Siri or Google Assistant. An indication tone may be heard before you speak into the Earbud.

- Example 1: Long press the Touch pad 2 seconds and then speak into the Earbud, how's the weather today?
Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Long press the Touch pad 2 seconds, and then speak into the Earbud, what's the time now?
Voice Assistant will reply with something like: it is 8pm now.
- More examples:
Set an alarm for 7am tomorrow.
Play some music.
What's in the news?

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.

- Do not use outdoors in wet or in damp surroundings.

Care and maintenance

- Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.
- Keep this unit away from wet or damp surroundings.

Product Specifications

Speaker

- Bluetooth version: 5.3
 - Bluetooth range: 33 feet
 - Speaker output: 5W
 - FM frequency range: 87.5-108MHz
 - Unit size: 3.47" (L) x 1.97" (D) x 4.52" (H)
 - Unit weight (including TWS Earbuds): ~12 oz
 - Power input: DC 5V
 - Charging time: About 3 hours
 - Play time: Up to 2 hours
 - Built-In Rechargeable Lithium Battery: 3.7V / 1200mAh
 - USB / Micro SD (TF) Card: Supports up to 32GB, supports music file format: MP3, WAV
- (**Note:** Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TWS Earbuds

- Bluetooth version: 5.3
- Bluetooth range: 33 feet
- Earbud size: 0.72" (L) x 0.74" (D) x 0.97" (H)
- Unit weight: ~0.1 oz/Earbud
- Power input: DC 5V
- Charging time: About 1.5 hours
- Play time: Up to 4 hours
- Built-In Rechargeable Lithium Battery: 3.7V / 30mAh

(**Note:** Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
No sound	Volume in minimum position.	Increase the volume.
	The connected device is not in play mode.	Play the music in the connected device and make sure the volume level is in high level.
Sound distortion	Input source incorrect.	Long press the MODE button to set the input source to the desired function.
	Volume level too high	Decrease the volume.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 0cm the radiator your body: Use only the supplied antenna.

Documents / Resources

	<p>BAUHN OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds [pdf] Instruction Manual OS1008S, OS1008S 2 In 1 Bluetooth Speaker With TWS Earbuds, 2 In 1 Bluetooth Speaker With TWS Earbuds, Bluetooth Speaker With TWS Earbuds, Speaker With TWS Earbuds, TWS Earbuds, Earbuds</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.