





Bauknecht Built In Oven with Pyrolysis and Steam Function User Guide

Home » Bauknecht » Bauknecht Built In Oven with Pyrolysis and Steam Function User Guide



Contents

- 1 Bauknecht Built In Oven with Pyrolysis and Steam
- **Function**
- **2 PRODUCT DESCRIPTION**
- **3 ACCESSORIES**
- **4 FUNCTIONS**
- **5 USING THE APPLIANCE FOR THE FIRST TIME**
- **6 DAILY USE**
- **7 USEFUL TIPS**
- **8 COOKING TABLE**
- 9 MAINTENANCE AND CLEANING
- 10 TROUBLESHOOTING
- 11 Documents / Resources
 - 11.1 References



Bauknecht Built In Oven with Pyrolysis and Steam Function




THANK YOU FOR PURCHASING A BAUKNECHT PRODUCT

To receive more comprehensive help and support, please register your product at www.bauknecht.eu/register. You can download the Safety Instructions and the Use and Care Guide by visiting our website docs.bauknecht.eu and following the instructions on the back of this booklet.


Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

- 1. Control panel
- 2. Fan
- 3. Circular heating element (not visible)
- 4. Shelf guides (the level is indicated on the front of the oven)
- 5. Door
- 6. Upper heating element/grill
- 7. Lamp
- 8. Identification plate (do not remove)
- 9. Lower heating element (not visible)

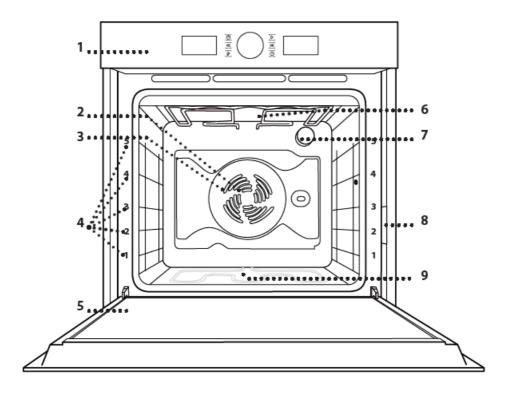

CONTROL PANEL

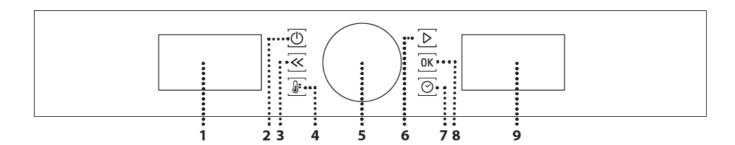

1. LEFT-HAND DISPLAY

2. ON/OFF

For switching the oven on and off and for stopping an active function at any time.

3. BACK

For returning to the previous menu when configuring settings.

4. TEMPERATURE

For setting the temperature.

5. KNOB

Select menu items and change or adjust the settings of a function.

6. START

For starting functions and confirming settings.

7. TIME


For setting or changing the time and adjusting the cooking time.

8. CONFIRM

For confirming an item you have selected or the settings for a function.

9. RIGHT-HAND DISPLAY

ACCESSORIES

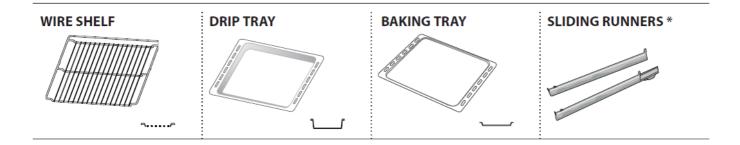


- The number of accessories may vary depending on which model is purchased.
- Other accessories can be purchased separately from the After-sales Service.
- · If present

INSERTING THE WIRE SHELF AND OTHER ACCESSORIES


- Insert the wire shelf horizontally by sliding it across the shelf guides, making sure that the side with the raised edge is facing upwards.
- Other accessories, such as the drip tray and the baking tray, are inserted horizontally in the same way as the wire shelf.

FITTING THE SLIDING RUNNERS (IF PRESENT) Please note: The sliding runners can be already mounted on the shelf guides: to remove them, pull outward, releasing first the lower clip. Remove the shelf guides from the oven and remove the protective plastic from the sliding runners.

• Fasten the upper clip of the runner to the shelf guide and slide it along as far as it will go. Lower the other clip into position.

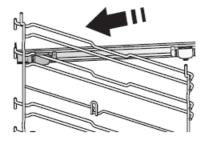

• To secure the guide, press the lower portion of the clip firmly against the shelf guide. Make sure that the runners can move freely. Repeat these steps on the other shelf guide on the same level.

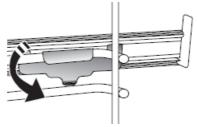

• Please note: The sliding runners can be fitted on any level.

REMOVING AND REFITTING THE SHELF GUIDES

• To remove the shelf guides, remove the fixing screws (if present) on both sides with the aid of a coin or a too, lift

the guides up and then gently pull the lower part out of its seating: the shelf guides can now be removed.

• To refit the shelf guides, first fit them back into their upper seating. Keeping them held up, slide them into the cooking compartment, then lower them into position in the lower seating. Refit the fixing screws.

FUNCTIONS



· For cooking any kind of dish on one shelf only.



• For grilling steaks, kebabs and sausages, cooking vegetables au gratin or toasting bread. When grilling meat, we recommend using a drip tray to collect the cooking juices: Position the tray on any of the levels below the wire shelf and add 500 ml of drinking water.



 For cooking different foods that require the same cooking temperature on several shelves (maximum three) at the same time. This function can be used to cook different foods without odours being transferred from one food to another.



• For cooking meat, baking cakes with fillings or roasting stuffed vegetables on one shelf only. This function uses gentle, intermittent air circulation to prevent food from drying out excessively.

AUTOMATIC FUNCTIONS



• This function automatically selects the best temperature and cooking method for pasta dishes.



This function automatically selects the best temperature and cooking method for meat. This function
intermittently activates the fan at low speed to prevent the food from drying out too much.



• The function automatically selects the best cooking mode and temperature to cook large joints of meat (above 2.5 kg). It is advisable to turn the meat over during cooking, to obtain even browning on both sides. It is best to baste the meat every now and again to prevent it from drying out.



This function automatically selects the best temperature and cooking method for all types of bread.



• This function automatically selects the best temperature and cooking method for all types of pizza.



• This function automatically selects the best temperature and cooking method for all types of cake.

SPECIAL FUNCTIONS



• For preheating the oven quickly. Once preheating has finished, the oven will select the "Conventional" function automatically. Wait for preheating to finish before placing food in the oven.



• For roasting large joints of meat (legs, roast beef, chicken). We recommend using a drip tray to collect the cooking juices: Position the pan on any of the levels below the wire shelf and add 500 ml of drinking water. The turnspit (if provided) can be used with this function.

ECO FORCED AIR

• For cooking stuffed roasting joints and fillets of meat on a single shelf. Food is prevented from drying out excessively by gentle, intermittent air circulation. When this ECO function is in use, the light will remain switched off during cooking. To use the ECO cycle and therefore optimize power consumption, the oven door

should not be opened until the food is completely cooked.



• For keeping just-cooked food hot and crisp.



• For optimal proving of sweet or savory dough. To maintain the quality of proof, do not activate the function if the oven is still hot following a cooking cycle.




• The action of steam released during this special low-temperature cleaning cycle allows dirt and food residues to be removed with ease. Pour 200 ml of drinking water on the bottom of the oven and only activate the function when the oven is cold.

The function used as a reference for the energy efficiency declaration by Regulation (EU) No. 65/2014


USING THE APPLIANCE FOR THE FIRST TIME

SET THE TIME

You will need to set the time when you switch on the oven for the first time.

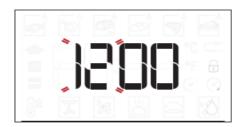

• The two digits for the hour will start flashing: Turn the knob to set the hour and press $\stackrel{\textstyle 0K}{_}$ to confirm.

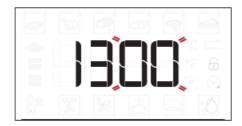

• The two digits for the minutes will start flashing. Turn the knob to set the minutes and press $\frac{0K}{}$ to confirm.

- Please note: To change the time at a later point, press and hold of for at least one second while the oven is off and repeat the steps above.
- You may need to set the time again following lengthy power outages.

SETTINGS

If required, you can change the default unit of measurement, temperature (°C) and rated current (16 A).

With the oven off, press and hold for at least 5 seconds.



- Turn the selection knob to select the unit of measurement, then press $\begin{tabular}{c} 0K \\ \hline \end{tabular}$ to confirm.




- Turn the selection knob to select the rated current, then press $\underbrace{0K}$ to confirm.
- Please note: The oven is programmed to consume a level of electrical power that is compatible with a domestic network that has a rating of more than 3 kW (16 A): If your household uses a lower power, you will need to decrease this value (13 A).


HEAT THE OVEN


- A new oven may release odors that have been left behind during manufacturing: this is completely normal.
- Before starting to cook food, we, therefore, recommend heating the oven with it empty to remove any possible odors.
- Remove any protective cardboard or transparent film from the oven and remove any accessories from inside it.
- Heat the oven to 200 °C for around one hour, ideally using a function with air circulation (e.g. "Forced Air" or "Convection Bake").
- · Follow the instructions for setting the function correctly.
- Please note: It is advisable to air the room after using the appliance for the first time.

DAILY USE

SELECT A FUNCTION

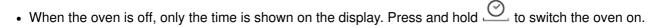


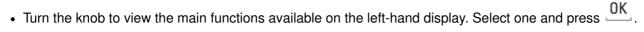

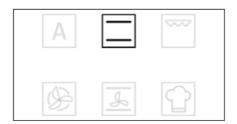

• To select a sub-function (where available), select the main function and then press ot to confirm and go to the function menu.



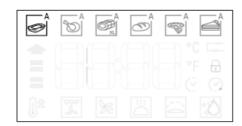

• Turn the knob to view the sub-functions available on the right-hand display. Select one and press oc confirm.

SET THE FUNCTION

- After having selected the function you require, you can change its settings.
- The display will show the settings that can be changed in sequence.

TEMPERATURE/GRILL LEVEL




- When the °C/°F icon flashes on the display, turn the knob to change the value, then press to confirm and continue to alter the settings that follow (if possible).
- You can also set the grill level (3 = high, 2 = medium, 1 = low) at the same time.



• Please note: Once the function has started, you can change the temperature or the grill level by pressing or by turning the knob directly.

[f]÷

DURATION

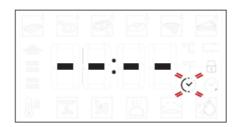

- When the icon flashes on the display, use the adjustment knob to set the cooking time you require and then press to confirm.
- You do not have to set the cooking time if you want to manage cooking manually: Press to confirm and start the function.
- In this case, you cannot set the end cooking time by programming a delayed start.
- Please note: You can adjust the cooking time that has been set during cooking by pressing: Turn the knob to change the hour and press to confirm.

SETTING THE END COOKING TIME/DELAYED START

In many functions, once you have set a cooking time you can delay starting the function by programming its end time.

Where you can change the end time, the display will show the time the function is expected to finish while the icon flashes.



- If necessary, turn the knob to set the time you want cooking to end, then press to confirm and start the function.
- Place the food in the oven and close the door: The function will start automatically after the time that has been

calculated for cooking to finish at the time you have set.



- Please note: Programming a delayed cooking start time will disable the oven preheating phase. The oven will reach the temperature you require gradually, meaning that cooking times will be slightly longer than those listed in the cooking table.
- During the waiting time, you can use the knob to change the programmed end time.
- Press to change the temperature and cooking time settings. Press to confirm when finished.
- Please note: Delay to start functionality is not available for Grill and Turbo Grill functions.

ACTIVATE THE FUNCTION

- Once you have applied the settings you require, press to activate the function.
- You can press and hold ___ at any time to pause the function that is currently active.

PREHEATING

Some functions have an oven preheating phase: Once the function has started, the display indicates that the preheating phase has been activated.



• Once this phase has finished, an audible signal will sound and the display will indicate that the oven has reached the set temperature.



- At this point, open the door, place the food in the oven, close the door, and start cooking by pressing
- Please note: Placing the food in the oven before preheating has finished may harm the final cooking result.

- Opening the door during the preheating phase will pause it.
- The cooking time does not include a preheating phase.
- You can always change the temperature you want to reach using the knob.

END OF COOKING

An audible signal will sound and the display will indicate that cooking is complete.




• To extend the cooking time without changing the settings, turn the knob to set a new cooking time and press

AUTOMATIC FUNCTIONS TEMPERATURE RECOVERY

If the temperature inside the oven decreases during a cooking cycle because the door is opened, a special function will be activated automatically to restore the original temperature.

While the temperature is being restored, the display will show a "snake" animation until the set temperature has been reached.

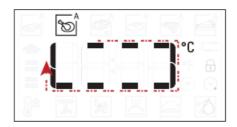

• While a programmed cooking cycle is in progress, the cooking time will be increased according to how long the door was open to guarantee the best results.

SPECIAL FUNCTIONS DIAMOND CLEAN

To activate the "Diamond Clean" function, with the oven cold, distribute 200 ml of water on the bottom of the oven cavity, then close the oven door.

- Access special functions and turn the knob to select from menu. then press to confirm.
- Press to start immediately the cleaning cycle, or press to set the end time/start delayed.
- At the end of the cycle, let the oven collapse remove any residual water in the oven, and start cleaning using a sponge moistened with hot water (cleaning could be compromised if delayed by more than 15 minutes).
- Please note: The duration and temperature of cleaning cycle cannot be set

KEY LOCK

To lock the keypad, press and hold for at least 5 seconds.



- · Do this again to unlock the keypad.
- Please note: The key lock can also be activated while cooking is in progress.
- For safety reasons, the oven can be switched off at any time by pressing .

USEFUL TIPS

HOW TO READ THE COOKING TABLE

The table lists the best functions, accessories, and levels to use to cook different types of food. Cooking times start from the moment food is placed in the oven, excluding preheating (where required). Cooking temperatures and times are approximate and depend on the amount of food and the type of accessory used. Use the lowest recommended settings to begin with and, if the food is not cooked enough, then switch to higher settings. Use the accessories supplied and preferably dark-colored metal cake tins and baking trays. You can also use Pyrex or stoneware pans and accessories, but bear in mind that cooking times will be slightly longer.

COOKING DIFFERENT FOODS AT THE SAME TIME

Using the "Forced Air" function, you can cook different foods that require the same cooking temperature at the same time (for example: fish and vegetables), using different shelves. Remove the food that requires a shorter cooking time and leave the food that requires a longer cooking time in the oven.

MEAT

- Use any kind of oven tray or Pyrex dish suited to the size of the piece of meat being cooked. For roast joints, it is best to add some stock to the bottom of the dish, basting the meat during cooking for added flavor. Please note that steam will be generated during this operation. When the roast is ready, let it rest in the oven for another 10-15 minutes, or wrap it in aluminum foil.
- When you want to grill meat, choose cuts with an even thickness all over in order to achieve uniform cooking
 results. Very thick pieces of meat require longer cooking times. To prevent the meat from burning on the
 outside, lower the position of the wire shelf, keeping the food farther away from the grill. Turn the meat twothirds of the way through cooking. Take care when opening the door as steam will escape.
- To collect the cooking juices, we recommend placing a dripping pan filled with half a liter of drinking water directly underneath the wire shelf on which the food is placed. Top-up when necessary.

DESSERTS

- Cook delicate desserts with the conventional function on one shelf only.
- Use dark-colored metal baking pans and always place them on the wire shelf supplied. To cook on more than
 one shelf, select the forced air function and stagger the position of the cake tins on the shelves, aiding the
 optimum circulation of the hot air.
- To check whether a leavened cake is cooked, insert a wooden toothpick into the center of the cake. If the toothpick comes out clean, the cake is ready. If using non-stick baking pans, do not butter the edges as the

cake may not rise evenly around the edges.

- If the item "swells" during baking, use a lower temperature next time and consider reducing the amount of liquid you add or stirring the mixture more gently.
- For desserts with moist fillings or toppings (such as cheesecake or fruit tarts), use the "Convection bake" function. If the base of the cake is soggy, lower the shelf and sprinkle the bottom of the cake with breadcrumbs or biscuit crumbs before adding the filling.

PIZZA

- Lightly grease the trays to ensure the pizza has a crispy base.
- Scatter the mozzarella over the pizza two-thirds of the way through cooking.

RISING

- It is always best to cover the dough with a damp cloth before placing it in the oven.
- Dough proving time with this function is reduced by approximately one-third compared to proving at room temperature (20-25°C).
- The rising time for pizza starts at around one hour for 1 kg of dough.

COOKING TABLE

RECIPE	FUNCTION	PREHEAT.	TEMPERATURE (°C)	COOK TIME (Min.)	LEVEL AND ACCESSORIES
Leavened cakes	a	-	160 - 180	30 - 90	2/3
	₩	Yes	160 - 180	30 - 90	4 1
Filled cake (cheese cake, strudel, fruit pie)	a	-	160–200	30 - 85	3
	₩	Yes	160–200	35-90	4 1
	Â	-	170 – 180	15 - 45	3
Biscuits/tartlets	\$	Yes	160-170	20-45	4 1
	\$	Yes	160-170	20-45 ***	5 3 1
	â	-	180-200	30-40	3
Choux buns	⊗	Yes	180-190	35-45	4 1
	⊗	Yes	180-190	35-45 ***	5 3 1
		Yes	90	110-150	3
Meringues	⊗	Yes	90	130 - 150	4 1
	⊗	Yes	90	140-160 ***	5 3 1
	~	-	220 - 250	20 - 40	2
Pizza (Thin, thick, focaccia)	&	Yes	220 - 240	20-40	4 1
	&	Yes	220 - 240	25-50 ***	5 3 1
Bread loaf 0,5 kg	<u></u>	-	180 - 220	50 - 70	2
Rolls	<u></u>	-	180 - 220	30 - 50	2
Bread	₩	Yes	180-200	30 - 60	4 1
Everen nizze	~ ~	-	250	10 -15	2
Frozen pizza	₩	Yes	250	10 - 20	4 1 ~~~~ —
	B	Yes	180 - 190	45 - 60	2
Salty cakes (vegetable pie, quiche)	&	Yes	180-190	45 - 60	4 1
	&	Yes	180-190	45-70 ***	5 3 1 viiii
Vols-au-vents/puff pastry crackers		Yes	190-200	20-30	3
	⊗	Yes	180-190	20-40	4 1
	⊗	Yes	180-190	20-40 ***	5 3 1
Lasagne/soufflé	Ø ^ˆ	-	190-200	40 - 65	3 √
Baked pasta/cannelloni	Ø ^ˆ	-	190-200	25 - 45	3
Lamb/veal/ beef/pork 1 kg	B	-	190 - 200	60 - 90	3

RECIPE	FUNCTION	PREHEAT.	TEMPERATURE (°C)	COOK TIME (Min.)	LEVEL AND ACCESSORIES
Roast pork with crackling 2 kg	Ø _x	-	170	110-150	2
Chicken / rabbit / duck 1 kg	S	-	200 - 230	50 -80	3
Turkey / goose 3 kg	B	-	190 - 200	90 - 150	2
Baked Whole Fish (fillet, whole)		Yes	180-200	40-60	3
Stuffed vegetables (tomatoes, courgettes, eggplants)	<u>\$</u>	Yes	180-200	50-60	2
Toasted bread	\square	-	3 (High)	3-6	5
Fish fillets/slices	\square	-	2 (Medium)	20-30 *	4 3
Sausages / kebabs / spare ribs / hamburgers	\square	-	2 - 3 (Medium - High)	15 - 30 *	5 4
Roast chicken 1-1.3 kg	Ţ	-	2 (Medium)	55-70 **	2 1
Roast beef rare 1 kg	F	-	2 (Medium)	35 - 50 **	3
Leg of lamb/knuckle	T	-	2 (Medium)	60-90 **	3
Roast potatoes	F	-	2 (Medium)	35-55 **	3
Vegetable gratin	F	-	3 (High)	10-25	3 √
Lasagne and meat	8	Yes	200	50-100 ***	4 1 √
Meat and potatoes	⊗	Yes	200	45-100 ***	4 1 √
Fish and vegetables	⊗	Yes	180	30 - 50 ***	4 1 √
Complete meal: Fruit tart (level 5)/ lasagne (level 3)/meat (level 1)	₩	Yes	190	40-120 ***	5 3 1
Stuffed roasting joints	æ	-	200	80-120 ***	3
Cuts of meat (rabbit, chicken, lamb)	æ	-	200	50 - 100 ***	3

- Turn food halfway through cooking.
- Turn food two-thirds of the way through cooking (if necessary).
- Estimated length of time: dishes can be removed from the oven at different times depending on personal preference.
- Download the Use and Care Guide from <u>docs.bauknecht.eu</u> for the table of tested recipes, compiled for the certification authorities under the standard IEC 60350-1.

MANUAL FUNCTIONS	Conventional	Grill	Turbo Grill	Forced Air	(Convection Bake	Eco Forced Air
AUTOMATIC FUNCTIONS	Casserole	ති Meat	Maxi Cooking	Bread	Pizza	Pastry cakes
ACCESSORIES	Rack	Baking tray or cake tin on the wire shelf	Drip tray / Baking tray/ Cake tin on wire shelf	Drip tray	Drip tray with	Baking tray

MAINTENANCE AND CLEANING

- Make sure that the oven has cooled down before carrying out any maintenance or cleaning.
- Do not use steam cleaners.

- Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.
- · Wear protective gloves.
- The oven must be disconnected from the mains before carrying out any kind of maintenance work.

EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth.
- If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Do not use corrosive or abrasive detergents. If any of these products inadvertently come into contact with the surfaces of the appliance, clean immediately with a damp microfibre cloth.

INTERIOR SURFACES

- After every use, leave the oven to cool and then clean it, preferably while it is still warm, to remove any deposits or stains caused by food residues To dry any condensation that has formed as a result of cooking foods with a high water content, let the oven to cool completely and then wipe it with a cloth or sponge.
- Clean the glass in the door with a suitable liquid detergent.
- Activate the "Diamond Clean" function for optimum cleaning of the internal surfaces.
- The oven door can be removed to facilitate cleaning.
- The top heating element of the grill can be lowered to clean the upper panel of the oven.

ACCESSORIES

Soak the accessories in a washing-up liquid solution after use, handling them with oven gloves if they are still hot. Food residues can be removed using a washing-up brush or a sponge.

REPLACING THE LIGHT


- 1. Disconnect the oven from the power supply.
- 2. Unscrew the cover from the light, replace the bulb, and screw the cover back on the light.
- 3. Reconnect the oven to the power supply.

Please note: Only use 25-40 W/230 ~ V types E-14, T300°C incandescent bulbs or 20-40 W/230 ~ V type G9, T300°C halogen bulbs. The bulb used in the product is specifically designed for domestic appliances and is not suitable for general room lighting within the home (EC Regulation 244/2009). Light bulbs are available from our After-sales Service.


If using halogen bulbs, do not handle them with your bare hands as your fingerprints could cause damage. Do not use the oven until the light cover has been refitted.


LOWER THE TOP HEATING ELEMENT

1. Remove the lateral shelf guides.

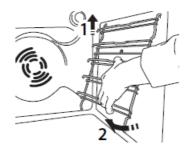

2. Pull the heating element out a little and lower it.

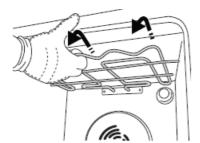

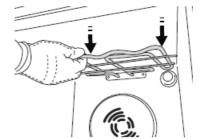


3. To reposition the heating element, lift it up, pulling it slightly towards you, making sure it comes to rest on the lateral supports.




REMOVING AND REFITTING THE DOOR

1. To remove the door, open it fully and lower the catches until they are in the unlock position.

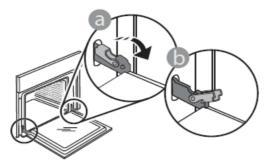

2. Close the door as much as you can. Take a firm hold of the door with both hands – do not hold it by the handle. Simply remove the door by continuing to close it while pulling it upwards at the same time until it is released from its seating. Put the door to one side, resting it on a soft surface.

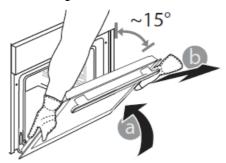


3. Refit the door by moving it towards the oven, aligning the hooks of the hinges with their seating, and securing

the upper part onto its seating.

4. Lower the door and then open it fully.

Lower the catches into their original position: Make sure that you lower them down completely Apply gentle pressure to check that the catches are in the correct position.

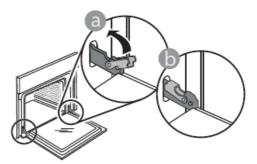

5. Try closing the door and check to make sure that it lines up with the control panel. If it does not, repeat the steps above: The door could become damaged if it does not work properly.

TROUBLESHOOTING

• Download the Use and Care Guide from docs.bauknecht.eu for more information

Problem	Possible cause	Solution
The oven is not working.	Power cut. Disconnection f rom the mains.	Check for the presence of mains electrical pow er and whether the oven is connected to the el ectricity supply. Turn off the oven and restart it to see if the fault persists.
The display shows the letter "F" f ollowed by a number or letter.	Software problem.	Contact your nearest Client After-sales Service Centre and state the number following the lette r "F".

PRODUCT FICHE


• The product fiche with energy data of this appliance can be downloaded from the website docs.bauknecht.eu

HOW TO OBTAIN THE USE AND CARE GUIDE


- Download the Use and Care Guide from our website <u>docs.bauknecht.eu</u> (you can use this QR Code), specifying the product's commercial code.
- Alternatively, contact our Client After-sales Service.



- You can find our contact details in the warranty manual.
- When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

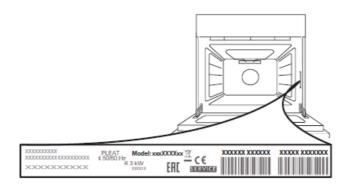

Documents / Resources

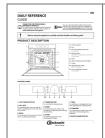

Bauknecht Built In Oven with Pyrolysis and Steam Function [pdf] User Guide Built In Oven with Pyrolysis and Steam Function, Pyrolysis and Steam Function, Steam Function, Function

References

- Whirlpool Docs
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.