



Baumer TFRN CombiTemp Temperature Sensor Instruction Manual

[Home](#) » [Baumer](#) » Baumer TFRN CombiTemp Temperature Sensor Instruction Manual 



Temperature sensor
CombiTemp TFRN/TFRH
Operating instructions



Contents

- 1 ATEX applications
- 2 Compliance and approvals
- 3 Field of application
- 4 Mechanical specifications
- 5 Environment
- 6 CombiView DFON display
- 7 Sensor element specifications (DIN/EN/IEC 60751)
- 8 FlexTop® 2202 temperature transmitter
- 9 FlexTop® 2211 and 2221 temperature transmitter
- 10 FlexTop® 2212 and 2222 temperature transmitter
- 11 Dimensions for TFRN/TFRH housing
- 12 Dimensions for sensor tube and process connection (mm) for TFRN
- 13 Dimensions for sensor tube and process connection (mm) for TFRH
- 14 Dimensions for other options (mm)
- 15 Response time, (time constant) T50
- 16 Process conditions
- 17 Electrical connection Pt100
- 18 Electrical connection 4 ... 20 mA
- 19 Electrical connection DFON display
- 20 Electrical connection with cable gland
- 21 Mounting for TFRN
- 22 Mounting for TFRH
- 23 Hazardous area (ATEX)
- 24 Electrical connection ATEX ia
- 25 Ex-data for FlexTop™ 2202
- 26 Ex-data for FlexTop™ 2211 and 2221
- 27 Ex-data for FlexTop™ with nA approval
- 28 Ex-data for Simple apparatus (no transmitter or display)
- 29 ATEX Gas ia for DFON display
- 30 Electrical connection with DFON display
- 31 DFON menu overview for TFRx with 22x2
- 32 Manufacturer
- 33 Documents / Resources
 - 33.1 References
- 34 Related Posts

ATEX applications

Valid for FlexTop™ 2202 / 2211 / 2212 / 2221



The FlexProgrammer configuration unit must not be connected to the FlexTop within the hazardous area.

Configuration procedure:

- a. Disconnect mains from the 4...20 mA loop circuit
- b. Disconnect the product from the security within the hazardous area
- c. Bring the product to the safe area
- d. Connect the FlexProgrammer and perform the configuration
- e. Reinstall the product in the hazardous area
- f. Connect the power supply to the circuit

For FlexTop™ 2221/2222 only

Configuration for the FlexTop™ 2221/2222 can be made within the hazardous area by means of a handheld HART configurator, providing the precautions and guidelines described in the product's manual are observed.

The CombiTemp TFRx is ATEX approved with transmitter for Ex nA for zone 2.

The CombiTemp TFRx is ATEX approved without transmitter, i.e. with Pt100 output only, as simple apparatus as Ex ia for gas and dust.

Compliance and approvals

EMC	EN 61000-6-2 EN 61000-6-3
ATEX	ATEX II 1G Ex ia IIC T4/T5 ATEX II 3G Ex nA IIC T5 Ex ia Simple apparatus, gas and dust
Hygiene	Regulation 1935/2004, 2023/2006 3-A (74-07)

Field of application

CombiTemp™ TFRx is a temperature sensor, based on RTD technology, which is designed and produced to meet the requirements in food & beverage and pharmaceutical industry where hygienic connections are used.

CombiTemp™ TFRx comprises a series of basic elements which can be combined in various ways to a CombiTemp TFRx temperature sensor.

The product offers great flexibility in respect to modification, service and maintenance.

The sensor can be made to feature a RTD output signal or with a built in FlexTop™ temperature transmitter types 2202, 2211, 2212, 2221 and 2222 with 4-20 mA output (for documentation of FlexTops, please see relevant data sheet or operating instructions).

This instrument is constructed and tested according to the current EU directives and packed in technically safe condition. In order to maintain this condition and to ensure safe operation, the user must follow the instructions and warnings given in this manual.

During the installation local standards have to be observed. Ignoring the warnings may lead to severe personal injury or substantial damage to property.

The product must be operated by trained staff. Correct and safe operation of this equipment is dependent on proper transport, storage, installation and operation.

All electrical wiring must conform to local standards and the connection must be made according to the connecting diagrams. Before switching on power supply take care that there is no unwanted interaction with other equipment. Ensure that the supply voltage and the conditions in the environment comply with the specification of the device.

Before switching off the supply voltage check the possible effects on other equipment and the processing system. To obtain the specified protection degree, use a compliant cable for electrical installation.



WARNING

For electrical installations and commissioning of the explosion-protected devices, the data given in the conformity certificate as also the local regulations for installation of electrical apparatus within explosion-protected areas must be considered. The intrinsically safe versions can be mounted in the explosion-hazarded area according to its specification and only connected to a certified intrinsically safe supply loop with the corresponding electrical values. After mounting of the device – do check that the housing has a ground potential.

Note:

This product contains no replaceable parts. In case of malfunction, the product must be returned to Baumer for repair.

Mechanical specifications

Sensor tube and process connection	Stainless steel, AISI 316L (1.4404)	
Housing Mounting part	Stainless steel, AISI 304 (1.4301) Stainless steel, AISI 304 (1.4301)	
Electrical connection	Plug Material Cable gland Material	M12, 5-pin or 8-pin Stainless steel AISI 304 (1.4301) M16 or M20 Plastic or Stainless steel AISI 304 (1.4301)

Environment

Process pressure	≤40 bar (60 bar)
Process temperature	-40 ... 250 °C -40 ... 400 °C with cooling neck
Ambient temperature	-50...160°C without transmitter/display -40...85°C with transmitter only -30...80°C with transmitter and display
Humidity	<98% RH, condensing
Protection class	IP67 / IP69K
Vibrations	GL, test 2 (sensor tube <200 mm)

CombiView DFON display

Type	Graphically LCD
Front glass	Polycarbonate
Display modes	8 modes, programmable e.g. value, bar graph, analogue
Background colour	White, green, red – programmable
Measuring range	-9999...99999
Digit height	Max. 22 mm
Accuracy	0,1% @ ambient –10...70 °C 0,2% @ ambient –30 ... -10 / 70 ... 80 °C
Voltage drop	4V...6,5V – depending on background light
Output	2 configurable relay output, 60 Vp, 75 mA
Programming	Touch screen or FlexProgrammer 9701
Further information can be found in separate data sheet and/or operating instructions for the Baumer graphical display, CombiView DFON.	

Sensor element specifications (DIN/EN/IEC 60751)

Sensor element	Pt100	
Accuracy (sensor element)	Class B Class 1/3 B Class 1/6 B Class A	$\pm(0,3 + 0,005 \times t)^{\circ}\text{C}$ $\pm 1/3 \times (0,3 + 0,005 \times t)^{\circ}\text{C}$ $\pm 1/6 \times (0,3 + 0,005 \times t)^{\circ}\text{C}$ $\pm(0,15 + 0,002 \times t)^{\circ}\text{C}$
Single element Double element	1 × Pt100 2 × Pt100	
Connection	2-wire or 4-wire	

FlexTop® 2202 temperature transmitter

Input	Pt100
Output	4...20 mA
Accuracy	input < 0,25°C, span ≤ 250 °C – < 0,1% span, span > 250 °C output < 0,1% signal span (16 mA)
Range Minimum span	-200...850°C 25°C
Voltage supply range	8...35 V DC
Programmability	By FlexProgrammer 9701
Further information can be found in separate data sheet and/or operating instructions for FlexTop 2202	

FlexTop ® 2211 and 2221 temperature transmitter

Input	Pt100
Output	2211 4...20 mA 2221 4...20 mA / HART
Accuracy	input <0,1°C output <0,1% signal span (16 mA)
Range Minimum span	-200...850°C 25°C
Voltage supply range	2211 6,5 ... 30 V DC 2221 8,0 ... 35 V DC
Programmability	By FlexProgrammer 9701 or HART modem


Further information can be found in separate data sheet and/or operating instructions for FlexTop 2211 or FlexTop 2221

FlexTop® 2212 and 2222 temperature transmitter


Input	Pt100
Output	2212 4...20 mA 2222 4...20 mA / HART
Accuracy	input <0,06°C output <0,025% signal span (16 mA)
Range Minimum span	-200...850°C 10°C
Voltage supply range	7 ... 40 V DC
Programmability	Both: Touch screen or FlexProgram 2222: By HART® modem

Further information can be found in separate data sheet and/or operating instructions for FlexTop 2212 or FlexTop 2222


Dimensions for TFRN/TFRH housing

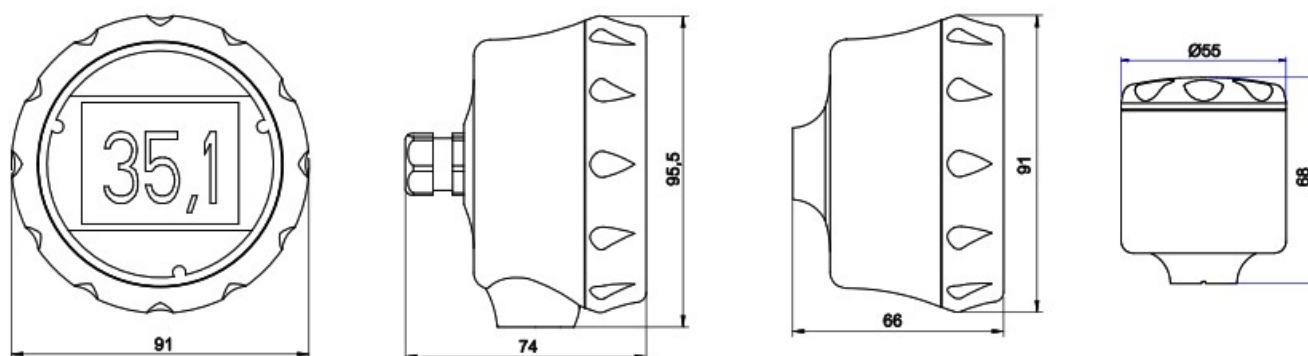

Dimensions for sensor tube and process connection (mm) for TFRN

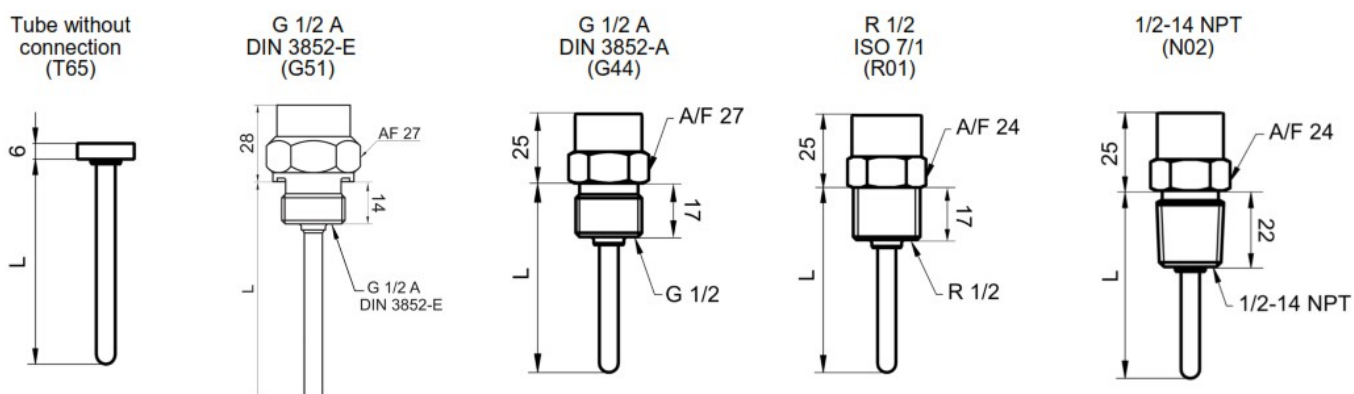


Dimensions for sensor tube and process connection (mm) for TFRH

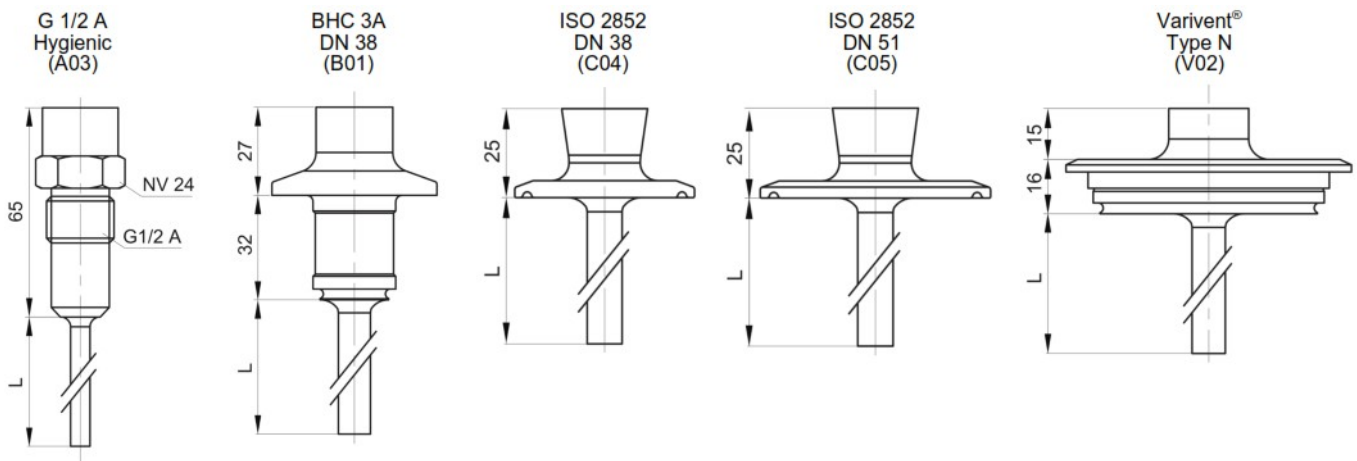


Dimensions for other options (mm)


Fast response tip

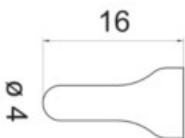

Cooling neck

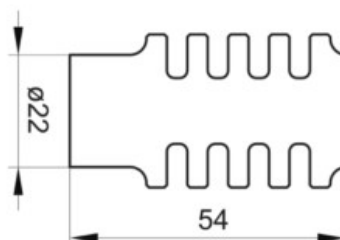


Spacer

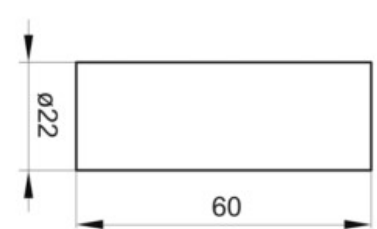

Response time, (time constant) T50

Sensor diameter	Sensor tip	Liquid 0.4 m/sec	Air 3 m/sec	Air 0 m/sec
06 mm	Fast	<1,5 sec	<21,4 sec	<135,6 sec
	Standard	<6,1 sec	<27,2 sec	<137,8 sec
8 mm	Fast	<1,5 sec	<33,6 sec	<181,0 sec
	Standard	<7,6 sec	<47,7 sec	<200,9 sec

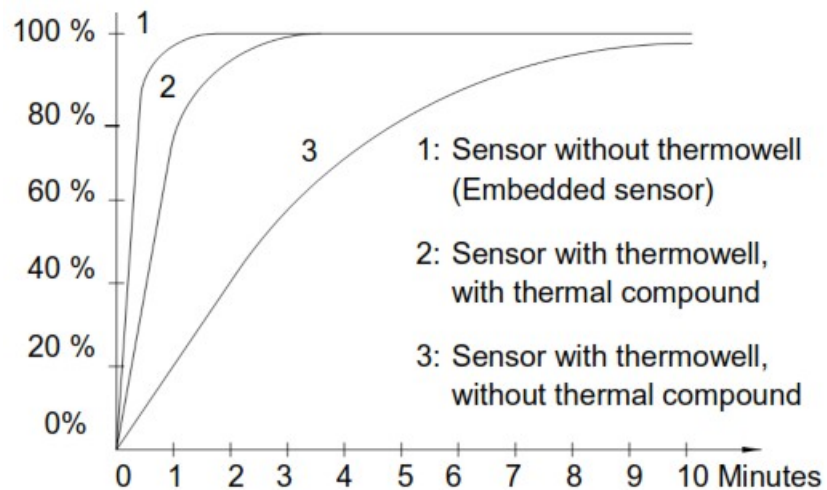


Note:

When a thermowell is used, the time delay increases. The delay is the time duration for the sensor to reflect the

correct temperature after a temperature change in the media.

Process conditions


			Process pressure	Process temperature, standard (Tamb = 20 °C)		Process temperature, with cooling neck (Tamb = 20 °C)		Process temperature, with cooling neck and spacer (Tamb = 60 °C)
Process connection	BCID	Ordering Orkey	[bar]	[°C]		[°C]		[°C]
TFRN								
Sleeve 0 6	T65	10	-1.....40	-50	250	-50	400	-50400
G 1/2 A DIN 3852-E	G51	11	-1.....100	-50	250	-50	400	-50400
G 1/2 A DIN 3852-A	G44	12	-1.....100	-50	250	-50	400	-50400
R 1/2 ISO 7/1	R06	13	-1.....100	-50	250	-50	400	-50400
1/2-14 NPT	NO2	30	-1.....100	-50	250	-50	400	-50400
TFRH								
G 1/2 A hygienic	A03	51	-1.....100	-50	250	-50	400	N/A
BHC 3A DN 38	B01	60	-1.....40	-50	250	-50	400	N/A
ISO 2852 DN38 (Tri-Clamp)	C04	65	-1.....40	-50	250	-50	400	N/A
ISO 2852 DN51 (Tri-Clamp)	CO5	66	-1.....40	-50	250	-50	400	N/A
Varivent0 Type N	V02	70	-1.....16	-50	250	-50	400	N/A

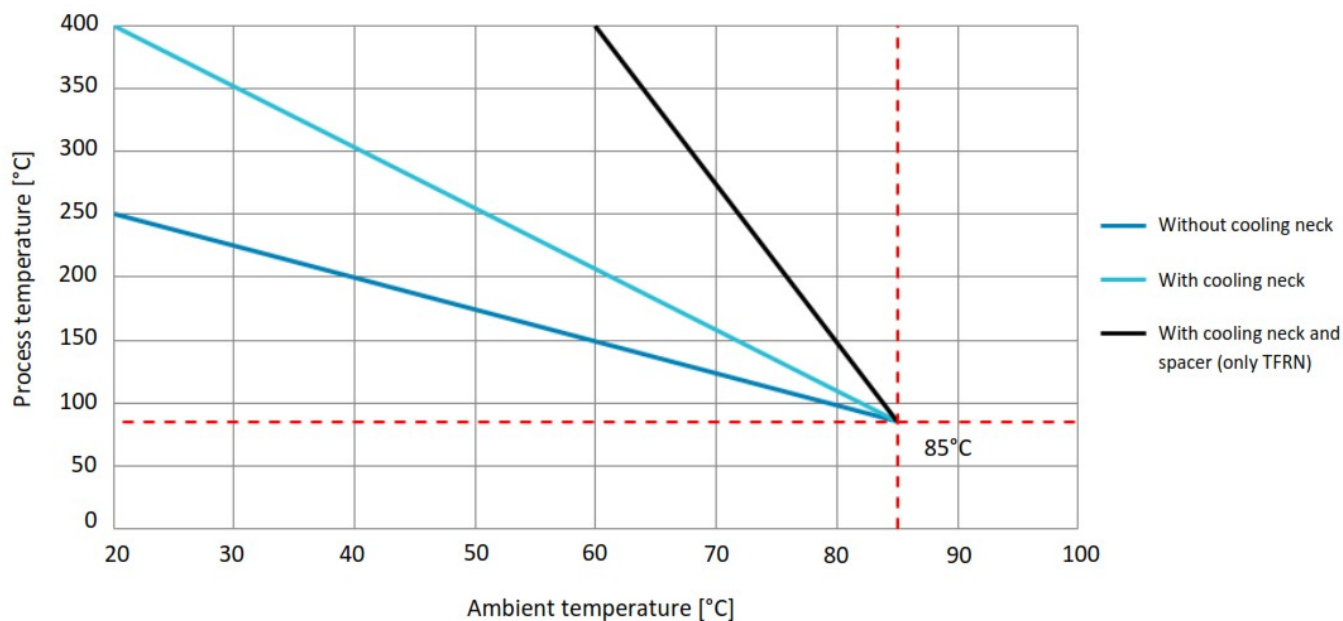


Electrical connection Pt100

To connect with Pt100 output with ceramic terminal block


1 × Pt100

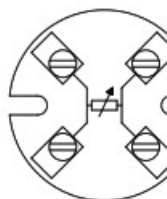


2 × Pt100

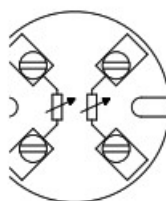

To connect Pt100 output with M12 connector

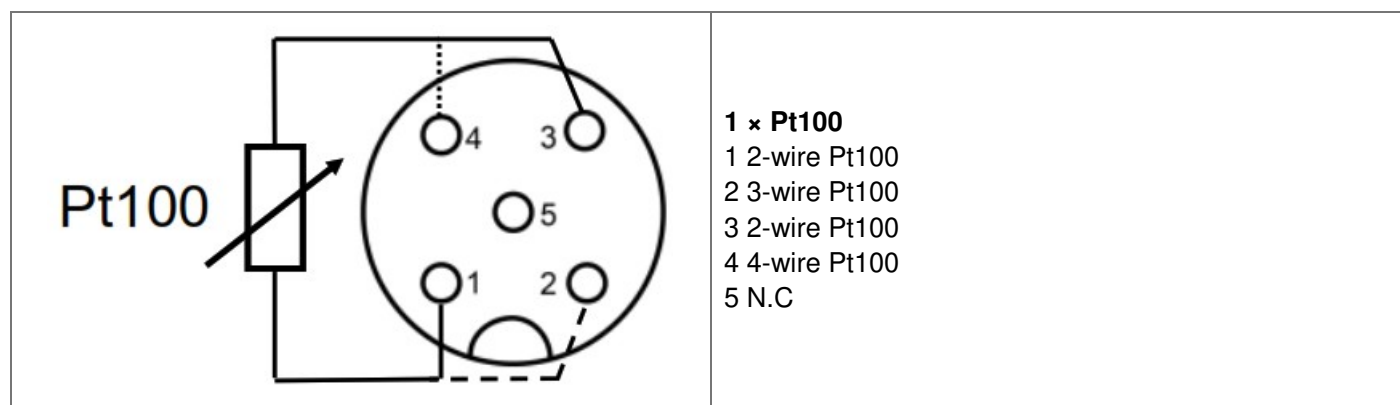

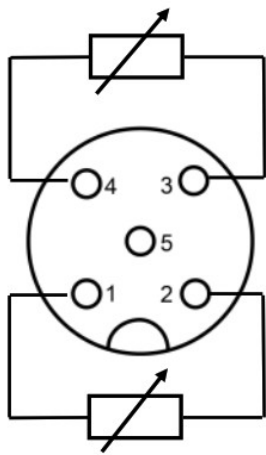
	<p>2 × Pt100</p> <p>1 Pt100 (1) 2 Pt100 (1) 3 Pt100 (2) 4 Pt100 (2) 5 N.C</p>
--	--

Electrical connection 4 ... 20 mA


FlexTop® 22xx




To connect the
FlexTop® 22xx

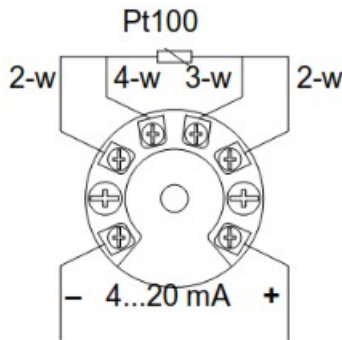


To connect the
FlexProgrammer 9701

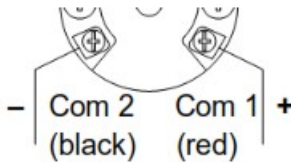

To connect with M12 connector

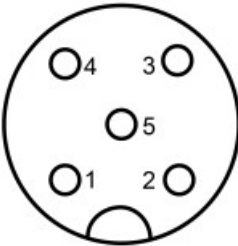	<p>5-pin 4-20 mA</p> <p>1 + supply, 4-20 mA 2 Common for relays 3 – supply, 4-20 mA 4 Relay 2 5 Relay 1</p>
---	---

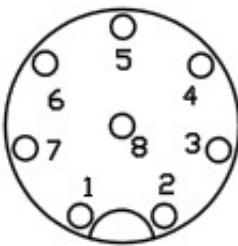
	<p>8-pin 4-20 mA</p> <p>1 N.C. 2 + supply, 4-20 mA 3 Relay 21 4 Relay 22 5 Relay 11 6 Relay 12 7 – supply, 4-20 mA 8 N.C.</p>
---	---

Electrical connection DFON display

CombiView DFON display



Connection with 4 ... 20 mA loop

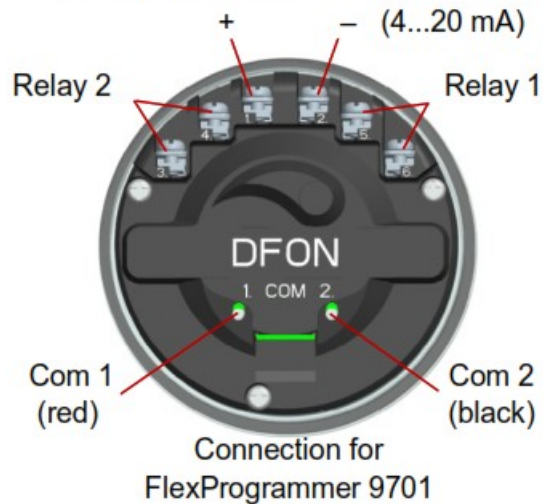

Electrical connection with cable gland

Cable diameter

M16 plastic	5 ... 10 mm
M16 stainless steel	5 ... 9 –
M20 plastic	8 ... 13 –
M20 stainless steel	11 ... 15 –



Check the maximum temperature for the cable used. Be sure to fixate the instrument before tightening the cable gland. When using M16 stainless steel and M20 stainless steel the maximum tightening torque is 4 Nm.



When upgrading the TFRx without display with a DFON touch screen, remember to remove the O-ring from the sealing. Otherwise the sealing won't be tight.


Mounting for TFRN

The CombiTemp™ TFRN can be mounted in several different ways.

1. Sensor tube without connection

Baumer offers compression glands fitting Ø6 and Ø8 mm sensor diameter. This type of mounting is normally used for mounting a sensor direct into a non-pressurized application. If pressurized, ensure that the connection is tightened correctly, so no leakage occur.

A duct channel mounting flange for 8 mm sensor is also available.

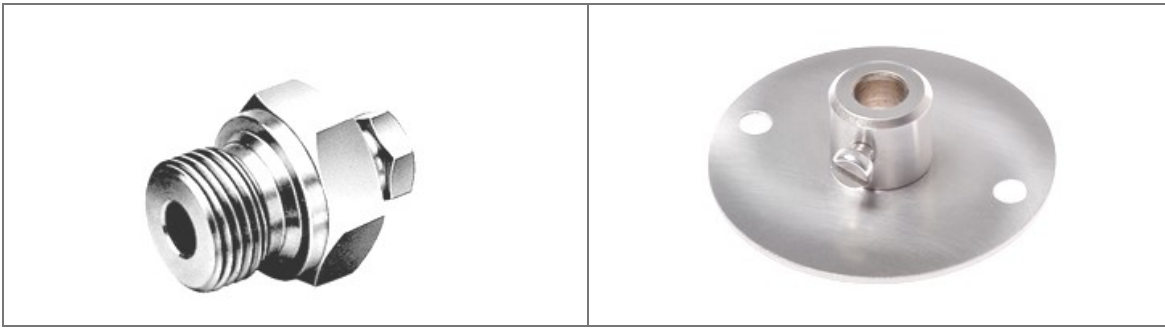

All threaded connections can be mounted directly into the application without thermowell, however often a thermowell is required to enable the user to take out the sensor for e.g. calibration without opening the system.

2. Sensor with male threaded process connection G 1/2 A This is suitable in a Baumer thermowell type ZPT4. The process connections available for ZPT4 are R 1/2, G 1/2 A, G 3/4 A, M20 or with hygienic ISO 2852 clamp DN 38.
3. Sensor with male threaded process connection G 3/4 A and G 1 A and sensors with G 1/2 or G 3/4 female thread can be supplied with a special thermowell. Please contact Baumer.



Mount the gland/pocket into the application and install the sensor after the gland/pocket is fixed to the application. This will ensure that the cable is not twisted during mounting.

Baumer recommends to use a thermal compound filled into the thermowell to ensure best possible heat transfer between the pocket and the CombiTemp TFRN. Baumer offers a 6 gram bag Thermal compound, type ZPX1-001

Mounting for TFRH

Installation of 3-A and EHEDG-approved products:




Generally for welding adapters in a tank

1. Use only a 3-A/EHEDG-approved counterpart.
2. Level the inner surface of the tank with the welding adapter.
3. If it is possible, always face the inspection hole downwards, so a leaking gasket can be observed quickly and if necessary replaced. The inspection hole should always be visible and drainable.
4. Weld from the inside of the tank if possible. Welds shall be free from cracks, burr and grooves. Welding should

be grinded to $Ra \leq 0.8 \mu m$ (Be sure not to grind on the edge of the adaptor hole. Otherwise the connection will not be tight)

5. Tighten the connection with the torque stated below

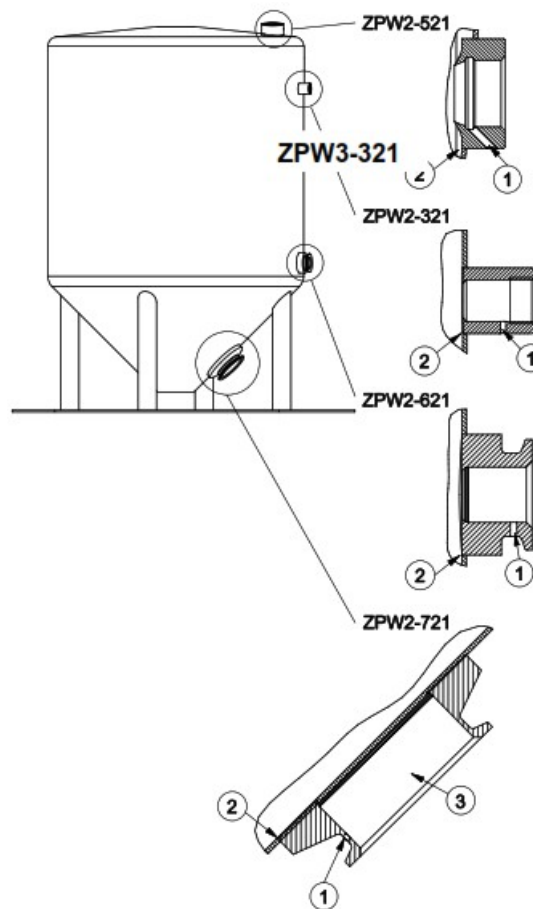


Cleaning

Clean, disinfect or sterilize sensor as needed (CIP/SIP).

Ensure that when installed in a tank both the sensor and the connection are reached by the cleaning agents.

Generally for welding adapters in a tube

1. Use only a 3-A/EHEDG approved welding adapter
2. Level the inner surface of the pipe with the welding adapter.
3. Welds shall be free from cracks, crevices and groves. Welding should be grinded to $Ra \leq 0.8 \mu m$.
4. The 3-A mark or arrow shall be placed upwards. Always face the inspection hole downwards, so a leaking gasket can be observed quickly. If necessary to be replaced. The inspection hole should be visible and drainable.
5. Always mount the welding adapter in a self-draining position. On a tube; $>5^\circ$ from horizontal. This will give an optional placement of 170° for the location of measuring point (as shown in the drawing)
6. Tighten the connection with the torque stated below

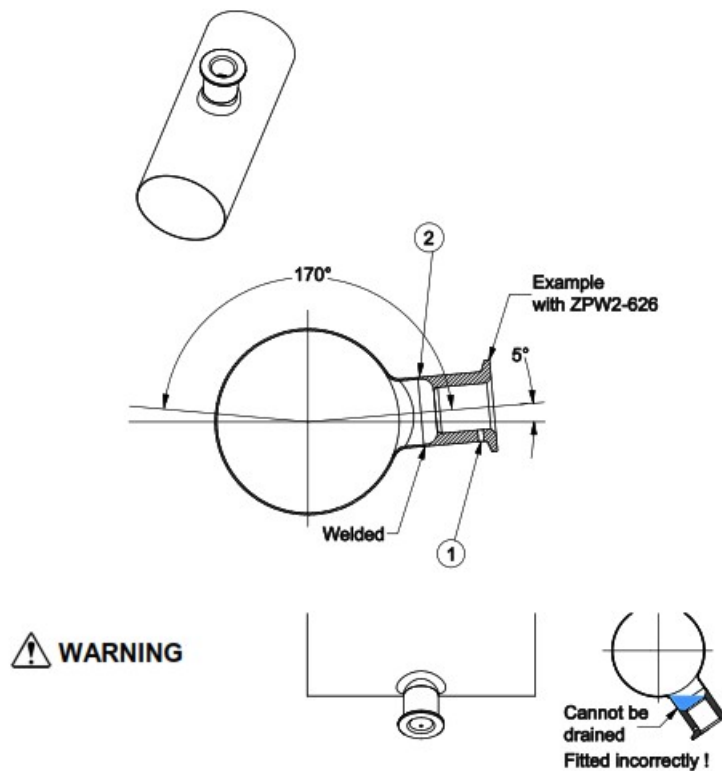

Tighten the connection with a torque of:
CombiTemp TFRH G 1/2 A hygienic 20 Nm

After installation and configuration

- Check the leak tightness between the welding sleeve and the instrument
- Check the tightness of glands or M12 plugs.
- Check the tightness of the instrument cover

It is important that a 3-A marked adapter are installed according to these instructions. Always try to limit cracks, crevices and holes where remaining media can accumulate and provide bacteria.
Always replace gaskets or O-rings that are damaged or defect.

Hazardous area (ATEX)

The CombiTemp™ TFRx can be supplied for hazardous area. Either as a Simple Apparatus with RDT output or with built-in transmitter with 4 ... 20 mA output.

A CombiTemp™ TFRx with built in transmitter will have two possible ATEX approvals, Ex ia (zone 0, 1, or 2) or Ex nA (zone 2).



II 1 G, EX ia IIC T4/T5, Gas



II 3 G, Ex nA IIC T4/T5, Gas


The remaining Ex parameters depend on the type of transmitter and display selected for the product. See detailed data below.

The CombiTemp™ TFRx with Ex ia must be installed in accordance with prevailing guidelines for zone 0 and zone 1 and a certified intrinsically safe zener barrier with the listed maximum values must be used. Electrical connection for the temperature transmitter as per below diagram.

CombiTemp™ TFRx with Ex nA must be installed in accordance with prevailing guidelines for zone 2 without a

barrier. When using CombiTemp™ TFRx with Ex ia simple apparatus in zone 0 with group IIC explosive atmosphere the housing must be connected to ground.

Electrical connection ATEX ia

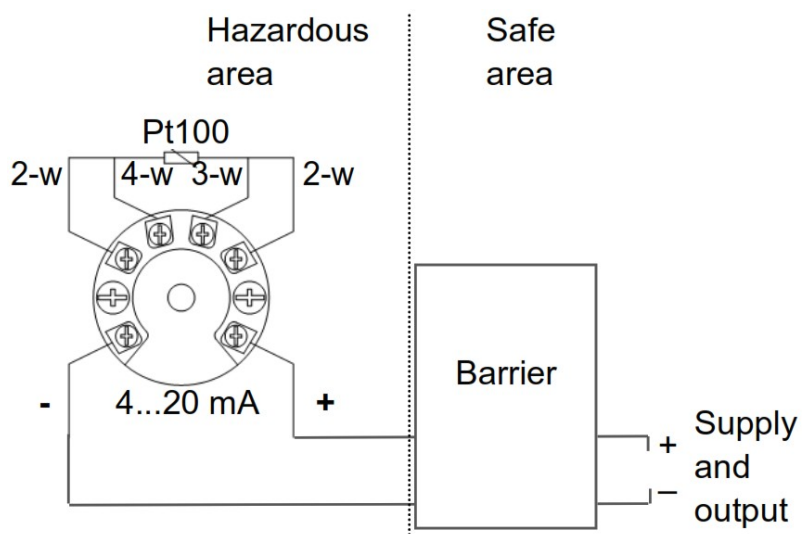

Ex-data for FlexTop™ 2202

Approval	ATEX II 1G, Ex ia IIC T5/T6
Voltage supply range	8...28 V DC
Internal inductivity Internal capacity	Li ≤10 µH Ci ≤10 nF
Temperature class	T1...T5: -40 <Tamb <85°C T6: -40 <Tamb <50°C
Barrier data	Ui: ≤28 VDC Ii: ≤0,1A Pi: ≤0,7 W

Ex-data for FlexTop™ 2211 and 2221

Approval	ATEX II 1G, Ex ia IIC T5/T6
Voltage supply range	2211 6,5...30 V DC 2221 8 ... 30 V DC
Internal inductivity Internal capacity	Li ≤15 µH Ci ≤5 nF
Temperature class	T1...T5: -40 <Tamb <85°C T6: -40 <Tamb <50°C
Barrier data	Ui: ≤28 VDC Ii: ≤0,1A Pi: ≤0,7 W

Ex-data for FlexTop™ with nA approval

Approval	ATEX II 3G, Ex nA IIC T4/T5
Voltage supply range 2202, 2221: 2211:	Ui: 8...30 V DC, Ui: 6,5...30 V DC, Ii: <100 mA
Temperature class	T4: -20 < Tamb < 70°C T5: -20 < Tamb < 60°C


Ex-data for Simple apparatus (no transmitter or display)

Approval	Ex ia simple apparatus Da / Ga (IEC 60079-11)
Internal inductivity Internal capacity	Li ≤ 0 μH Ci ≤ 0 nF
Temperature class	T1...T5: -40 < Tamb < 85°C T6: -40 < Tamb < 55°C
Barrier data	Ui: ≤ 15 VDC Ii: ≤ 50 mA Pi: ≤ 25 mW

ATEX Gas ia for DFON display

Approval:	Zone 0/1 ATEX II 1G, Ex ia IIC T5 Ga
Voltage drop	UDisp 4,5 or 6,5 VDC
Temperature class	T1...T5 Zone 0 -20°C...60°C Zone 1/2 -40°C...65°C
Internal inductivity Internal capacity	Li < 10 μ Ci < 15 nF
Barrier data	Ui < 30 VDC Ii < 0,1 A Pi < 0,75 W


Electrical connection with DFON display


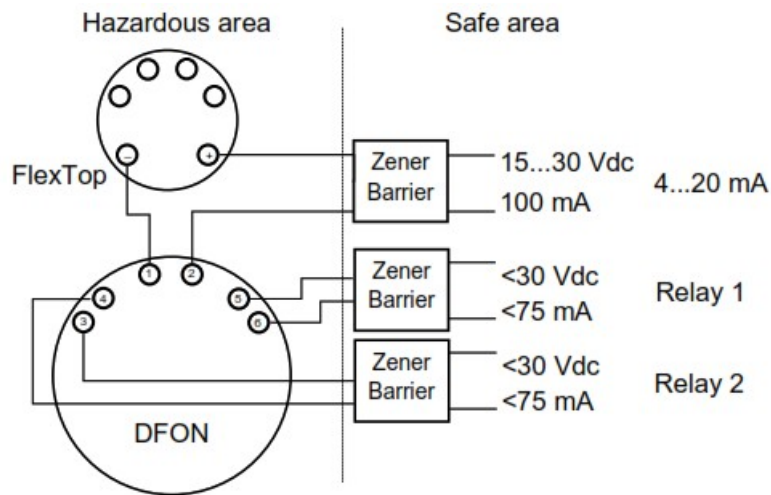


If the relays are enabled, each relay must be protected by a zener barrier. Use a barrier for each relay or a barrier with multiple channels. However the two relays must have each a barrier.

Barrier data	Ui <30 VDC Ii <75 mA Pi <0,75 W
--------------	---------------------------------------

DFON menu overview for TFRx with 22x2

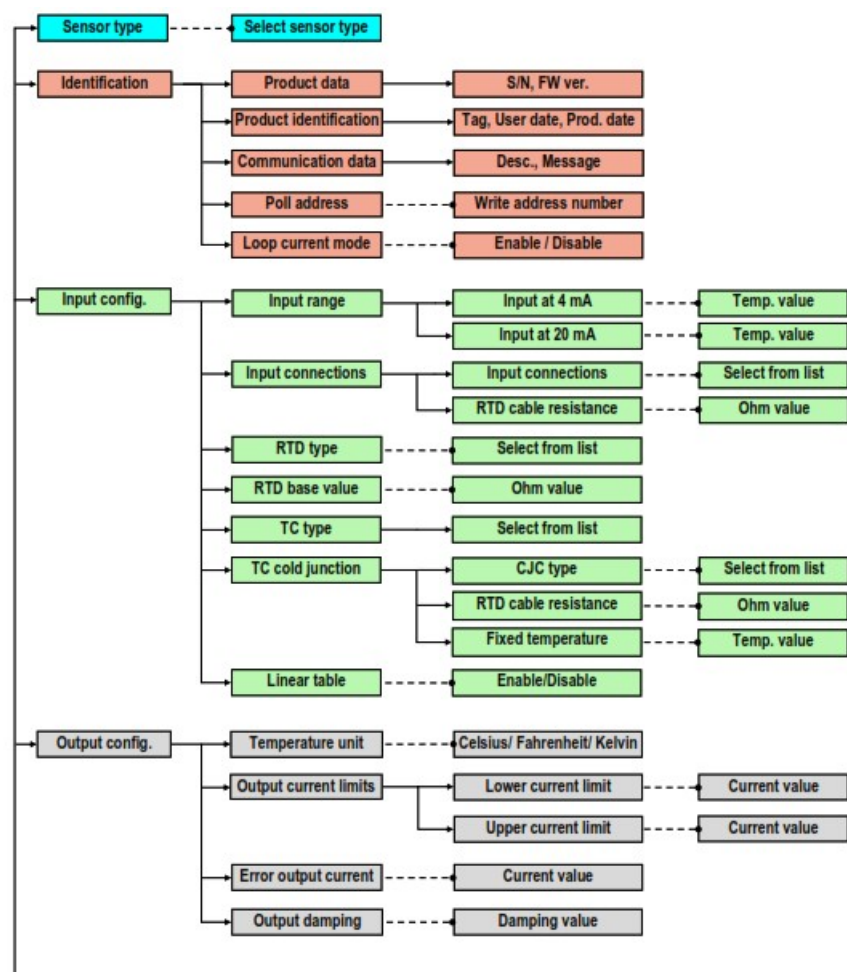

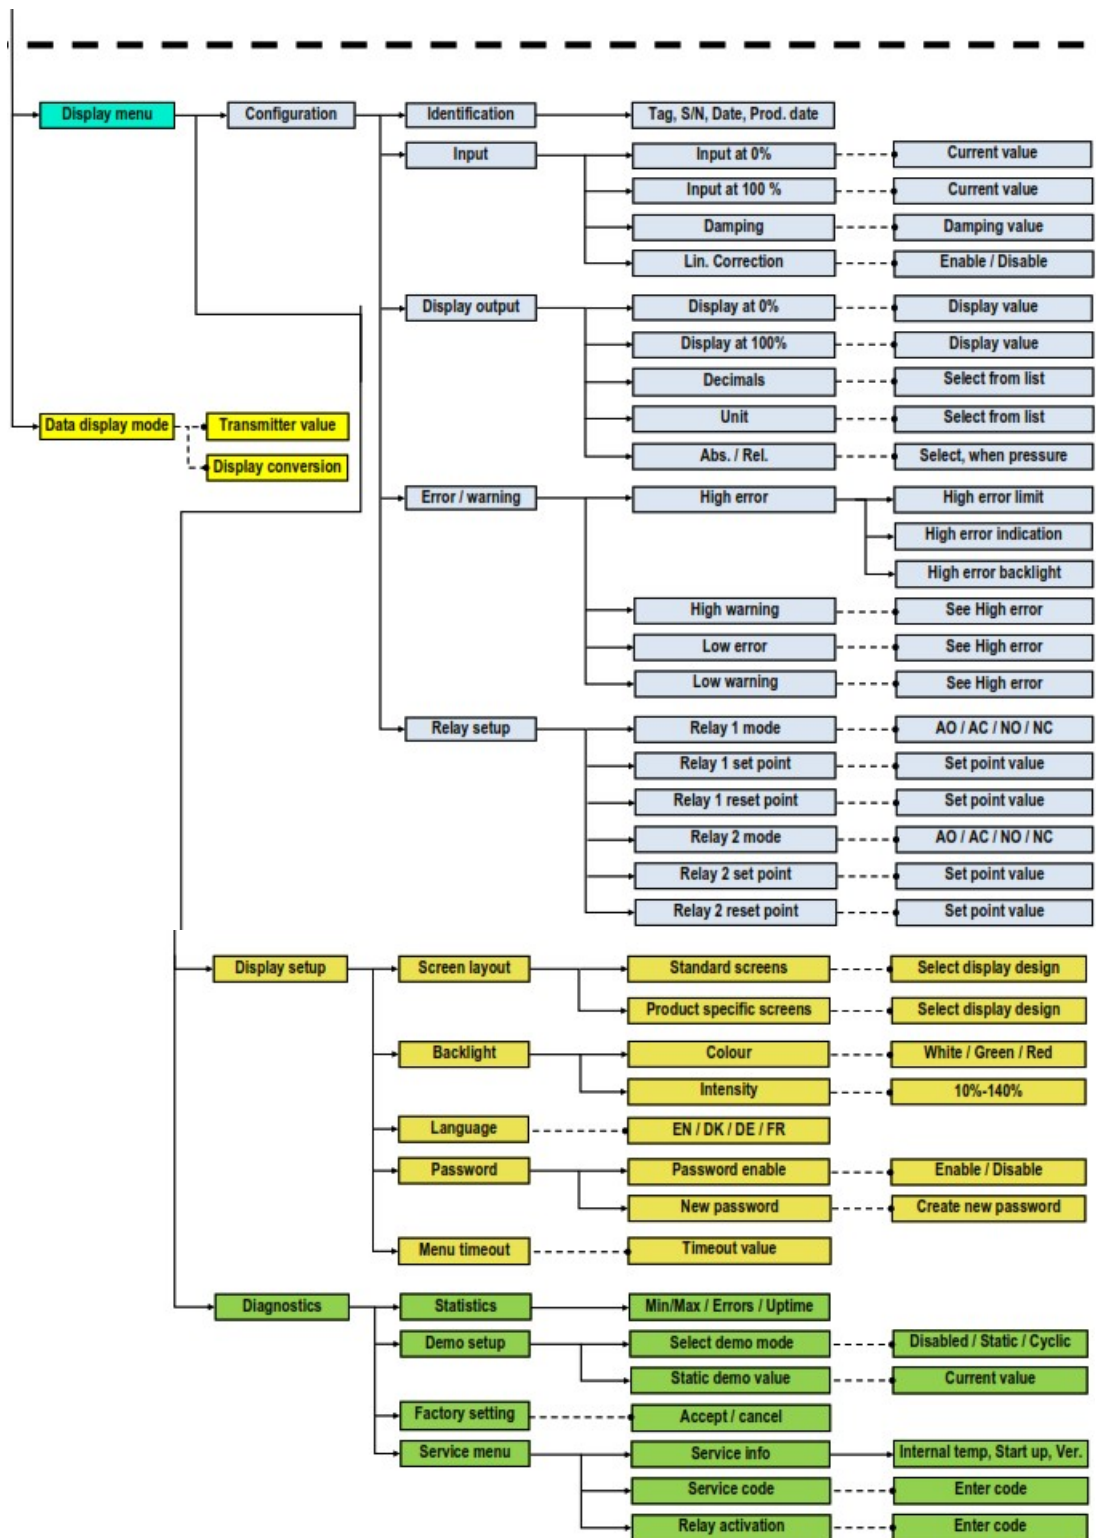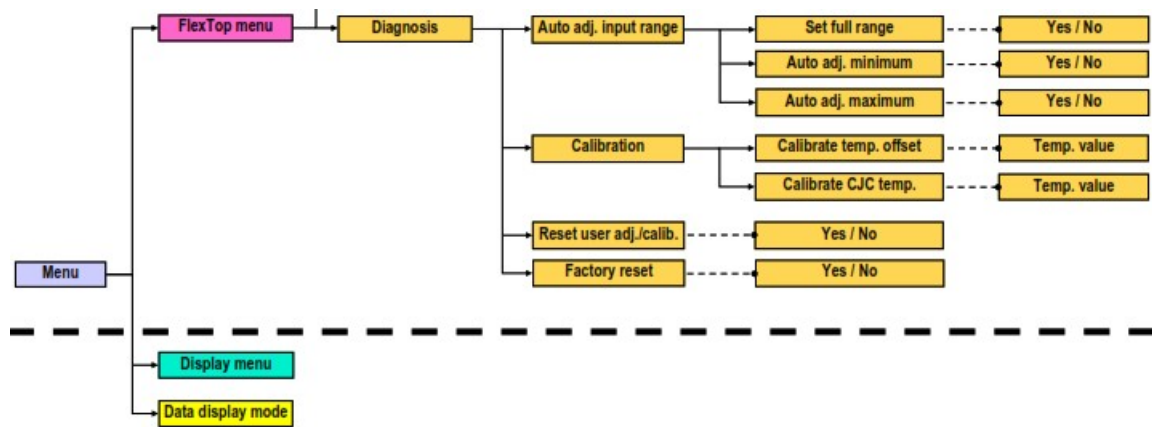

Manufacturer

EU Declaration of Conformity

The undersigned declares on behalf of the manufacturer, that the products to which this declaration relates comply with all relevant provisions of the listed EU directive(s) and are based on the specified standard(s).



Kurt Moller Jensen
Managing Director



i. V. Matthias Sutter
Head of Product Compliance Management

Aarhus, 23.04.2021

Directives:

2014/80/EU, 2014/34/EU, 2011/65/EU (incl. EU 2015/863)

Regulations (if applicable):

Standards / Technical Specifications:

EN 60079-0:2012+A11:2013:

EN 60079-11:201 2:

EN 60079-15:2010:

EN 60079-26:2007:

EN 61326-1:2013:

EN IEC 63000:2018:

Remarks:

x: any figures or letter or character

Notified body (if applicable):

TUV Nord 0044 Am TUV 1 30519 Hannover

Type examination certificate (if applicable):

TUV 07 ATEX 347158 X

Product group:

Electronic temperature measurement

Type(s):

TOR6-XXXX.X1XX. XXXX. XXXX. XXXX:

TERS-XXXX..X1XX. XXXX:'

TERN-XXXX.X1XX. XXX. XXX. XXX

TFERH-XXXX.X1XX.XXXX. XXXXK.XXXX

TOR6-XXXX.X3XX. XXXX.XXXX. XXXX'

TFERS-XXXX. X3XX. XXXX:'

TERN-XXXX.X3XX. XXXX. XXXX.XXXX

TFRH-XXXX.X3XX. XXX. XXXX.XXXX

Baumer_CombiTemp TxRx_ML_DoC_81141616.pdf / su

DK-8210 Aarhus V
CVR: DK25275071
VAT. No.: DK11841813
DK Phone +45 8931 7611
SE Phone +46 (0) 36 13 9430
sales.dk@baumer.com
sales.se@baumer.com
www.baumer.com

Danske Bank: SWIFT: DABADKKK
(DKK) Konto: 4387-3627293852
(EUR) IBAN: DK0230003617021021
(SEK) Bankgiro: 5220-9632

For further information please refer to www.baumer.com

www.baumer.com
Operating Instructions: 11163172 09 EN

Documents / Resources



[Baumer TFRN CombiTemp Temperature Sensor](#) [pdf] Instruction Manual
TFRN, TFRH, CombiTemp Temperature Sensor, Temperature Sensor, TFRN, Sensor

References

- [Baumer - Passion for Sensors | Baumer USA](#)