



bcp SKY6838 Combo Game Set Instruction Manual

[Home](#) » [bcp](#) » bcp SKY6838 Combo Game Set Instruction Manual 

Contents

- 1 [bcp SKY6838 Combo Game Set](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [PARTS](#)
- 5 [PRODUCT ASSEMBLY](#)
- 6 [PLAYING GAMES](#)
- 7 [PRODUCT WARRANTY INFORMATION](#)
- 8 [Documents / Resources](#)
 - 8.1 [References](#)
- 9 [Related Posts](#)



bcp SKY6838 Combo Game Set



Product Information

- **Product Name:** 11-in-1 Table Game Set
- **Version:** Ver. 1
- **Model Numbers:** SKY6838 + SKY6839
- **Age Recommendation:** 3 years old and up
- **Assembly Time:** Up to 90 minutes
- **Manufacturer:** Best Choice Products (BCP)
- **Website:** www.bestchoiceproducts.com

Product Usage Instructions

1. Before assembly, ensure all screws are fastened loosely. Do not tighten firmly until the item is fully assembled.
2. Adult assembly is required.
3. Retain these instructions for future reference.
4. **Tools Required:**
 - Allen Wrench (provided)
 - Wrench
 - Phillips Screwdriver
 - Drill (recommended)
5. **Hardware Included:**
 - 1 M6 x 25mm Screw Set
 - 2 M4 x 20mm Screws
 - 3 M3.5 x 25mm Screws
 - 4 M4 Nylon Lock Nuts (16 pcs)
 - Dowel (18 pcs)
 - Rubber Bumper (4 pcs)
 - End Cap (18 pcs)
 - Handle (8 pcs)

6. Parts Included:

- A: Billiard Playfield
- B: End Panel (2 pcs)
- C: Side Panel
- D: Left Leg (2 pcs)
- E: Right Leg (2 pcs)
- F: Soccer Playfield (2 pcs)
- G: Tennis/Hockey Playfield
- H: Sling Puck/Bowling/Shuffleboard Playfield
- I: Checkers/Tic-Tac-Toe Board & Curling Playfield
- J: 3-Hole Rod
- K: Away Player
- L: Home Player
- M: Scorer (9 pcs)

7. Accessories Included:

- a1: Cue Stick (9 pcs)
- a2: Triangle (2 pcs)
- a3: Net & Post Set
- a4: Table Tennis Paddle & Ball
- a5: Soccer Ball (2 pcs)
- a6: Brush
- a7: Billiard Balls (1 set)
- a8: Hockey Puck
- a9: Hockey Pusher (2 pcs)
- a10: Felt Pad
- a11: Shuffle/Curling Ball (1 set)
- a12: Chess Set (1 set)
- a13: Sling Puck/Checkers/Tic Tac Toe
- a14: Bowling Set (1 set)
- a15: Chalk (1 set)
- a16: Ball Stop (2 pcs)
- a17: Large Accessory Bag
- a18: Medium Accessory Bag
- a19: Small Accessory Bag (3 pcs)

8. Product Assembly Steps:

1. Attach two part B end panels to one part C side panel using four part 1 screw & washer sets.
2. Slide the part F soccer field into the designated slots.
3. Attach one part C side panel to the two part B end panels using four part 1 screw & washer sets.
4. Slide the appropriate number of part K and part L away/home players onto each of the six part J 3-hole rods. Slide two part 6 rubber bumpers onto each rod.
5. Slide one end of a rod into the designated hole, then slide the other end into the opposite hole. Repeat for all rods and confirm correct arrangement.
6. Secure players with eighteen part 2 screws and eighteen part 4 nuts, using one bolt/nut per player. Note

that each player has a recessed inset for the fastening nut, which should be considered the back of the player.

7. Attach one part M scorer to each of the part B end panels using two part 3 screws (four screws total).
8. Slide six part 8 handles and six part 7 end caps onto the rods, with one handle and one end cap per rod.

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

Fasten screws loosely during assembly. Do not firmly tighten screws until item is fully assembled.

bestchoiceproducts.com

WARNING: CHOKING HAZARD – Toy contains a small ball. Not for children under 3 years old.

 
 
 
 
 
 
 
 
 
 
 
 
 
WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years old.

WARNING: ADULT ASSEMBLY REQUIRED

NOTICE Please retain these instructions for future reference.

- Please read all instructions before attempting to install or assemble this item. Assembly should be done by adults only.
- This product contains small parts for assembly. Keep small children and pets away during assembly.
- Do not stand on or use any part of this set as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- Assemble this item on a flat, level, and stable surface for an ideal construction.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.








PARTS

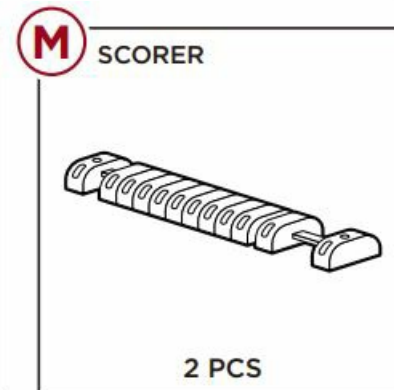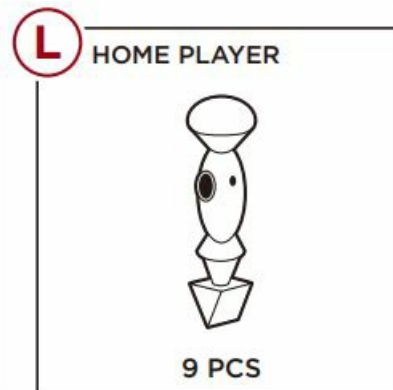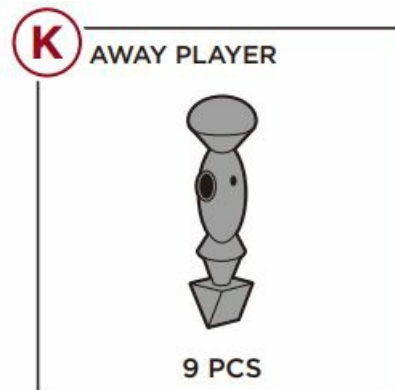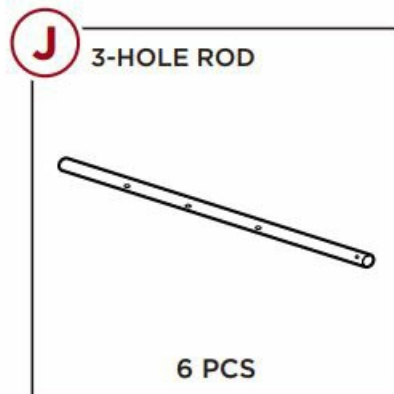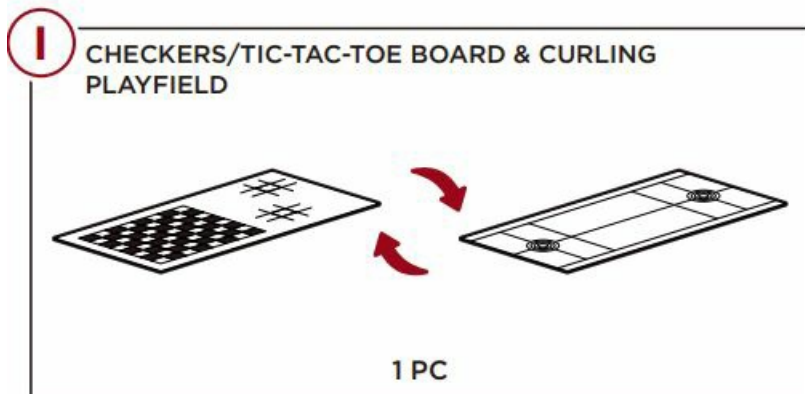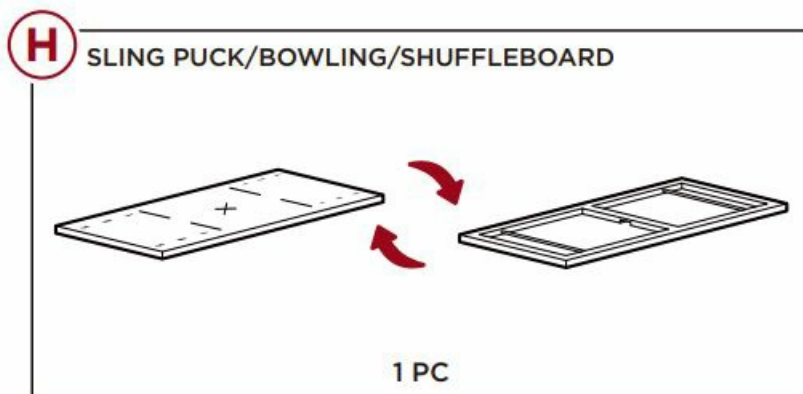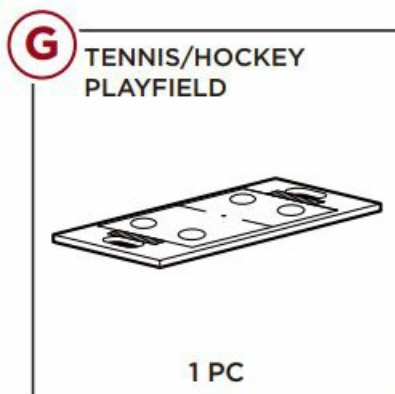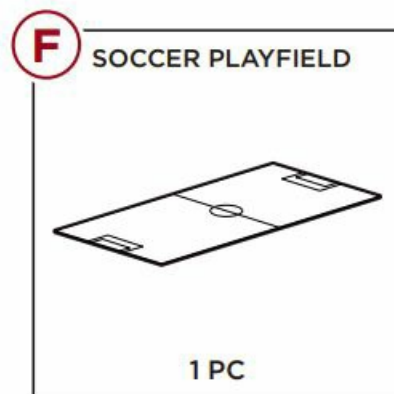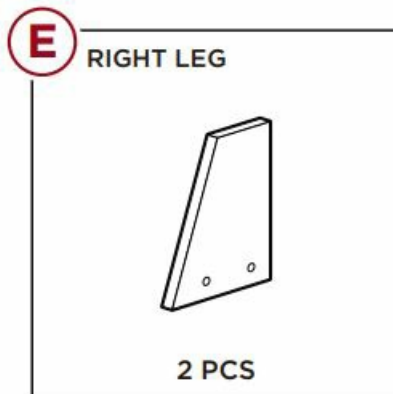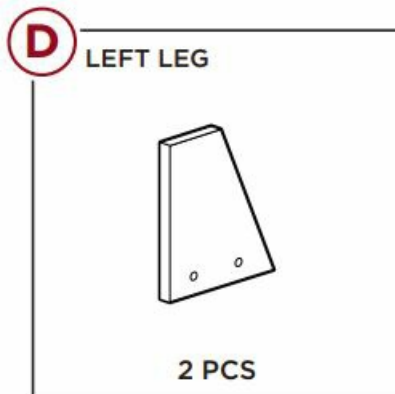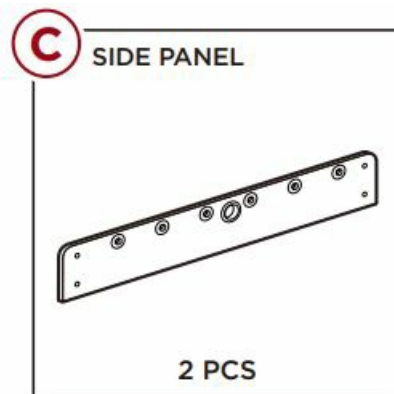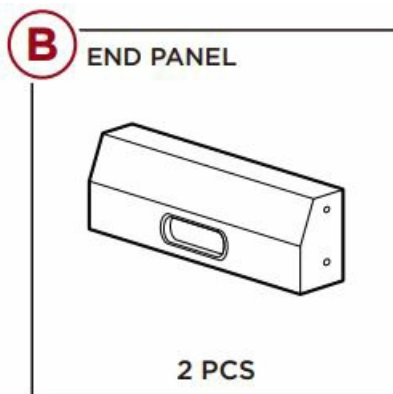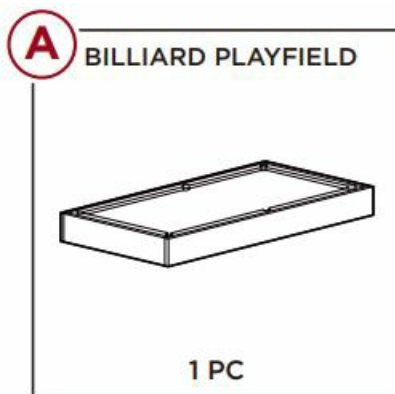



















TOOLS REQUIRED



       HARDWARE

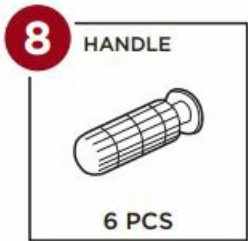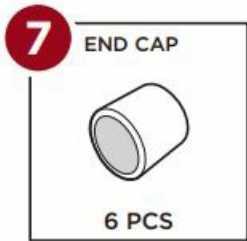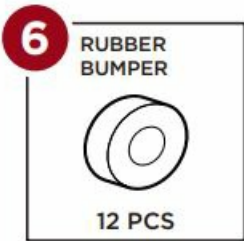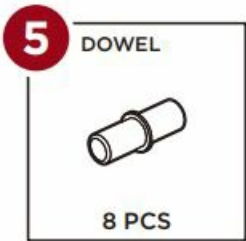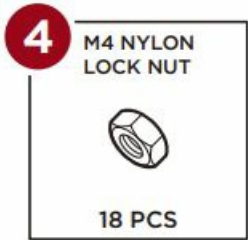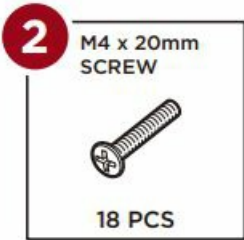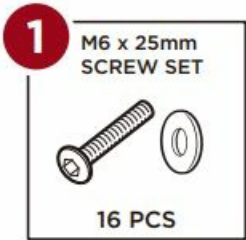


ACCESSORIES

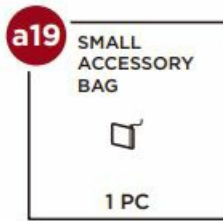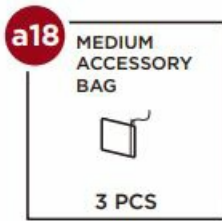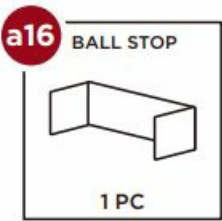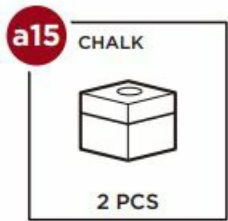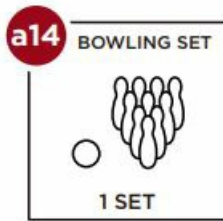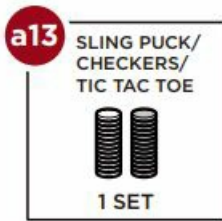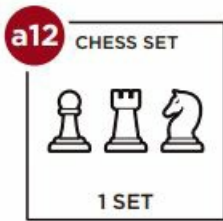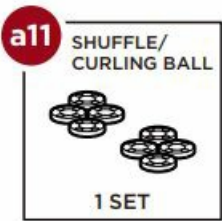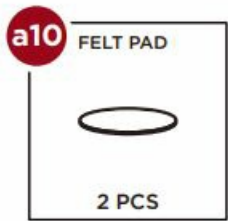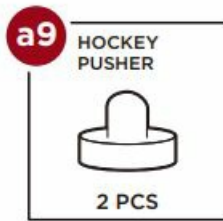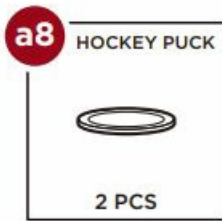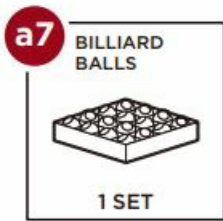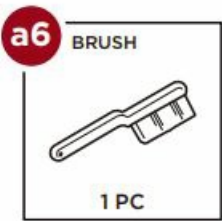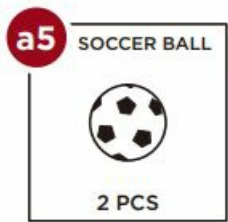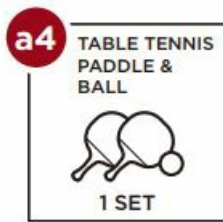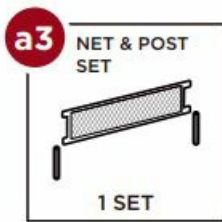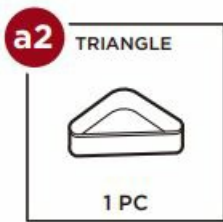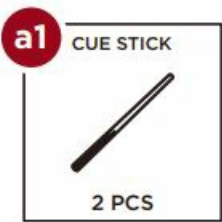                  


PRODUCT ASSEMBLY

1. **NOTE:** Fasten screws loosely during initial assembly. Do not firmly tighten screws until item is completely assembled.

 
Attach two part B end panels to one part C side panel with four part 1 screw & washer sets.

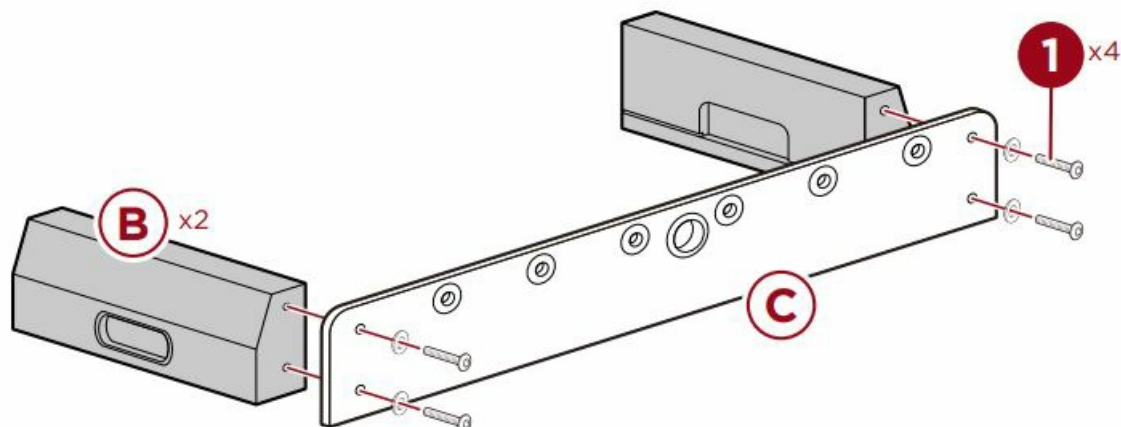

 
2. Slide the part F soccer field into the designated slots.

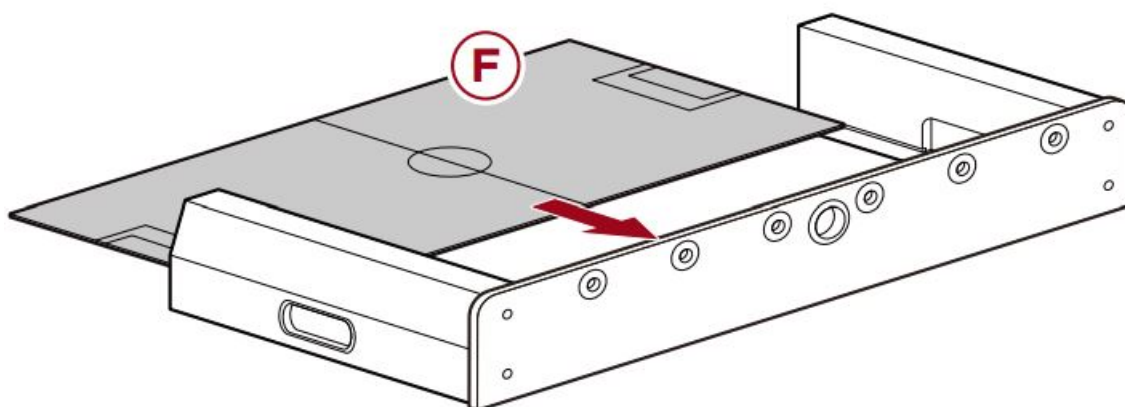


3. Attach one part C side panel to the two part B end panel with four part 1 screw & washer sets.

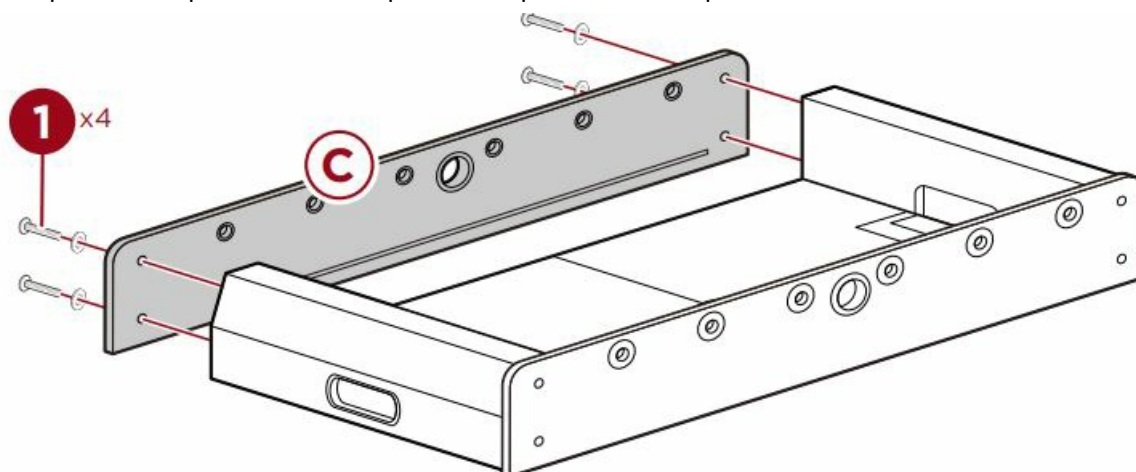 

 4. Locate the part J 3-hole rods, six total, and slide the appropriate number of part K and part L away/home players onto each rod. Slide two part 6 rubber bumpers onto each rod, one bumper on each side.

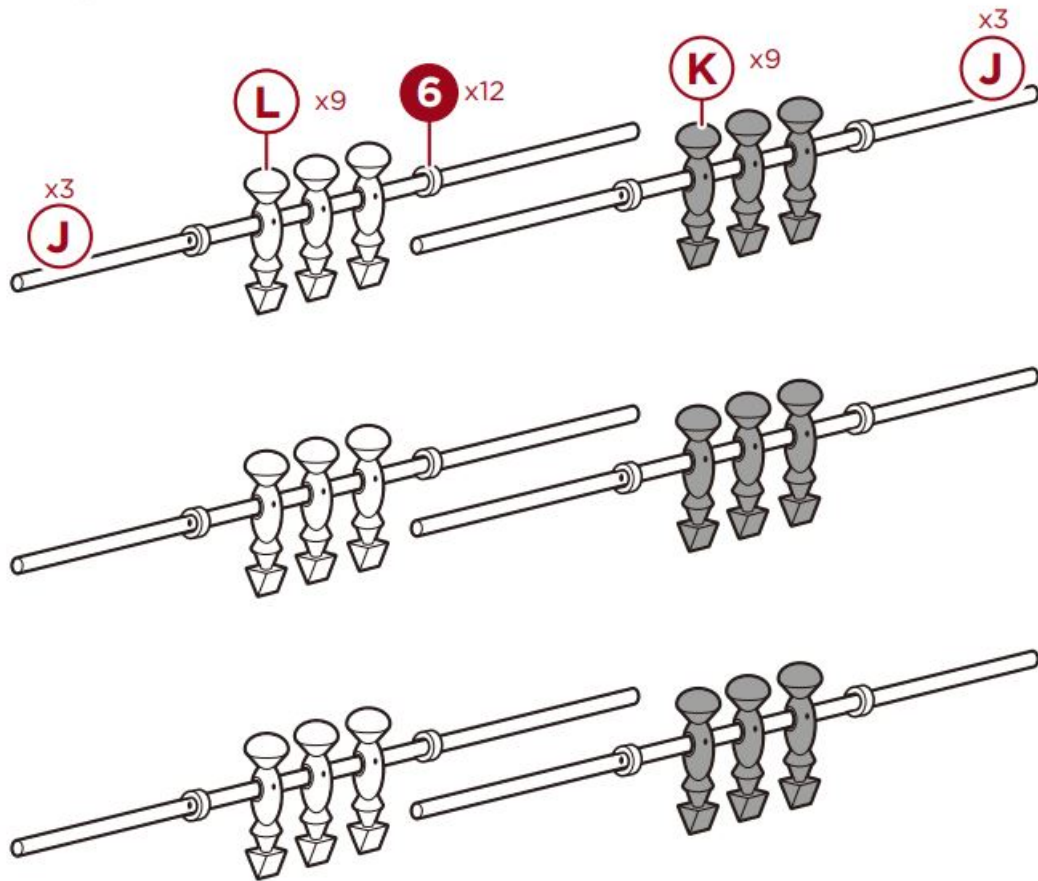

 
5. Slide one end of a rod into the designated hole, then slide the other end into the opposite hole. Repeat for all rods. Confirm that the rods are arranged correctly.

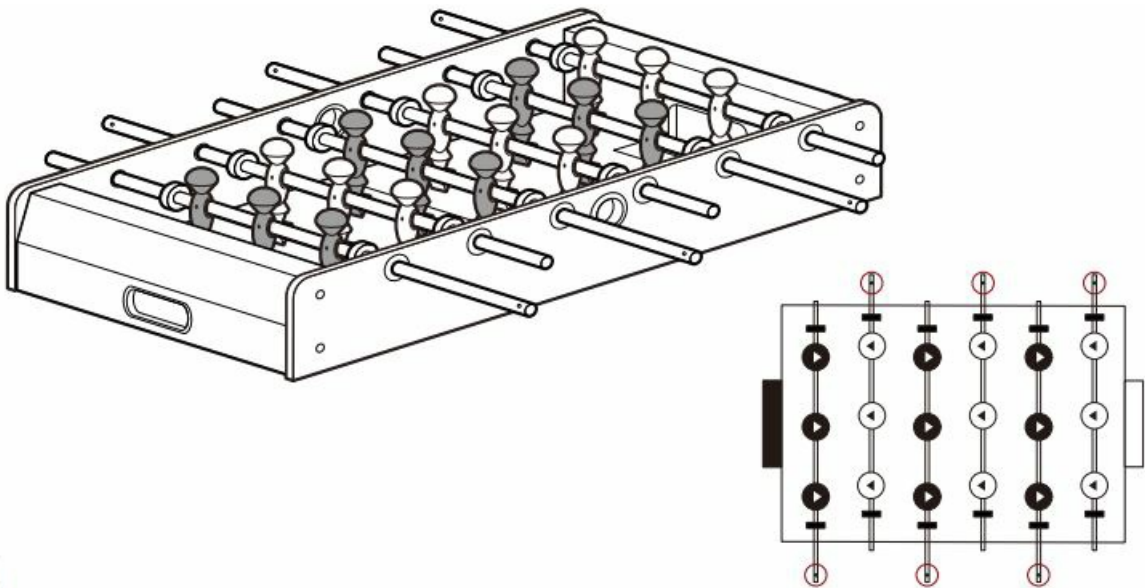


8 |

6. Secure players with eighteen part 2 screws and eighteen part 4 nuts, one bolt/nut per player.

 
NOTE: Each player has a recessed inset for the fastening nut, consider this the “back” of the player.

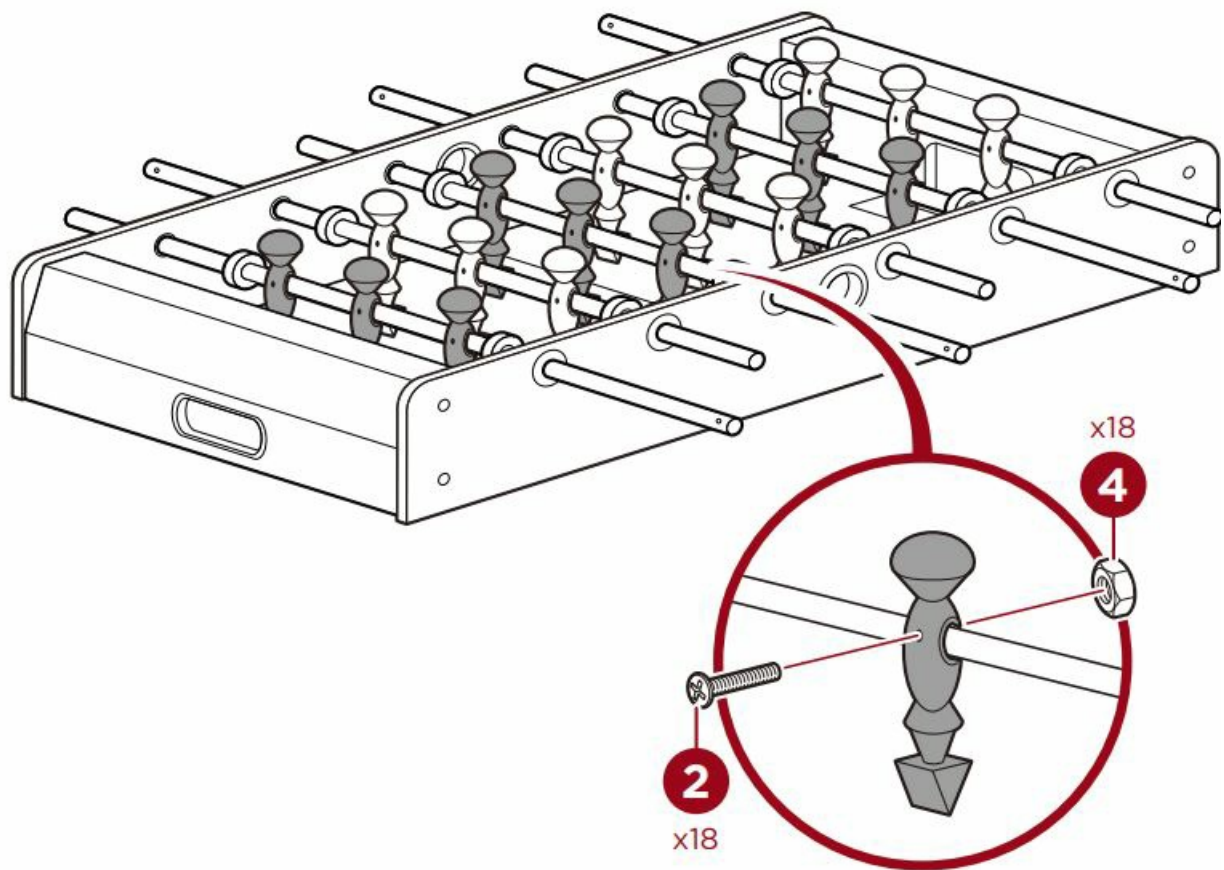


7. Attach one part M scorer to each of the part B end panels with two part 3 screws, four screws total. Slide six part 8 handles and six part 7 end caps onto the rods, one handle and one end cap per rod.

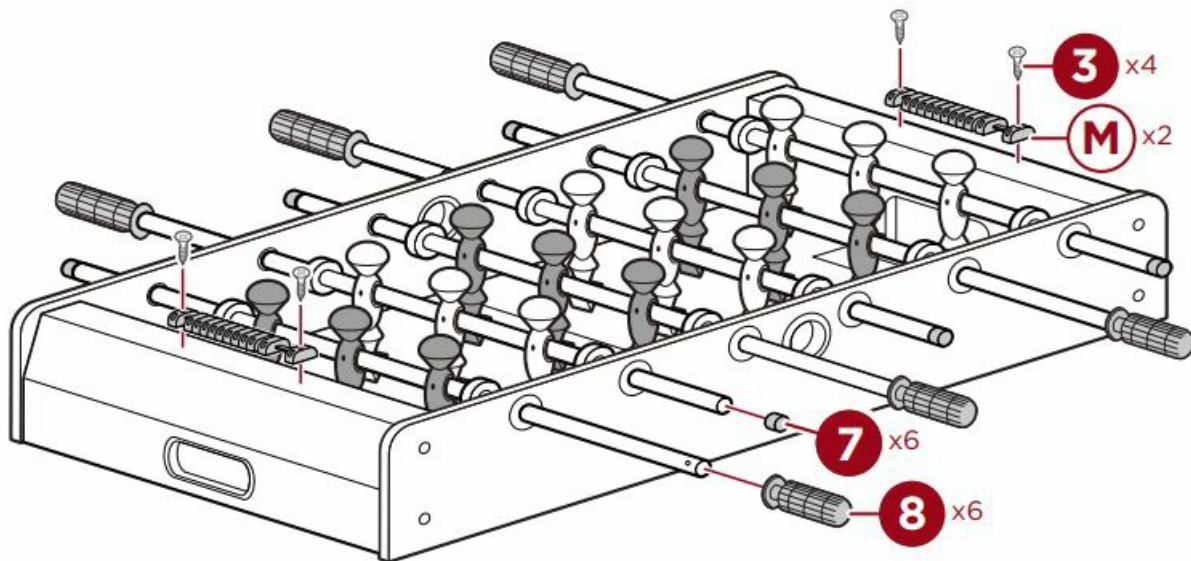 

 8. Locate and place the part A billiard playfield upside down, attach two part D left legs and two part E right legs with eight part 1 screw and washer sets. Each leg comes with a pre-attached set of cleated washers, make sure the washers face the inside of the playfield before securing.

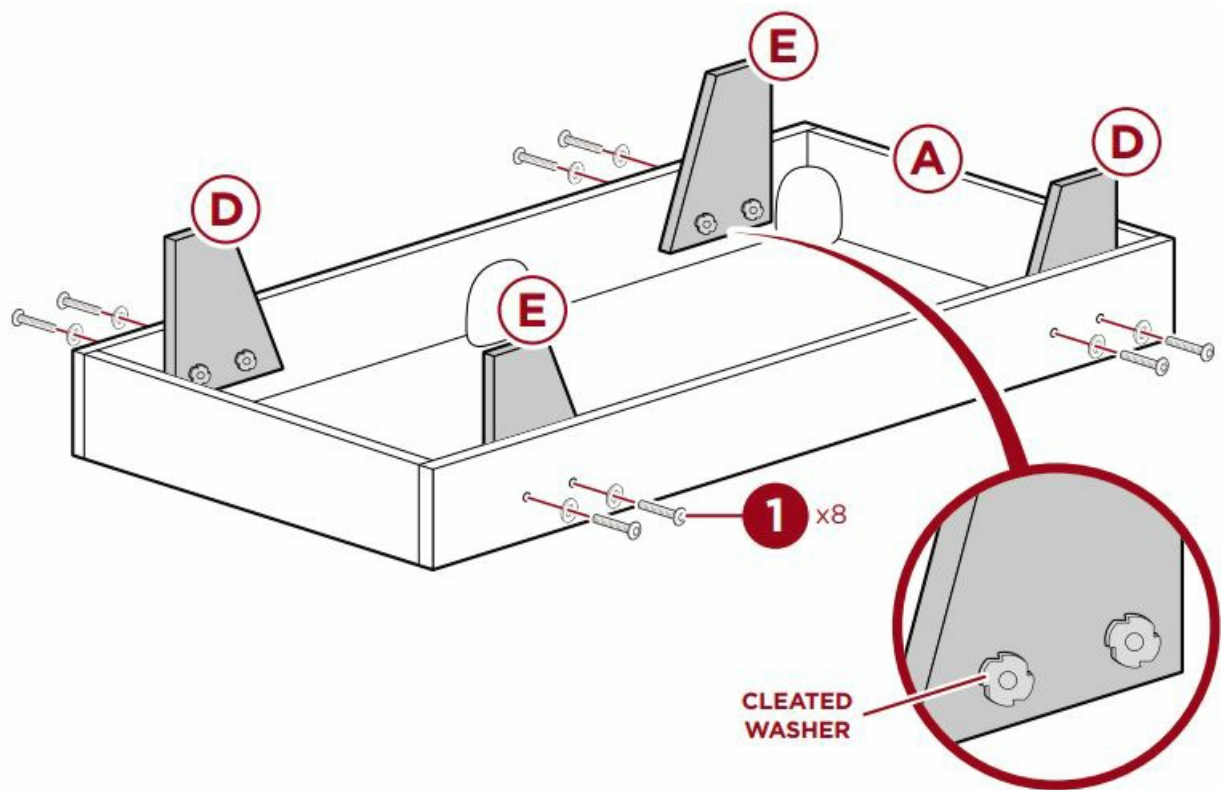

 
9. Insert four part 5 dowels into the part A billiard table, use these dowels to secure the table tennis/hockey field and the foosball table.

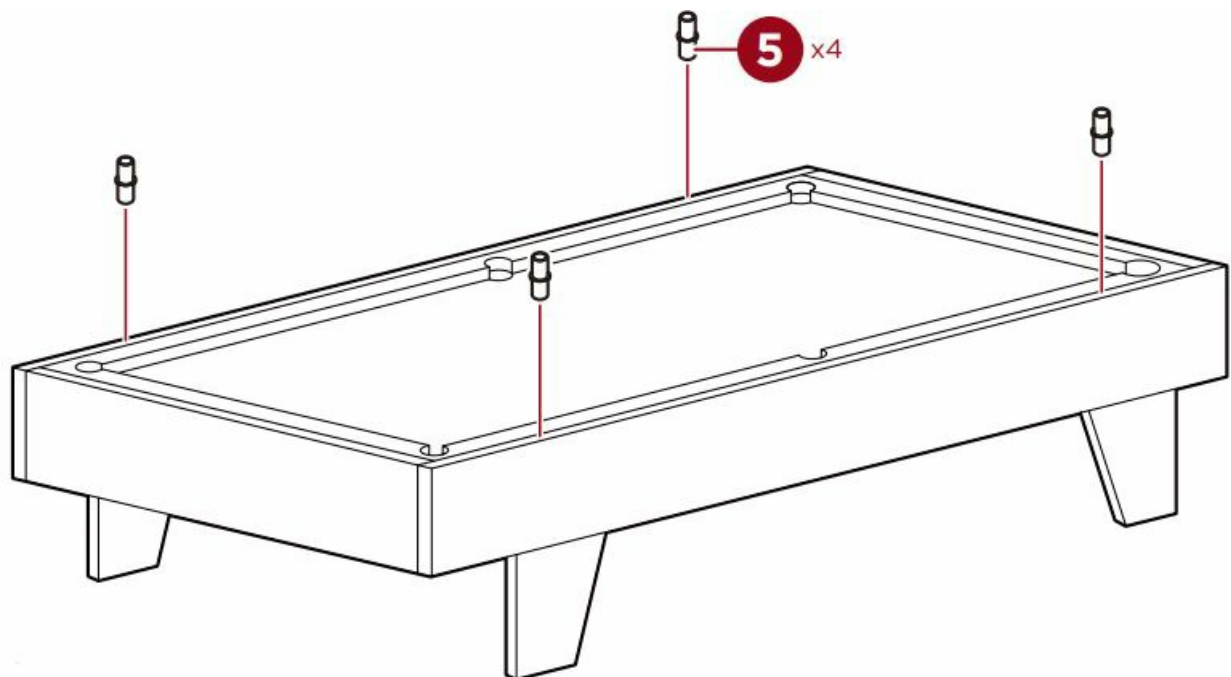

PLAYING GAMES

Rearrange the game table depending on the game you would like to play.

  
Billiards:

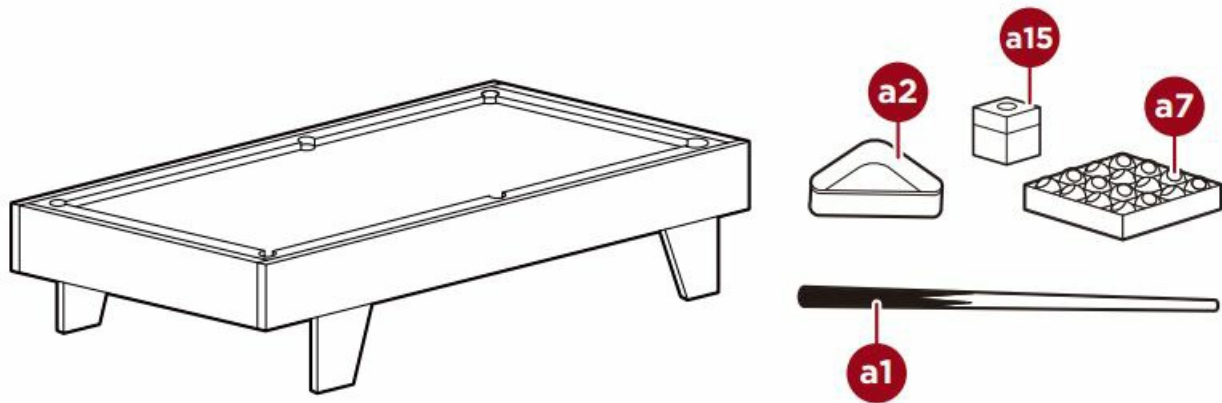

- Remove the other game boards from the top of the part A billiards table, then use the part A7 billiard balls, part A1 cue sticks, and part A2 triangle to play.


 
NOTE: Apply the part A15 chalk to the cue stick tips for better contact and smoother play.

 Table Hockey:

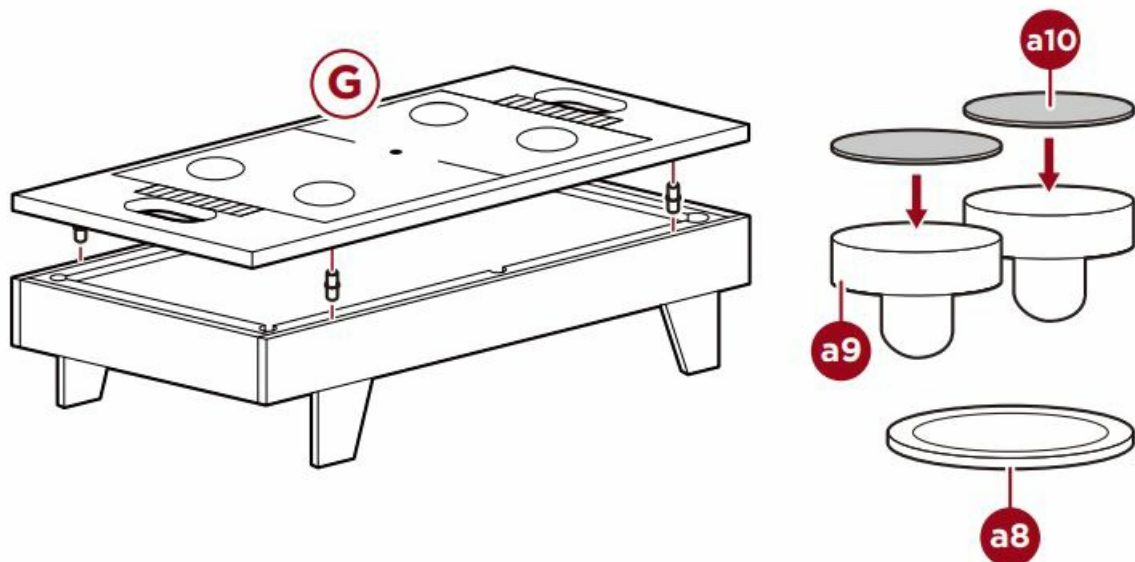


- Place the part G hockey playfield on the billiards table.
- Locate two part A10 felt pads, peel the paper backing and attach them to two part A9 hockey pushers.
- Use the part A8 hockey pucks to play.

Table Tennis:

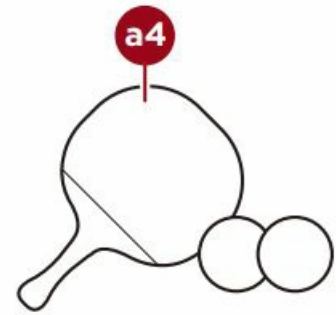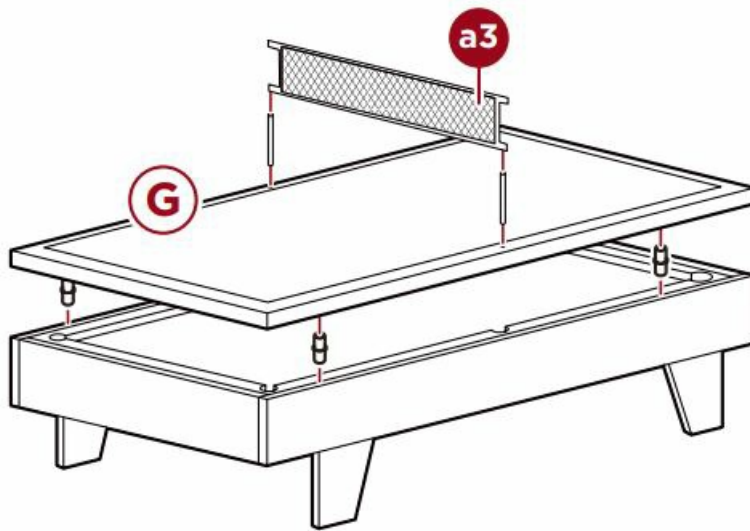


- Place the part G table tennis playfield on the billiards table.
- Insert the part A3 table tennis net & post set into the designated holes.
- Use the part A4 table tennis set to play.

 Foosball:

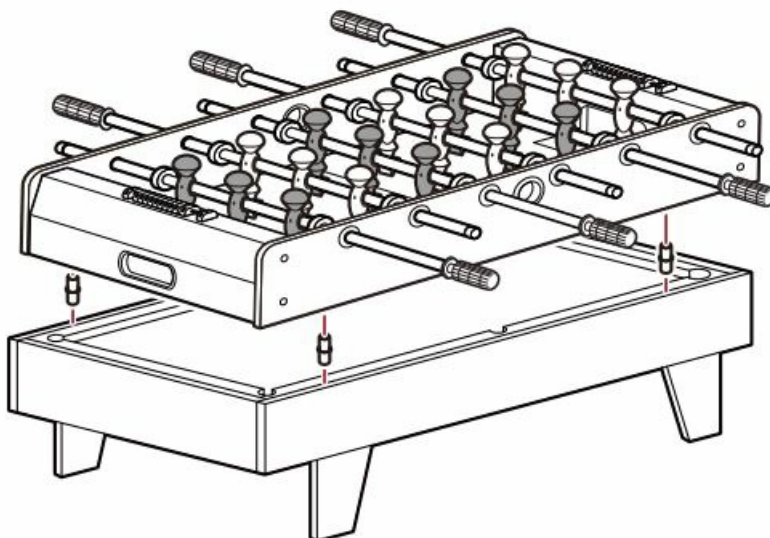


- Place the foosball table onto the frame of the billiards table, use the part A5 soccer balls to play.

 Chess/Checkers/Tic-Tac-Toe/Curling:

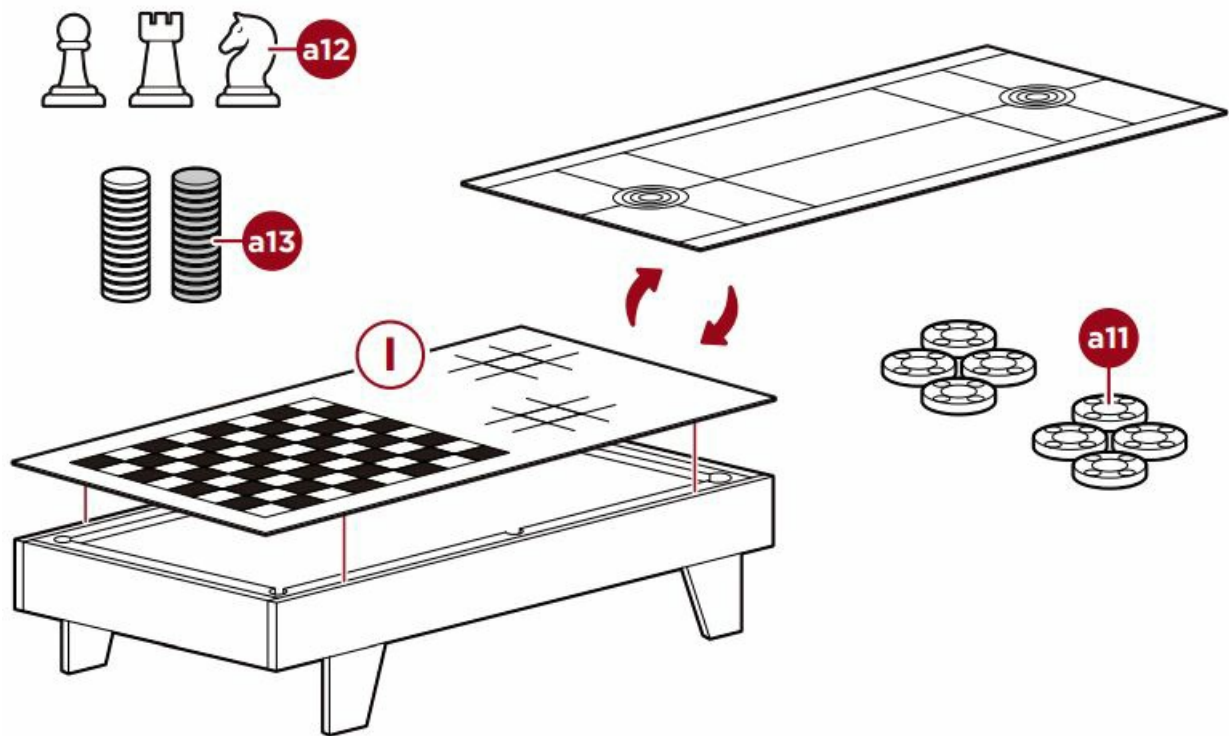

- Place the part I Chess/Checkerboard on a flat level surface and use either the part A12 chess set or part A11 sling pucks/checkers.
- Use the adjacent playfield and the part A13 sling pucks/checkers to play tic-tac-toe.
- Flip the board and use the part A11 shuffle ball/curling set to play.

 Sling Puck/Bowling/Shuffleboard:

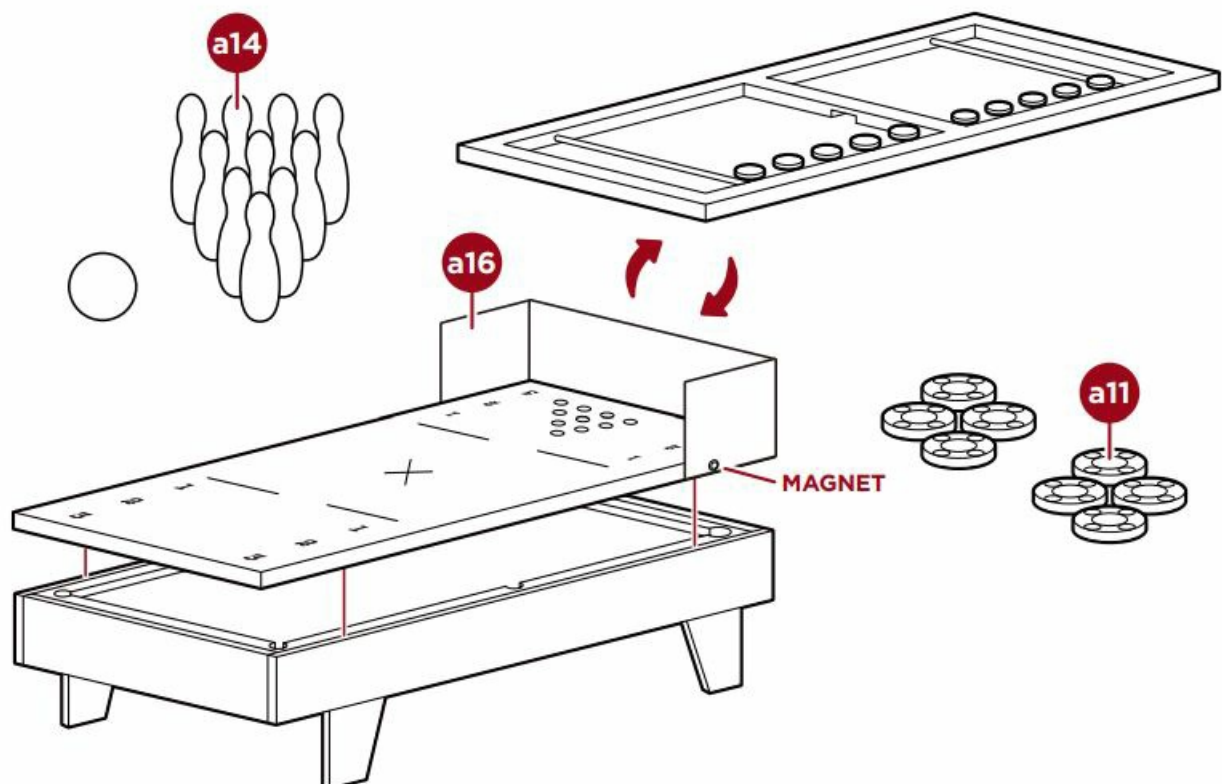

- Place the part H Sling puck board on a flat level surface and use ten (x5 Black, x5 Red) part A13 sling pucks/checkers to play.

- Use the elastic bands to launch the pucks through the opening in the board and onto your opponents side. When your side of the board is empty you win.
NOTE: Take care as disks may fly off the board during play.
- Flip the board and use the part A11 shuffle balls to play shuffle board.
- Attach the part A16 ball stop and arrange the pins of the part A14 bowling set on the designated spaces. Use the ball part A14 bowling set to play.

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

HELP CENTER

Question about your product? We're here to help. Visit us at: help.bestchoiceproducts.com



PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days. All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes. Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

bestchoiceproducts.com

Best Choice Products | 15101 Red Hill Ave, Tustin, CA 92780



[bcp SKY6838 Combo Game Set](#) [pdf] Instruction Manual
SKY6838, SKY6839, SKY6838 Combo Game Set, SKY6838, Combo Game Set, Game Set, Set

References

- [bcp Best Choice Products | Quality & Value, Always](#)