

bE quiEt BL132 120 mm PWM Reverse Computer Case Fan **User Guide**

Home » be quiet » be quiet BL132 120 mm PWM Reverse Computer Case Fan User Guide 🏗



Contents

- 1 bE quiEt BL132 120 mm PWM Reverse Computer Case
- 2 Product Usage Instructions
- **3 SCOPE OF DELIVERY**
- **4 Usage Instructions**
- **5 LIMITED WARRANTY**
- 6 FAQ
- 7 Documents / Resources
 - 7.1 References



bE quiEt BL132 120 mm PWM Reverse Computer Case Fan



Specifications

• Product: Be quiet! Light Wings Reverse fan

• Model: V1/25

• Includes: 1. Be quiet! Light Wings Reverse fan, 1, be quiet! Light Wings LX Reverse fan, Fan screws

Product Usage Instructions

Installation

- 1. Switch off your system before installation.
- 2. Combine the ARGB connector of the fan with the 5V ARGB connector of the motherboard.
- 3. You can add other illuminated products to the ARGB signal via the fan daisy chain and synchronize it with the motherboard.

Applicability

- This warranty applies to newly purchased, previously unopened be quiet! products and is enforceable only by the original consumer purchaser.
- Proof of purchase is required for warranty service.

Warranty Period

- Parts and labor are warranted for the applicable warranty period from the date of purchase.
- The applicable warranty period varies by product model and is identified in your user documentation or on the product package.
- Replaced products will be warranted for the remainder of the original warranty period or thirty days, whichever is longer.

Exclusions

- Normal wear and tear
- Product modification without permission from be quiet!
- Defaced, modified, or removed serial number or warranty sticker
- Cartons, cases, batteries, cabinets, tapes, accessories, or other consumables used with this product

Exclusion of Damages

be quiet!'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option. Be quiet! shall not be liable for any special, incidental, indirect, or consequential damages whatsoever.


SCOPE OF DELIVERY

	Part name	Quantity
1	be quiet! Light Wings Reverse fan*	1
2	be quiet! Light Wings LX Reverse fan**	1
3	Fan screws	4

- · Light Wings Reverse only
 - Light Wings Reverse seulement


Usage Instructions

• Screw down the fan using the fan screws.

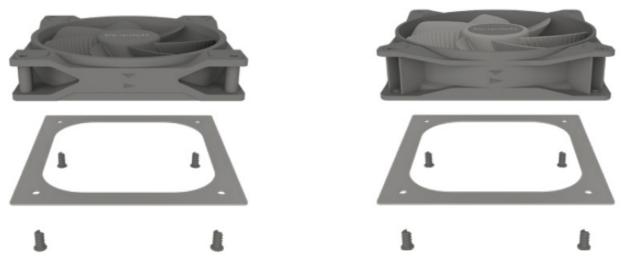

- Combine the ARGB connector of the fan with the 5V ARGB connector of the motherboard.
- To do that, switch off your system before installation.
- You can add other illuminated products to the ARGB signal via the fan daisy chain and synchronize it with the

motherboard.

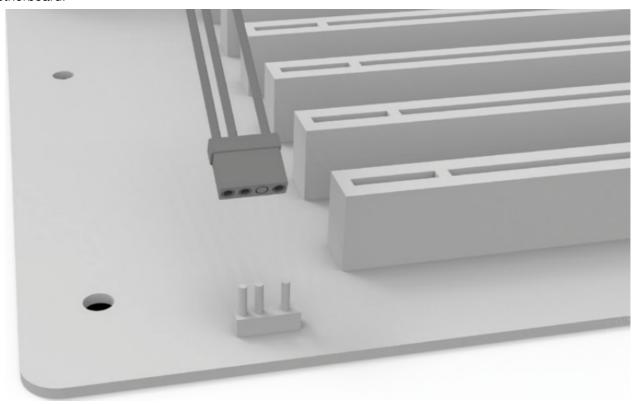

LIMITED WARRANTY

APPLICABILITY

- 1. This non-transferable warranty applies to newly purchased, previously unopened be quiet! products and is enforceable only by the original consumer purchaser.
- 2. Proof of purchase is required for warranty service, so it should be retained. Be quiet! does not provide warranty registration services.

WARRANTY PERIOD

- 1. For eligible products, parts and labor are warranted for the applicable warranty period from the date of purchase.
 - The applicable warranty period varies by product model and is identified in your user documentation, on the product package, or as listed below.
 - Should any of these warranty periods differ, the longest specified warranty period will apply. Replaced
 products will be warranted for the remainder of the original warranty period or thirty days, whichever is
 longer.

EXCLUSIONS

The following are not covered by the warranty:

- 1. Normal wear and tear.
- 2. Any product which has been modified without permission from be quiet! or on which the serial number or warranty sticker has been defaced, modified, or removed.

- Damage, deterioration or malfunction resulting from Accident, abuse, misuse or improper use, neglect, connection to an improper voltage source, unauthorized product modification, or failure to follow instructions included with the product.
 - Fire, water, lightning, or other acts of nature. Repair or attempted repair by anyone not authorized by.
 - Be Quiet!. Shipping or transport damage (claims must be made with the carrier). Any other cause which does not relate to a defect in materials or manufacturing workmanship.
- 4. Cartons, cases, batteries, cabinets, tapes, accessories or other consumables used with this product.
- 5. Be quiet! Inc. does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
- 6. Removal or installation charges.
- 7. Shipping charges.
- 8. Any incidental charges.

EXCLUSION OF DAMAGES

- Be quiet!'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option.
- Be quiet! shall not, in any event, be liable for any special, incidental, indirect, or consequential damages
 whatsoever, including but not limited to loss of profits, revenue, or data (whether direct or indirect), damages
 resulting from interruption of service and loss of business, or for liability in tort relating to this product or
 resulting from its use or possession, even if be quiet! has been advised previously of the possibility of such
 damages.

LIMITATIONS OF IMPLIED WARRANTIES

- There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose.
- The duration of implied warranties is limited to the warranty length specified in Paragraph II.

LOCAL LAW AND YOUR WARRANTY

This warranty gives you specific legal rights. You may also have other rights granted under local law. These
rights may vary.

NO OTHER WARRANTY

• No, be quiet! Employee, dealer, or other agent is authorized to make any modification, extension, or addition to this warranty.

TO OBTAIN TECHNICAL SUPPORT OR WARRANTY SERVICE

Please see your product owner's manual or visit the Online Support section at www.bequiet.com

Warranty:

- 3-year manufacturer guarantee for consumers (original purchase from authorized Be Quiet! dealers only)
- Guarantee work can only be processed with a copy included of the purchase receipt from an authorized be quiet! dealer
- Manipulation and structural changes of any kind, including any damage caused by external mechanical force,
 will lead to a complete voiding of the guarantee
- Our General Warranty Conditions apply, which can be viewed on bequiet.com
- Listan GmbH · Wilhelm-Bergner-Straße 11c · 21509 Glinde · Germany.
- For further information, contact us via e-mail: service@bequiet.com

FAQ

- Q: How do I recycle the product and its accessories?
 - A: The product and its accessories can be recycled at designated collection points.
 - Visit <u>www.quefairedemesdechets.fr</u> for more information on recycling locations.

Documents / Resources



bE quiEt BL132 120 mm PWM Reverse Computer Case Fan [pdf] User Guide BL132, BL133, BL132 120 mm PWM Reverse Computer Case Fan, BL132, 120 mm PWM Reverse Computer Case Fan, Computer Case Fan, Case Fan, Fan

References

- De quiet! Leise Netzteile, Gehäuse und PC Kühlungsprodukte. PSU Kalkulator und Kühler Check für Ihren PC
- Quiet.fr
- be quiet! Leise Netzteile, Gehäuse und PC Kühlungsprodukte. PSU Kalkulator und Kühler Check für Ihren PC
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.