


# be quiet! Silent Base 802 Window Tower Case User Manual

[Home](#) » [be quiet!](#) » be quiet! Silent Base 802 Window Tower Case User Manual 

## Contents

[1 be quiet! Silent Base 802 Window Tower Case](#)

[2 INTRODUCTION](#)

[3 SPECIFICATIONS](#)

[4 CONTENTS EXPLODED VIEW AND DESCRIPTION OF PARTS FAN COMPATIBILITY RADIATOR COMPATIBILITY REMOVING THE SIDE PANEL REMOVAL AND INSTALLATION OF THE CASE FRONT CHANGING THE TOP COVER INSTALLATION OF DRIVES INTO THE HDD CAGE INSTALLATION OF ADDITIONAL FAN INSIDE THE PSU SHROUD INSTALLATION OF SSDs ON THE BRACKET HANDLING OF HDD SLOT COVERS REMOVING THE FRONT DUST FILTER REMOVING THE BOTTOM DUST FILTER INSTALLING THE MOTHERBOARD INSTALLING THE PCIe CARDS INSTALLING A GRAPHICS CARD VERTICALLY INSTALLING FANS OR RADIATORS ON THE DETACHABLE TOP BRACKET INVERTED LAYOUT](#)

[5 Limited Warranty](#)


[6 Documents / Resources](#)

[6.1 References](#)

[7 Related Posts](#)



**be quiet! Silent Base 802 Window Tower Case**

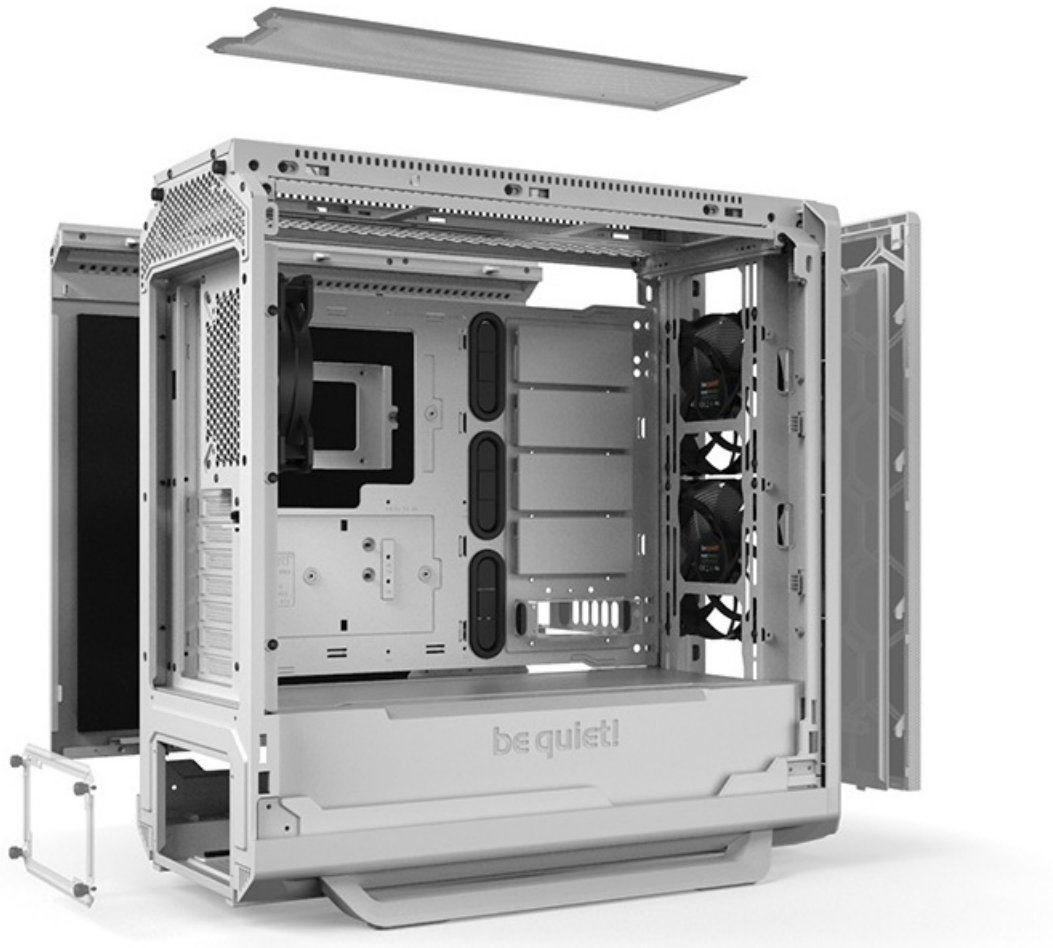

## INTRODUCTION

### Warranty

- 3-year manufacturer's warranty for the consumer (original purchase from authorized be quiet! dealers only)
- Your original receipt of purchase will be required before warranty services are rendered. Please store it carefully.
- Manipulations and/or technical modifications of any kind, or damage due to the application of mechanical force, will void your warranty.
- To read the warranty terms and conditions in full, see Service/Warranty Conditions on our website at [bequiet.com](http://bequiet.com).
- Our General Terms and Conditions of Business also apply. For details please refer online under [bequiet.com](http://bequiet.com).

### Manufacturer's details

Listan GmbH | Wilhelm-Bergner-Straße 11c | 21509 Glinde | Germany Tel. 0049 40 736 7686 – 44 Fax 0049 40-7367686-69

Email: [service@bequiet.com](mailto:service@bequiet.com)

Website: [www.bequiet.com](http://www.bequiet.com)

### Copyright

- You are not allowed to reproduce, disclose, publish or store the contents of this documentation, or excerpts of it, without the prior written consent of Listen.
- be quiet! is a registered trademark of Listen GmbH. Other products and company names mentioned in this







documentation may be the brands or trademarks of their respective owners.

- In accordance with company policy, all Listen products are subject to ongoing development. Listen reserves the right to make changes and improvements to any product described in this document without prior notice.
- Under no circumstances shall Listen be held liable for loss of data or income, or for any specific, incidental, direct, or indirect damage, however it arises.
- The content of this documentation represents the status at the time of writing. Listen does not assume, whether expressed or implicit, any liability for the correctness or completeness of the content of this documentation, including, but not limited to the implicit guarantee of market suitability and fitness for a particular purpose, unless applicable laws or jurisdiction specifically stipulate such a liability.
- Listen reserves the right to make changes to this document or to withdraw the documentation at any time without prior announcement.


## SPECIFICATIONS

Motherboard compatibility	E-ATX (30.5 x 27.5), ATX, M-ATX, Mini-ATX
Case Type	Midi-Tower
PSU	PS2 ATX (not included)
Dimensions (L x W x H in mm)	539 x 281 x 553
Material	Steel (SECC), ABS plastic
Weight (kg)	12.59 (net) / 13.34 (gross) 13.15 (net) / 14.9 (gross)*
I/O Panel	1x USB 3.2 Gen. 2 Type C, 2x USB 3.2 Gen. 1, HD Audio, Fan Switch Button
PCI Slots	7+2
Drive Bays	up to 15x 2.5 (7 included) up to 7x 3.5 (3 included)
Preinstalled fans (mm) / (rpm)	Front: 2x Pure Wings 2 140/1000 Rear: 1x Pure Wings 2 140/1000
Optional fans (mm)	Front: 1x 140 / 3x 120 Top: 3x 140 / 3x 120
Optional radiators (mm)	Front: 120 / 140 / 240 / 280 / 360 / 420 Top: 120 / 240 / 360 Rear: 120 / 140
Maximum Dimensions (mm)	CPU cooler: up to 185 PSU: up to 288 GPU: 432 / 287 (with HDD cage)
Special features	4-step fan controller (6x 3-pin) with PWM Hub


CONTENTS

Images	Part Name	Amount	Usage
	HDD cage	1	Installation of hard disk
	HDD rubber decoupling	4	Decoupled mounting of HDD
	6#32 screw	12	Affixing the motherboard and PSU bracket
	M3 screw	12	Fastening the SSD
	HDD screw	12	Affixing the HDD
	Velcro ties	6	Cable management

EXPLODED VIEW AND DESCRIPTION OF PARTS

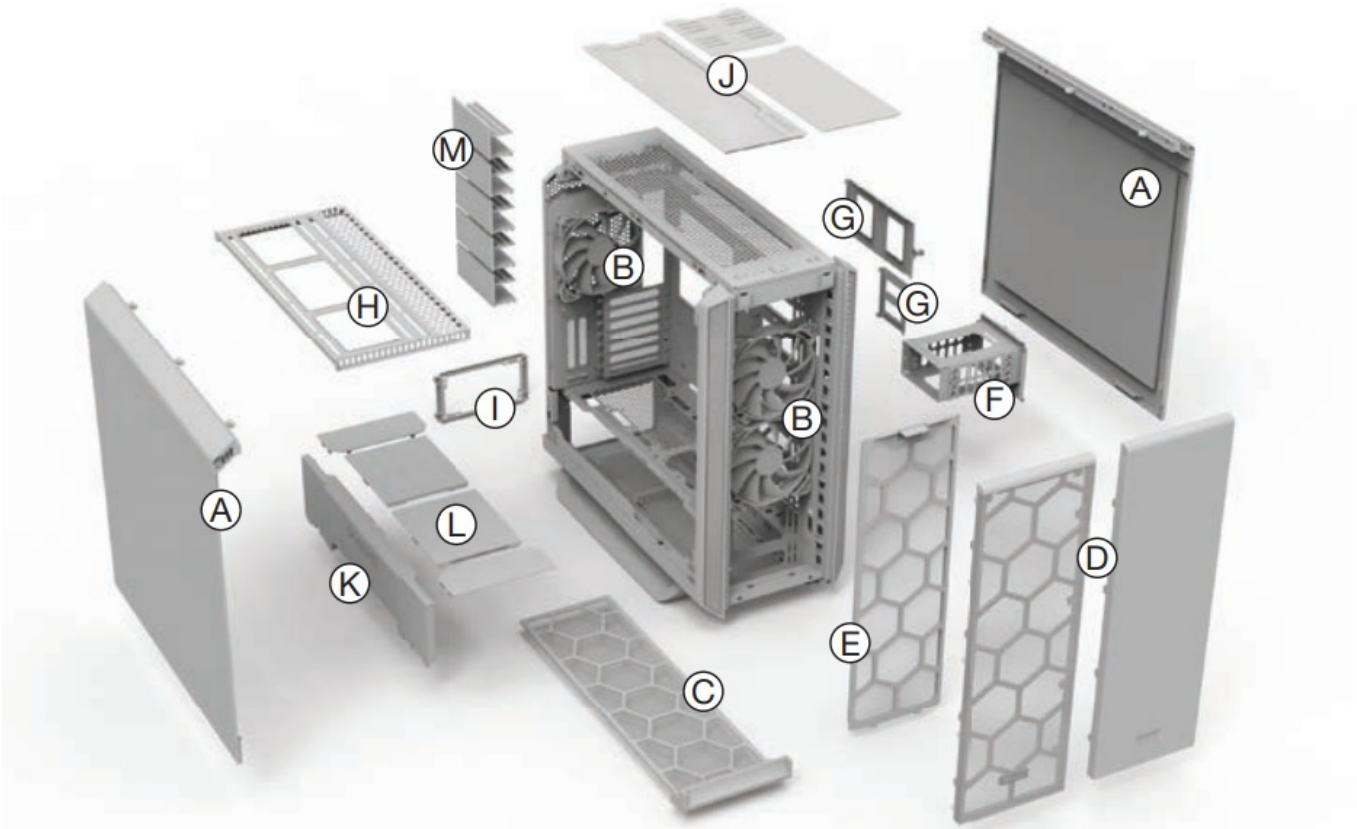

FAN COMPATIBILITY

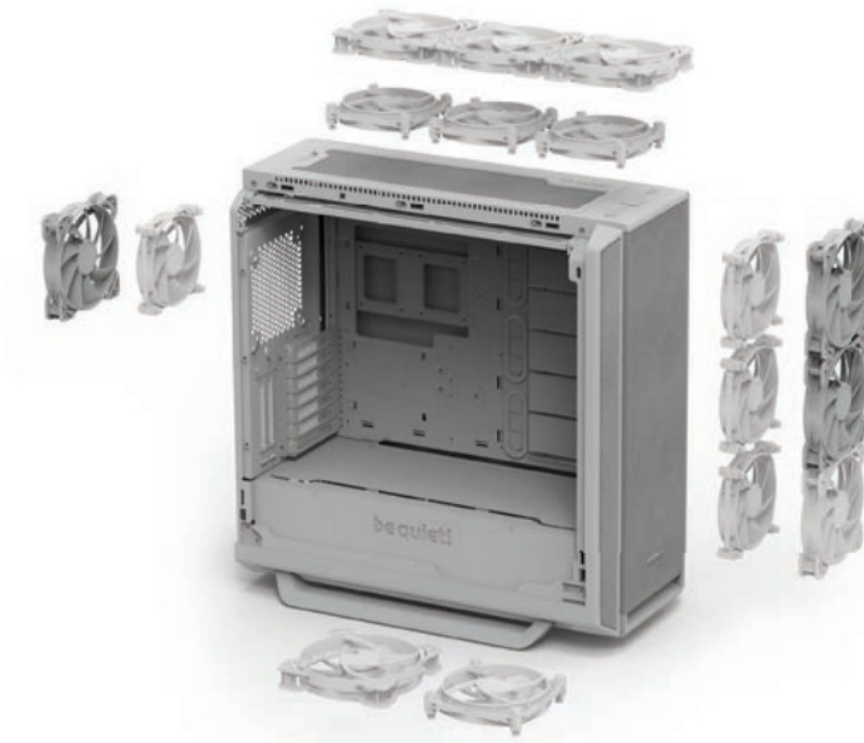


Position	Size (mm)
Top	3x 140 / 120
Front	3x 140 / 120
Rear	1x 140 / 120
PSU Cover	1x 140 / 120

## RADIATOR COMPATIBILITY



Position	Size (mm)
Top	120 / 240 / 360
Front	120 / 140 / 240 / 280 / 360 / 420
Rear	120 / 140

## REMOVING THE SIDE PANEL

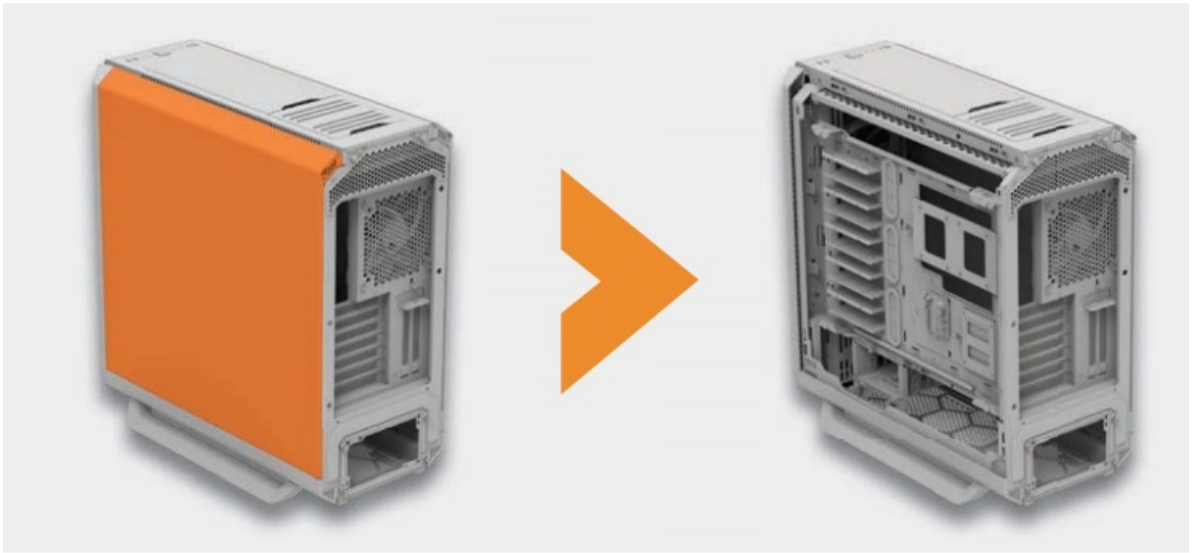

①



②




## REMOVAL AND INSTALLATION OF THE CASE FRONT





**CHANGING THE TOP COVER**



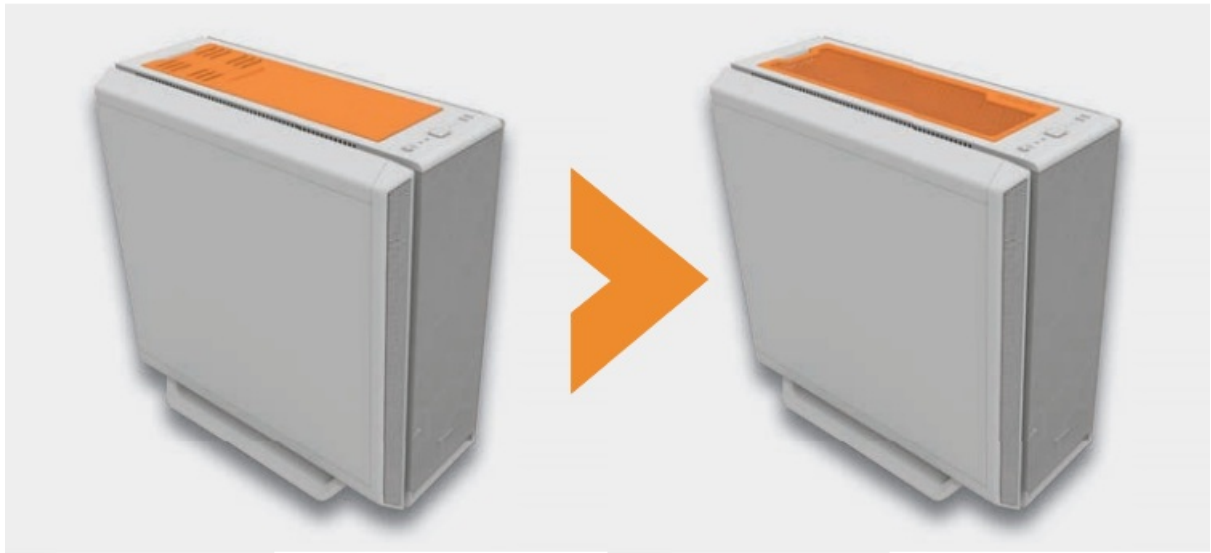


**INSTALLATION OF DRIVES INTO THE HDD CAGE**



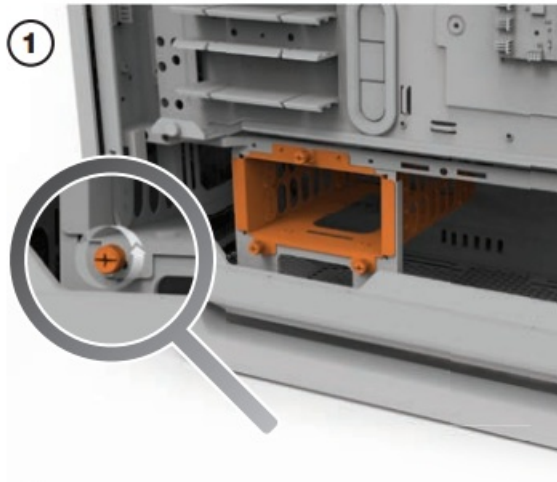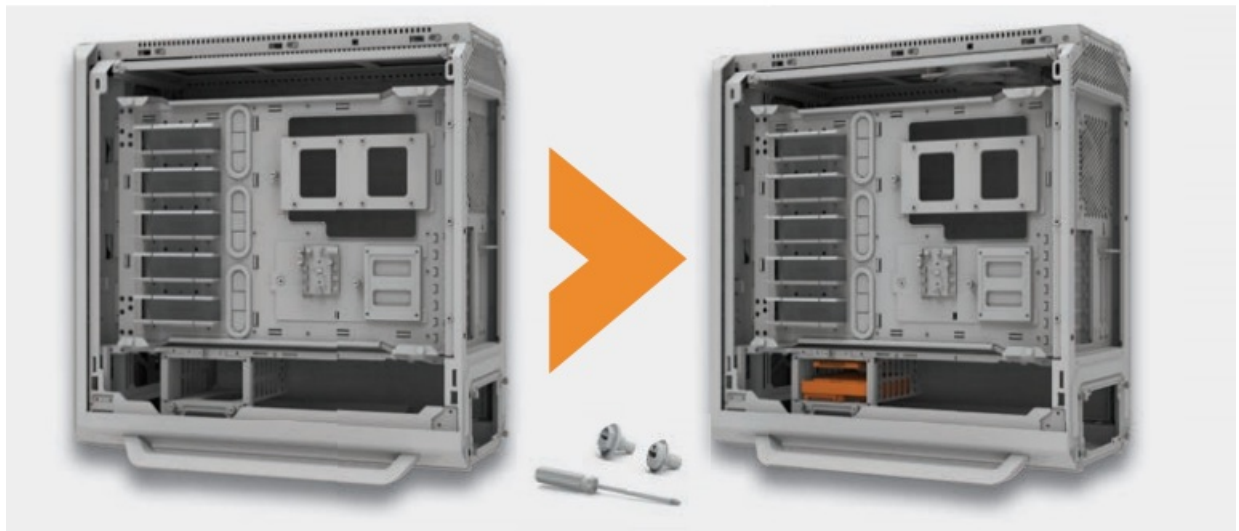


**INSTALLATION OF ADDITIONAL FAN INSIDE THE PSU SHROUD**

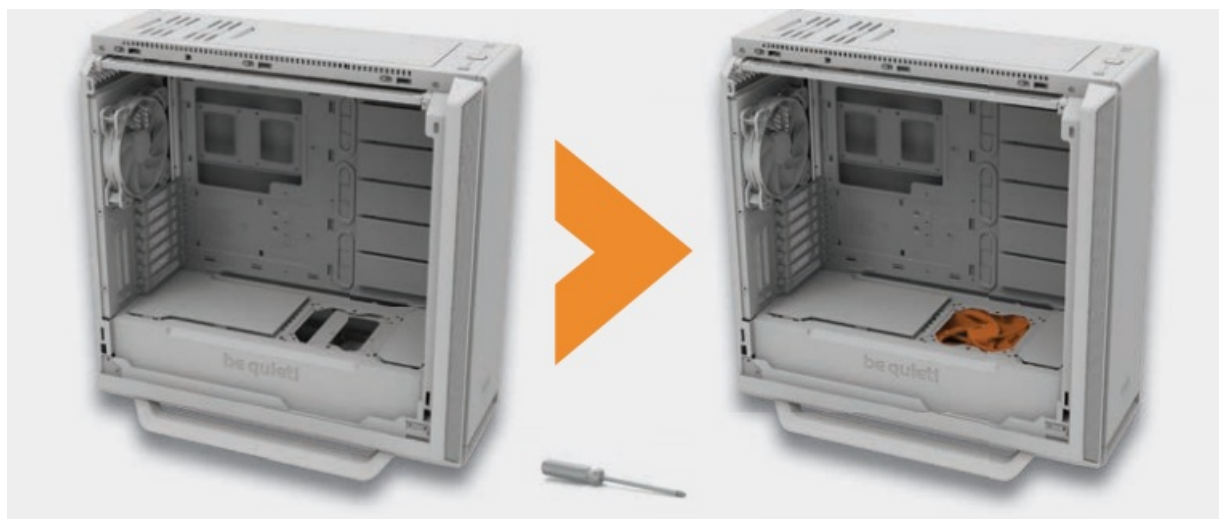


①



②

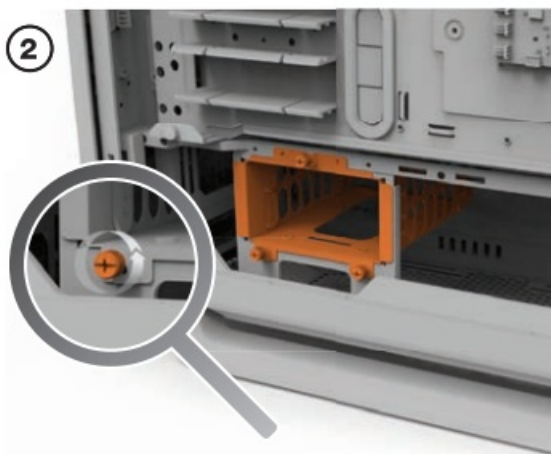





③

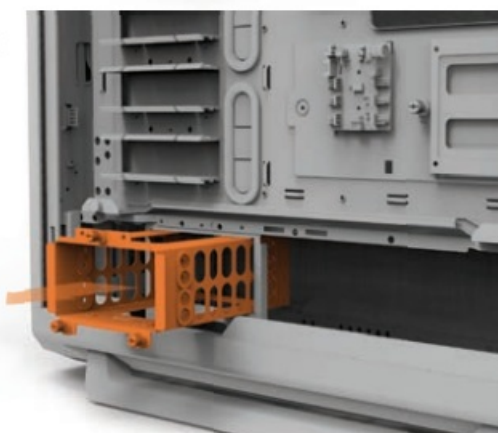




④



**INSTALLATION OF SSDs ON THE BRACKET**

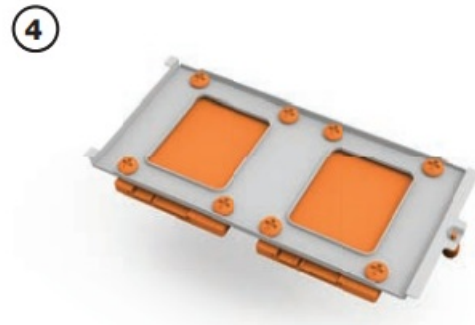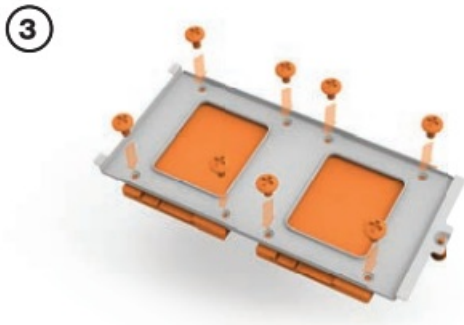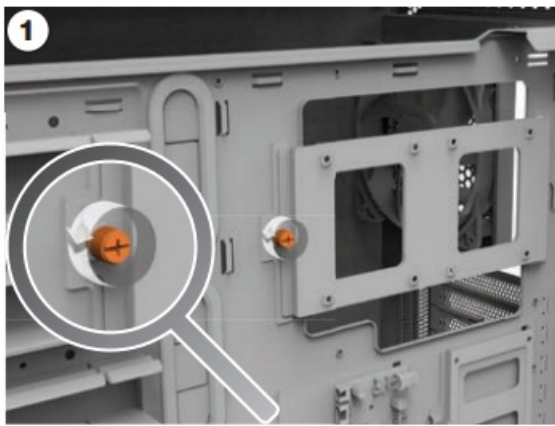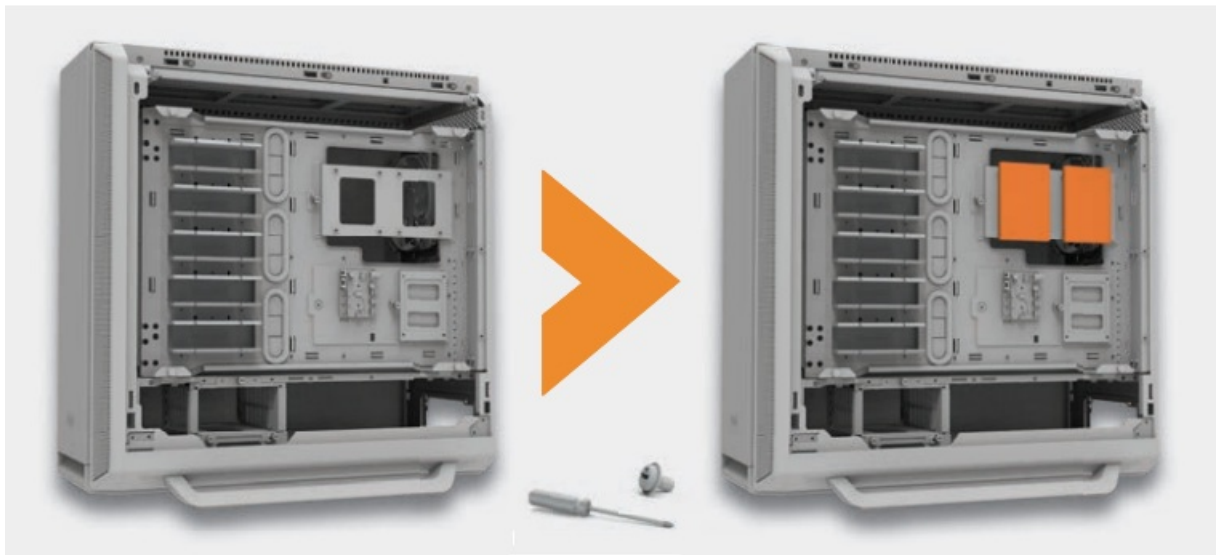


## HANDLING OF HDD SLOT COVERS

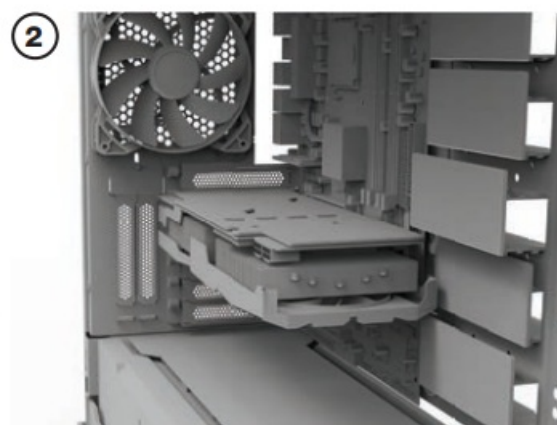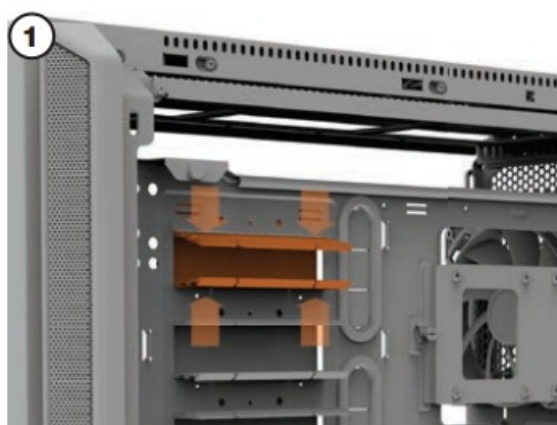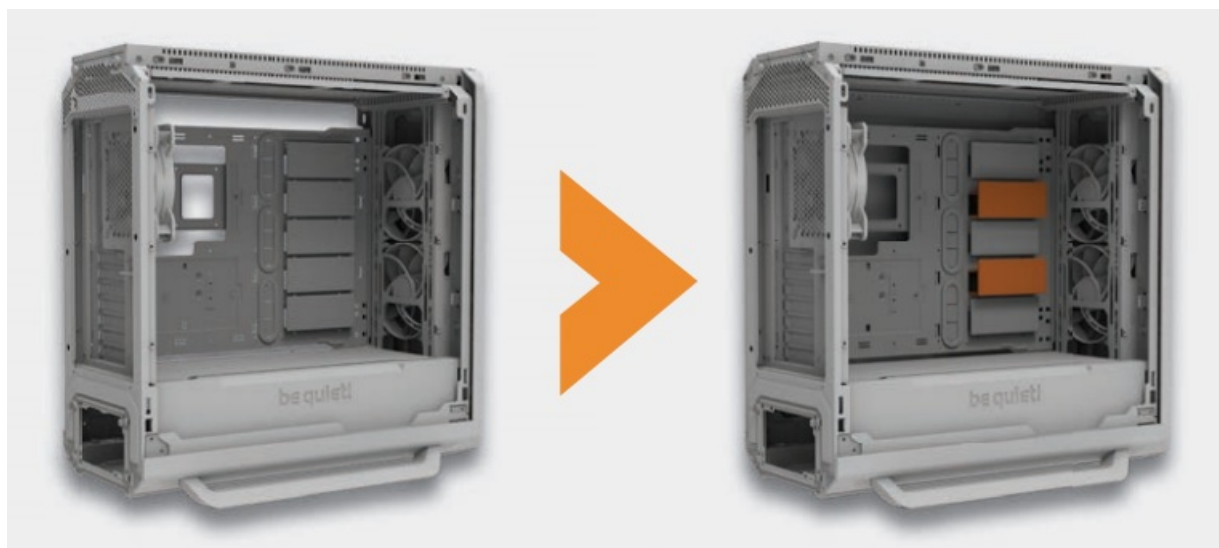

**REMOVING THE FRONT DUST FILTER**




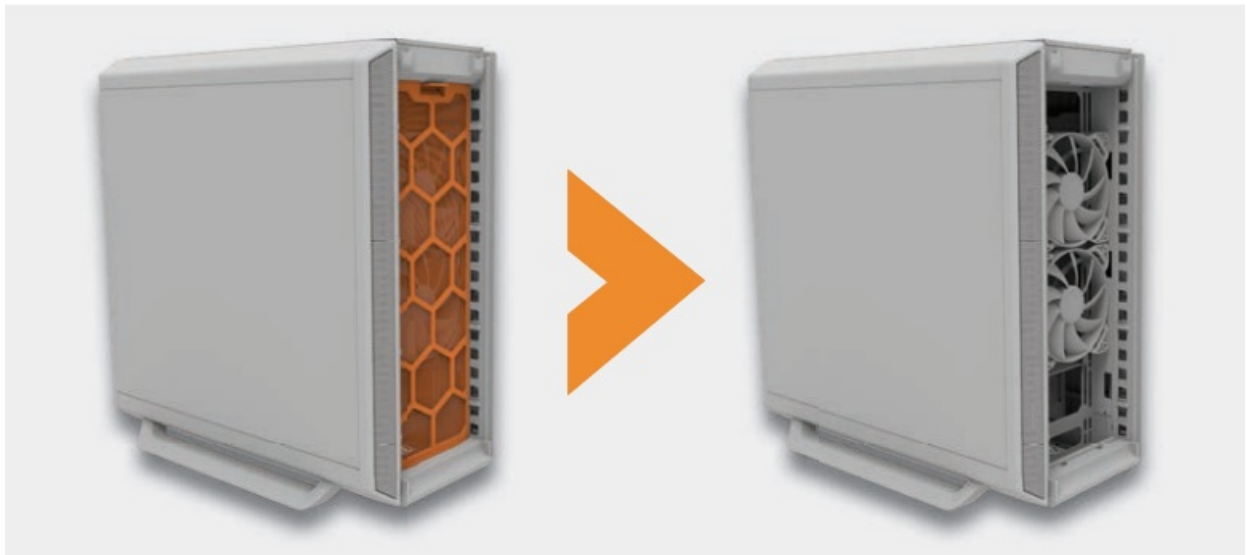

**REMOVING THE BOTTOM DUST FILTER**





**INSTALLING THE MOTHERBOARD**



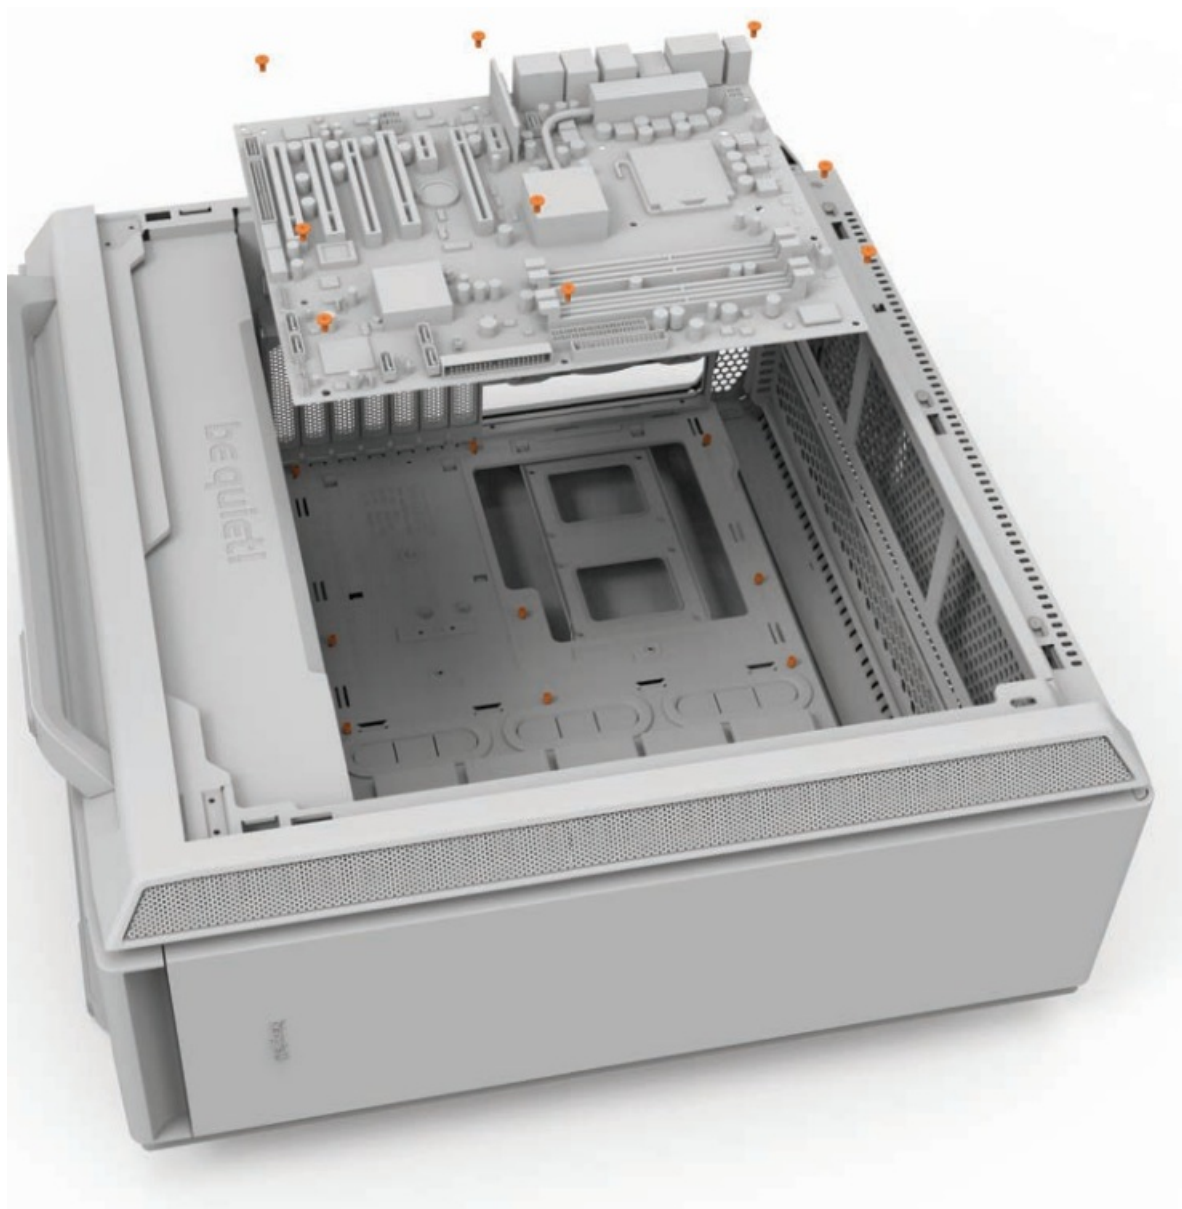


## INSTALLING THE PCIe CARDS




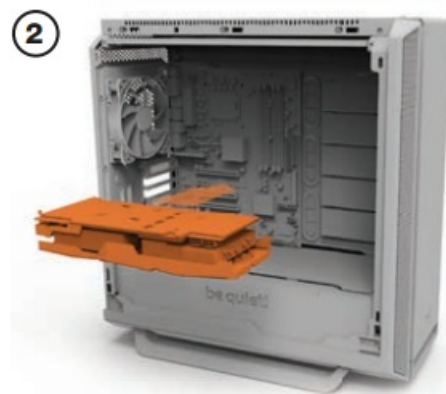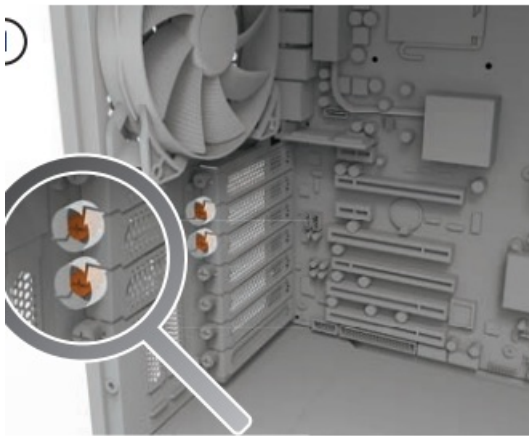

**INSTALLING A GRAPHICS CARD VERTICALLY**

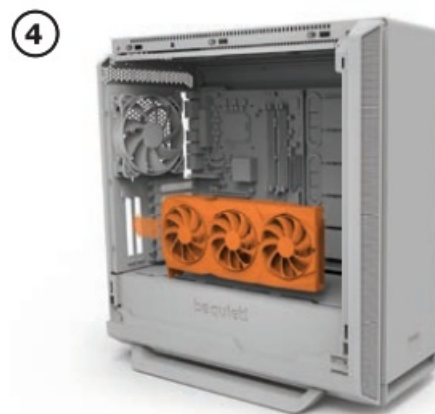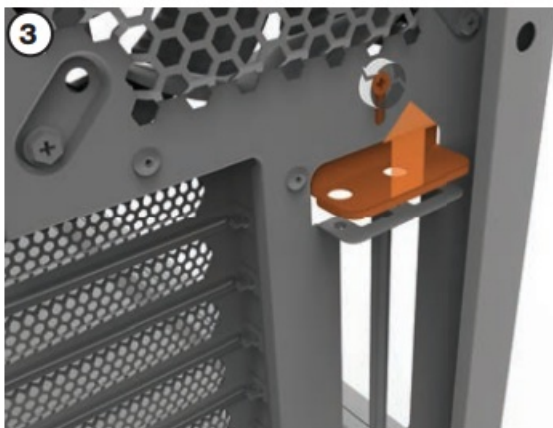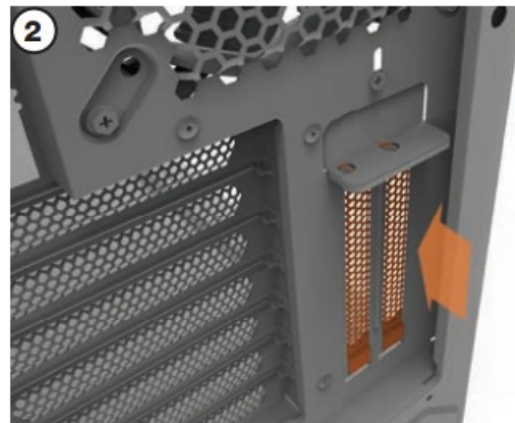

**INSTALLING FANS OR RADIATORS ON THE DETACHABLE TOP BRACKET**

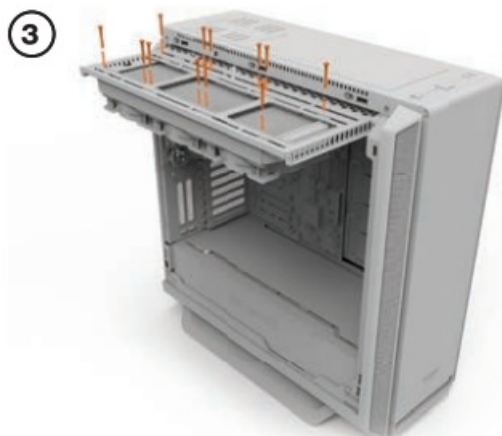

**INVERTED LAYOUT**



## Limited Warranty

As per the terms and conditions of this limited warranty as given below, be quiet! warrants its new products to be free of defects resulting from faulty materials and faulty manufacturing for the length of the warranty period.

### APPLICABILITY

This non-transferable warranty is applicable to newly purchased, previously unopened be quiet! products and is enforceable by only the original consumer purchaser. Proof of purchase is required for warranty service, so should be retained. be quiet! does not provide warranty registration services.

### WARRANTY PERIOD

For eligible products, parts and labor are warranted for the applicable warranty period from the date of purchase. The applicable warranty period varies by product model, and is identified in your user documentation, on the product package, or as listed below. Should any of these warranty periods differ, the longest specified warranty period will apply. Replaced products will be warranted for the remainder of the original warranty period or thirty days, whichever is longer.

## **EXCLUSIONS**

The following are not covered by the warranty

1. Normal wear and tear.
2. Any product which has been modified without permission from be quiet!, or on which the serial number or warranty sticker has been defaced, modified, or removed.
3. Damage, deterioration or malfunction resulting from:
  - Accident, abuse, misuse or improper use, neglect, connection to an improper voltage source, unauthorized product modification, or failure to follow instructions included with the product.
  - Fire, water, lightning, or other acts of nature.
  - Repair or attempted repair by anyone not authorized by be quiet!.
  - Shipping or transport damage (claims must be made with the carrier).
  - Any other cause which does not relate to a defect in materials or manufacturing workmanship.
4. Cartons, cases, batteries, cabinets, tapes, accessories or other consumables used with this product.
5. be quiet!, Inc. does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
6. Removal or installation charges.
7. Shipping charges.
8. Any incidental charges.

## **EXCLUSION OF DAMAGES**

be quiet!'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option. be quiet! shall not, in any event, be liable for any special, incidental, indirect, or consequential damages whatsoever, including but not limited to loss of profits, revenue, or data (whether direct or indirect), damages resulting from interruption of service and loss of business, or for liability in tort relating to this product or resulting from its use or possession, even if be quiet! has been advised previously of the possibility of such damages.

## **LIMITATIONS OF IMPLIED WARRANTIES**

There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. The duration of implied warranties is limited to the warranty length specified in Paragraph

## **LOCAL LAW AND YOUR WARRANTY**

This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

## **NO OTHER WARRANTY**

No be quiet! employee, dealer, or other agent is authorized to make any modification, extension, or addition to this warranty.

## **TO OBTAIN TECHNICAL SUPPORT OR WARRANTY SERVICE**

Please see your product owner's manual or visit the service section at [www.bequiet.com](http://www.bequiet.com) for details and contact information. You will need to provide proof of purchase for warranty service.

## **Documents / Resources**



[be quiet! Silent Base 802 Window Tower Case](#) [pdf] User Manual  
Silent Base 802 Window Tower Case, Silent Base 802, Window Tower Case

## References

- [bq be quiet! - Silent PSUs, cases and PC cooling products. PSU calculator and cooler check for your PC](#)
- [Q Quiet Capital](#)
- [Q Quiet.fr](#)
- [bq be quiet! - Silent PSUs, cases and PC cooling products. PSU calculator and cooler check for your PC](#)