



## BEAM ISD2MARINE Basic Piracy Bundle

---

### Contents [ [hide](#) ]

- [1 IsatDock2 MARINE Equipment Overview](#)
- [2 Specification Summary](#)
- [3 Antenna Connection](#)
- [4 Privacy Handset and Mounting Cup](#)
- [5 Docking and Un-docking your IsatPhone 2](#)
- [6 Mounting Orientation](#)
- [7 IsatDock2 MARINE Front Panel](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## IsatDock2 MARINE Equipment Overview

---

1. Cover Lock Clasp
2. Marine Cover
3. Mounting Cup (spring or springless cup options)
4. Privacy Handset
5. Speaker (under handset)
6. Microphone
7. Speakerphone Button
8. Cover Seal
9. IsatPhone 2 Eject Button

10. IsatPhone 2 (not included)
11. Function Buttons
12. Status Indication LED
13. Back Panel Connectors
  - a. USB Data Interface
  - b. BEAM Alert Loop connection
  - c. RJ11/POTS interface
  - d. DC power and accessory input
  - e. RJ9 Privacy handset
14. IsatDock2 Adapter

## Specification Summary


<b>Average Power Consumption Current @ 12V</b>	<b>Average</b>	<b>Watts</b>
Power w/o IsatPhone 2	130mA	1.6W
Standby + Charging	360mA	4.3W
Transmit + Charging	875mA	10.5W
Sleep Mode	5mA	60mW
Peak Current	3.5A	42W
Physical Specifications	Metric	Imperial
Dimensions	276 x 208 x 100 (mm )	10.9 x 8.2 x 3.9 (inches)
Weight – dock	1.67kg	3.67lbs
Total Kit Weight	2.72kg	5.99lbs

<b>Environmental Specifications</b>		
Operating Range	-30°C to +70°C	-22oF to +158oF
Storage	-35°C to +85°C	-31oF to +185oF
Battery Charging Temp*	0°C to +45°C	+32oF to +113oF
Humidity		<= 75% RH
<b>I/O Alert</b>		
1 x BEAM Alert Loop	Bare wire – “Normally closed” loop IN to OUT	
Personal Alert	In-built – single key press	
<b>Connectors / Interfaces</b>		
POTS/RJ11	RJ11/2-wire, 5REN @ 600m Adjustable dial, ring, busy tone configured frequency and adaptive impedance.	
BEAM Antenna	TNC-Female	
GPS Antenna	SMA-Female	
10-32V DC	4-way microFit (AC/DC adapter, or DC	
Privacy Handset Port	lead) RJ9 connector	
Configuration/Data	USB Micro	
Speaker phone	In-built speaker/microphone	

\* It is ideal for the ambient temperature to be approximately 18 degrees below the 45oC upper limit for the handset to charge the battery whilst docked.

## Antenna Connection

To connect the IsatDock2 MARINE to the GSPS BEAM Antenna, requires the use of certified satellite and GPS antenna cables. These cables are purpose built cables as approved by BEAM to manage the power requirements for the antenna system.

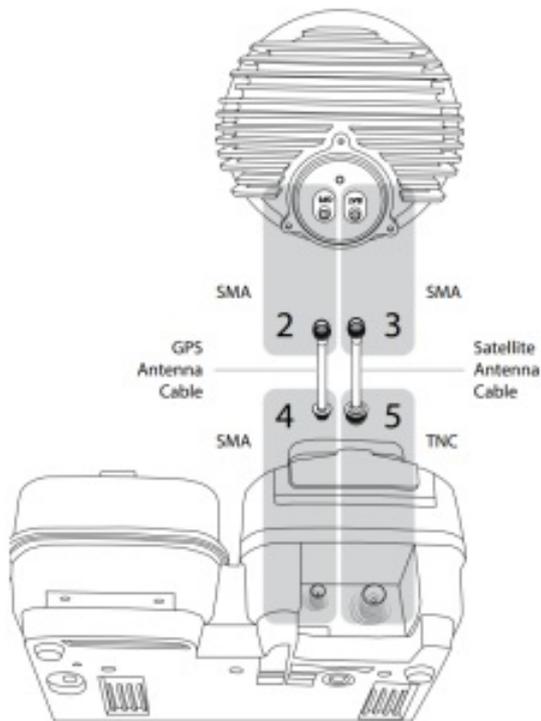

1. Refer to the antennas installation guide for antenna mounting and location requirements.
2. Connect the antenna cable labelled “GPS” to the SMA antenna connector labelled “GPS”.
3. Connect the antenna cable labelled “Inmarsat” to the SMA antenna connector labelled “SAT”.
4. Connect the GPS-SMA (Female) cable end to the IsatDock2 MARINE’s SMA connector.
5. Connect the TNC (Female) antenna cable end to the IsatDock2 MARINE’s satellite connector.

### **WARNING**

DO NOT pull with force on the cables from the rear of the IsatDock2 MARINE. Please

install strain relief clamping for the antenna cables where required. Correct installation of the antenna system is a vital part of the IsatDock MARINE system, to ensure reliable functionality, and drop-free calls.

— **WARNING**

Changes or modifications not expressly approved by BEAM Communications could void the product warranty

— **WARNING**

To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 55 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

## **Privacy Handset and Mounting Cup**

There are two unique mounting cups fit for the privacy handset. (1) springless cup for either a desk mounted cradle position or a wall mounted cradle position. (2) spring cup for heavy duty use.




### **(1) Springless Cup**

#### **Desk mounted cradle position**

The 'springless' cup is fitted to the docking station with the mounting clip in a 'flush' position.

#### **Wall mounted cradle position**

The mounting clip can be slid out and reversed, producing a protruding point that the Privacy handset rests upon. For a wall mounted docking station this retains the privacy handset and the springless cup has enough height to allow the handset to rise up off the clip and out of the mounting cup. This option would be best suited for stable conditions

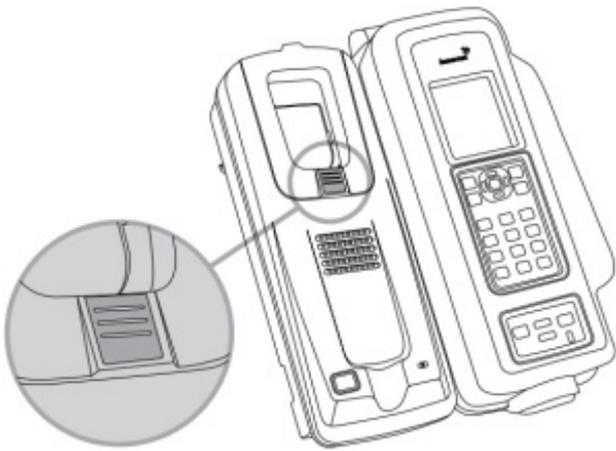


## **(2) Spring Cup – Heavy duty use**

In harsh environments, the Privacy handset is actively retained in the mounting cup. This is achieved by using the 'spring' mounting cup. To remove the handset from the cup, the phone is lifted up against the pressure of the spring until it clears the lower mounting pip and can be removed from the docking station.




## **Docking and Un-docking your IsatPhone 2**

1. Lift the antenna 'cover' and rotate through 180 degrees, then push down into the open position.
2. The 'cover' in the base of the phone should be rotated 180 degrees to be in the open position

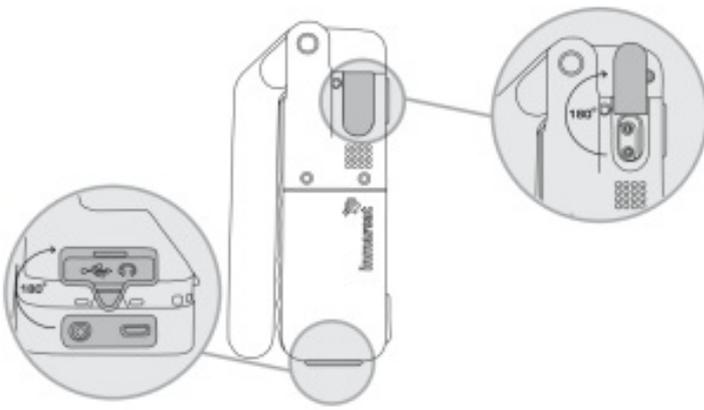


3. Detach the USB/Audio adapter from the dock and insert by hand in the base of the IsatPhone 2.

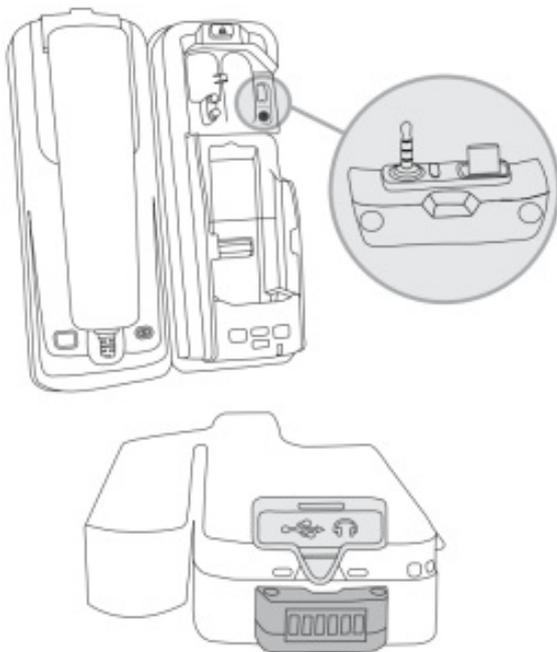

4. To dock the handset, open the antenna slightly, align the IsatPhone 2 with the phone tray and slide the handset down until it seats flush to the bottom of the tray. Swing the phone down into the cradle by applying pressure to the top of the handset. An audible 'click' is heard when the phone is in the docked position.


- 
5. To remove the handset from the cradle, press the EJECT button at the top of the docking station. The dock will swing out and the handset can be removed.
  6. Place the adapter back in its dedicated slot, when the phone is not in the docking unit.

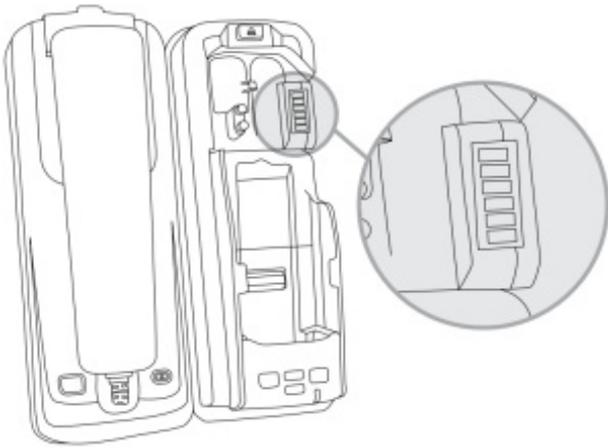


## Mounting Orientation

There are four keyhole shaped slots in the mounting bracket that mate with feet on the rear of the docking station. To attach the bracket, the larger end of the keyhole will pass over the feet. The dock is then slid down to lock the feet into the narrow section of the keyhole.


- a** Fit the docks feet in large holes of the bracket

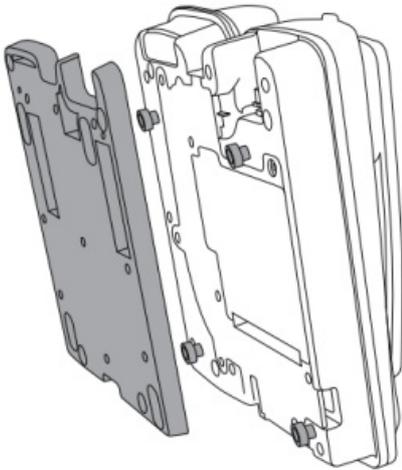

— Slide Dock down

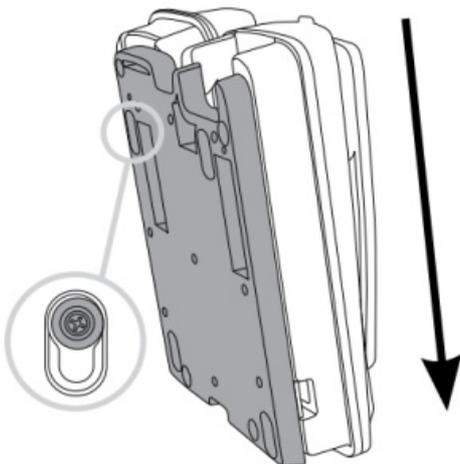

**C** Final lock position

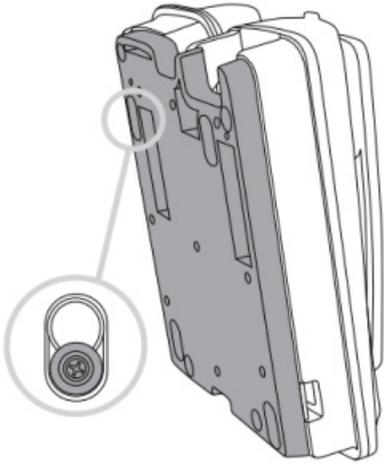

The IsatDock2 MARINE can be mounted either flat on a desk or vertically to a wall. When wall mounting the docking station, the wall bracket is first screwed to the wall and the dock is slid into place. One security pin is then slid into place locking the dock to the wall.

The docking station can be elevated in the desk mounted orientation by two retractable feet included in the mounting bracket.

---

**NOTE:** For extensive mounting instructions please refer to your IsatDock2 MARINE Manual.

### IsatDock2 MARINE Front Panel

Location	Button Mode	Action	LED/Sound
	Mute Press ON /OFF	<b>In a Call:</b> Mute the microphone (uplink) on the privacy handset if connected to cradle.	LED turns RED – Muted LED turns OFF – Not muted LED flashing Yellow – RJ11/POTS in use

 OR 	UP/DOWN	<b>In a Call:</b> Increase/decrease volume on the internal hardware or privacy handset (optional accessory) if connected to cradle.	Audio will sound louder/quieter in privacy handset with each press.
	Single Press (1 second)	Send a Personal Alert message to the IsatPhone 2's pre-configured destination *	A beep will sound to indicate that a Personal Alert button was pressed.#
 + 	Brightness dual button simultaneous press (1 second)	<b>Out of Call:</b> Enter LED brightness change mode. Press UP and DOWN arrows to vary intensity. Mode will automatically exit after 5 seconds after the last button press.	All LED's will change to WHITE and a double beep will sound when entering brightness change mode. A short single beep will sound when exiting change mode.
	Speakerphone press ON/OFF	<b>In a Call:</b> Terminate call if speakerphone mode is active Activate speakerphone mode if Privacy Handset mode is active.	LED turns GREEN – Speakerphone mode active LED turns OFF – Speakerphone mode not active

	<p><b>Out of Call:</b> Answer inbound call in speakerphone mode</p>	
--	---	--

\* This action is optional, only when the Personal Alert Mode for your IsatPhone 2 is configured.

# A beep will only sound if audible alerts are enabled in the Falcon

BEAM Communications Pty Ltd 5/8 Anzed Court, Mulgrave Victoria, 3170, AUSTRALIA

Web: [www.beamcommunications.com](http://www.beamcommunications.com)

Information: [info@beamcommunications.com](mailto:info@beamcommunications.com)

Support: [support@beamcommunications.com](mailto:support@beamcommunications.com)

Tel: +61 3 8588 4500

Fax: +61 3 9560 9055



[www.beamcommunications.com](http://www.beamcommunications.com)

## Documents / Resources

	<p><a href="#">BEAM ISD2MARINE Basic Piracy Bundle [pdf]</a> User Guide ISD2MARINE, Basic Piracy Bundle, ISD2MARINE Basic Piracy Bundle</p>
--	---

### References

- [User Manual](#)

## Related Posts

[WILLIAMSAV Convey Video Basic User Guide](#)



Convey Video Basic Connection Guide 10300 Valley View Road Eden Prairie, MN 55344



### [Gym Beam Hula Hoop User Guide](#)

Gym Beam Hula Hoop IMPORTANT SAFEGUARDS: In order to facilitate the correct operation of this product, please...

### [weasy Basic Clothes Drying Function User Guide](#)

weasy Basic Clothes Drying Function User Guide QUICK START GUIDE (BASIC CLOTHES DRYING FUNCTION)

1. Take the aluminum...

### [D-Link Basic setup guide for QoS DSL-G2562DG Installation Guide](#)

Basic setup guide for QoS (Can be used with DSL-G2562DG and the DWR-956M) Quality of service (QoS)

is...

Basic Piracy Bundle, Beam, ISD2MARINE, ISD2MARINE Basic Piracy

BEAM Bundle

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [About Us](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#) | [LinkedIn](#) | [FaceBook](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.