



beamZ 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX User Guide

[Home](#) » [beamZ](#) » beamZ 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX User Guide 

Contents

- [1 beamZ 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX](#)
- [2 POWER SUPPLY](#)
- [3 REMOTE CONTROLLER](#)
- [4 CONTROL MENU](#)
- [5 DMX CHANNELS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



beamZ 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX




POWER SUPPLY

The label on the backside of the unit is indicated on this type of power supply must be connected. Check that the mains voltage corresponds to this, all other voltages than specified, the light effect can be irreparably damaged. The product must also be directly connected to the mains and may be used. No dimmer or adjustable power supply.


WARNING: Always connect the unit to a protected circuit (circuit breaker or fuse). Make sure the unit has an appropriate electrical ground to avoid the risk of electrocution or fire.

DMX512 CONTROL

If you are using a standard DMX controller, you can connect the DMX output of the controller directly to the DMX input of the first unit in a DMX chain. Always connect the output of one unit with the input of the next unit until all units are connected.

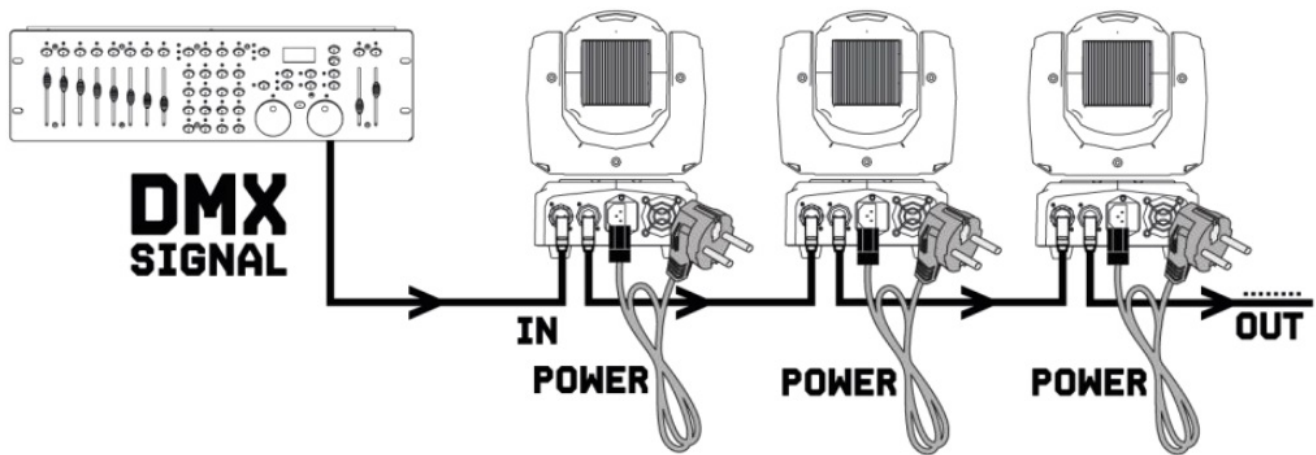

CAUTION: At the last unit, you must close the DMX line with a terminating resistor. Take an XLR connector and solder a 120 Ohm resistor between signal (-) and signal (+) and connect it to the DMX output of the last unit in the line.

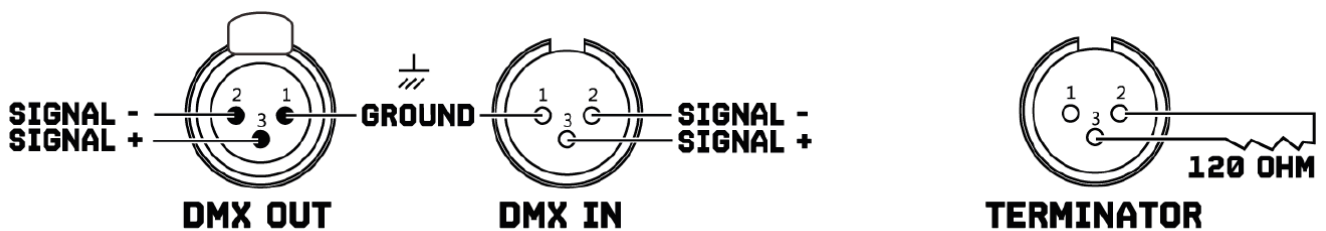

REMOTE CONTROLLER

BUTTON	FUNCTION
ON	ON
OFF	OFF
DMX	DMX Mode
AUTO	Auto Running Mode
SPEED+	Auto Running Speed up
SPEED-	Auto Running Speed down
VOICE	Sound Control Mode
MIC+	Sound Sensitive +
MIC-	Sound Sensitive -



CONTROL MENU

MENU	DESCRIPTION
A001-A512	DMX address setting
A1.1 - A1.9	Internal program 1-9 Auto program
S1.1 - S1.9	Internal sound program Sound program, 1-9 means sensitive

DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN Rotation	000-255	0-360degrees movement
2	PAN Rotation endless	000-009	No function
		010-127	Pan forward rotate from slow to fast
		128-255	Pan reverse rotate from fast to slow
3	Dimmer	000-255	Linear dimmer from dark to brighter
4	Strobe	000-009	No function
		010-255	Strobe from slow to fast
5	Gobo Colour	000-255	Red dimmer from dark to brighter
6		000-255	Green dimmer from dark to brighter
7		000-255	Blue dimmer from dark to brighter
8		000-255	White dimmer from dark to brighter
9	Line Colour	000-255	Red dimmer from dark to brighter
10		000-255	Green dimmer from dark to brighter
11		000-255	Blue dimmer from dark to brighter
12		000-255	White dimmer from dark to brighter
13	Ball Colour	000-255	Red dimmer from dark to brighter
14		000-255	Green dimmer from dark to brighter
15		000-255	Blue dimmer from dark to brighter
16		000-255	White dimmer from dark to brighter
17	Mode	000-050	CH1-CH16 Valid
		051-149	Random Auto Running
		150-255	Sound Control
18	Reset	000-199	None
		200-255	Reset after 3s

Documents / Resources



[beamZ 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX](#) [pdf] User Guide

153.705 V1.1, Whirlwind 3-In-1 LED Effect DMX, 153.705, V1.1 Whirlwind 3-In-1 LED Effect D MX, 153.705 V1.1 Whirlwind 3-In-1 LED Effect DMX