



beamZ DMX65W Wireless Battery Operated DMX Controller User Guide

[Home](#) » [beamZ](#) » beamZ DMX65W Wireless Battery Operated DMX Controller User Guide 





**154.067 V1.1
DMX65W CONTROLLER
QUICK START GUIDE**

Contents


- [1 WIRELESS DMX](#)
- [2 CREATE A CHASE](#)
- [3 PLAY CHASE](#)
- [4 DELETE CHASE](#)
- [5 TIMER FUNCTION](#)
- [6 DISPLAY](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

WIRELESS DMX

This controller has a wireless DMX transmission on board which operates on 2.4Ghz frequency band. The controller acts as a transmitter and needs a receiver (item 154.077 BPP Wireless DMX Transmitter/Receiver) or Beamz fixture with built-in 2.4Ghz DMX transmission.

To activate wireless DMX:

- Note:** Keeps DMX address standard at value “1”, in complex installation you can change start address.


> Select <WIRELESS EN> and press < > button to switch between “ON” and “OFF”.

OMX UNIVERSE	COLOUR	DMX CHANNELS
1	Red	1-512
2	Green	1-512
3	Yellow	1-512
4	Blue	1-512
5	Magenta	1-512
6	Cyan	1-512
7	White	1-512

CREATE A CHASE

Create your own chase:

- Before we go further you need to know each function in OLED display:

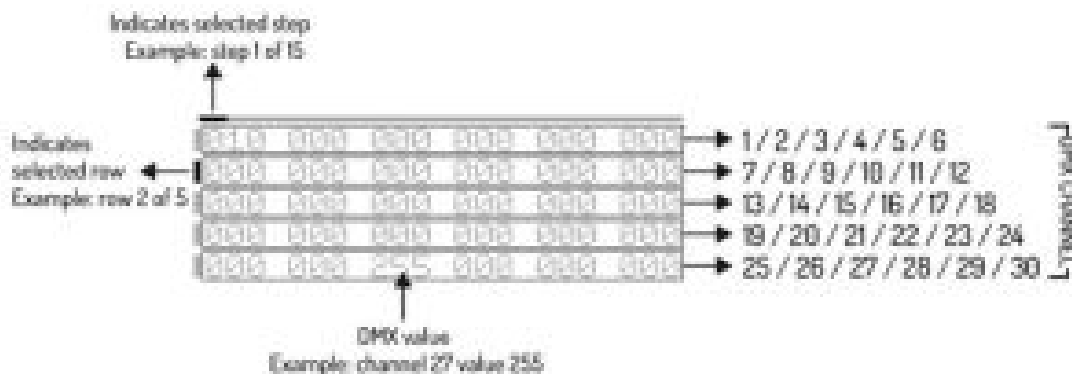

Select DMX channel with <▼> button and select DMX value with the fader corresponding to the DMX channel,
> Select step with <▶> button and repeat the above step up to a maximum of 15 steps.
Note: Last step must be confirmed with <ENTER> button.
Ready? Go back to the “effects” menu with <▲> button.

PLAY CHASE

Play your own chase:

> Press <MENU> button,
> Select <EFFECTS> and confirm with <ENTER> button,
> Select <PLAY CHASE> and confirm with <ENTER> button,
> Select your desired light output with master fader
> Select your desired chase ID with chase fader
> Select your desired chase speed with speed fader
>> Select your desired fade time between each step with fade fader
Ready? Go back to the “effects” menu with <◀> button.

DELETE CHASE

Delete your own chase:

> Press «MENU» button,
> Select <EFFECTS> and confirm with <ENTER> button,
> Select <ID> and confirm with <ENTER> button,
> Select your chase ID with <▲> or <▼> button and confirm with <ENTER> button,
> Select <DELETE CHASE> and confirm with <ENTER> button,
Note: This step cannot be undone!

TIMER FUNCTION

This controller is able to activate and deactivate a chase (ID number) at a specific time.



CAUTION! When using the timer function, do not switch off the controller!

Set your timer function:

> Press <MENU> button,
> Select <SETTINGS> and confirm with <ENTER> button,
> Select <POWER UP> and confirm with <ENTER> button,
> Select your chase ID with <▲> or <▼> button and confirm with <ENTER> button,

Note: number 8 means manually

> Select <TIME> and confirm with <ENTER> button,
> Enter the actual time by “TIME”
> Enter start time by “POWER ON”
> Enter end time by “POWER OFF”

Note: For long-term and optimal battery life, we recommend setting “POWER OFF BAT” at a minimum of 10%.
Controller will automatically switched off as soon as set percentage is reached.

Ready? Go back to the “main” menu with <◀> button.

DISPLAY

For longer operation and to save battery energy, you can automatically switch off OLED display after no operation has taken place for a certain period of time.

Set your display battery saver:

> Press <MENU> button,
> Select <SETTINGS> and confirm with <ENTER> button,

- > Select <DISPLAY> and confirm with <ENTER> button,
- > Select <SCREEN MODE> and select “ON”, “OFF” or “LOGO” with <▶> button,
- > Select <SCREEN TIME> and confirm with <ENTER> button,
- > Select your time between 3 till 255 seconds with <▲> or <▼> button and confirm with CENTER) button.

Ready? Go back to the “main” menu with <> button.

When used in public spaces, unauthorized persons can consciously or unconsciously change the lighting settings. This is usually undesirable and you can therefore set a password.

Set your password:

- > Press <MENU> button,
- > Select <SETTINGS> and confirm with <ENTER> button,
- > Select <PASSWORD> and select “ON” or “OFF” with <▶> button,
- > Select <SET PASSWORD> and confirm with CENTER> button,
- > Fill in the standard password <▲>,<▼>,<▲>,<▼>
- > Now you can create your own password with <◀>, <▲>, <▶> or <▼> buttons.

Ready? Go back to the “main” menu with <◀> button.

BEAMZ
YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static, washes, sound-activated club effects, strobes & backlights, LED lighting, for and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

BEAMZLIGHTING.COM

Documents / Resources

The cover of the 'BEAMZ MADE EASY' quick start guide for the DMX65W controller. It features the BeamZ logo and the text 'DMX65W CONTROLLER QUICK START GUIDE'.	<p>beamZ DMX65W Wireless Battery Operated DMX Controller [pdf] User Guide DMX65W, Wireless Battery Operated DMX Controller</p>
The cover of the 'BEAMZ MADE EASY' user manual for the DMX65W controller. It features the BeamZ logo and the text 'DMX65W CONTROLLER USER MANUAL'.	<p>beamZ DMX65W Wireless Battery Operated DMX Controller [pdf] User Manual DMX65W, Wireless Battery Operated DMX Controller, DMX65W Wireless Battery Operated DM X Controller, Battery Operated DMX Controller, DMX Controller, Controller</p>