



Beautiful 19016 Programmable Temperature Kettle with Touch Activated Display Instruction Manual

[Home](#) » [Beautiful](#) » Beautiful 19016 Programmable Temperature Kettle with Touch Activated Display Instruction Manual 



Contents

- 1 Programmable Temperature Kettle with Touch-Activated Display
 - 1.1 Instruction Manual
- 2 Section 1
- 3 Safety
 - 3.1 IMPORTANT SAFEGUARDS
 - 3.2 ADDITIONAL IMPORTANT SAFEGUARDS
 - 3.3 NOTES ON THE PLUG
 - 3.4 NOTES ON THE CORD
 - 3.5 PLASTICIZER WARNING
 - 3.6 ELECTRIC POWER
- 4 Section 2
- 5 Instructions
 - 5.1 Getting To Know Your Programmable Temperature Kettle
 - 5.2 Touch-Activated Display Control Panel
 - 5.3 Before Using for the First Time
 - 5.4 Operation
 - 5.5 Beautiful Tea Chart
 - 5.6 Boil-Dry Protection
 - 5.7 User Maintenance Instructions
 - 5.8 Care & Cleaning Instructions
 - 5.9 Descaling
 - 5.10 Storing Instructions
 - 5.11 Troubleshooting
 - 5.12 Limited Two-Year Warranty
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts

Programmable Temperature Kettle with Touch-Activated Display

Instruction Manual



Section 1

The kitchen is my family's happy place. It's where we cook and eat and bake and laugh and share our most beautiful moments together. That's what inspired the creation of Beautiful, my new collection of easy-to-use kitchenware that you'll want to keep out on your kitchen counter. So whether your kitchen has flour all over the place from a kid's baking session or you're throwing an adult dinner party, I hope every step will be simple, delicious and beautiful!

- Drew ♥

www.cookwithbeautiful.com

Safety



IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS.

1. Read all instructions before using.
2. Do not touch hot surfaces. Use the handle.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or power base in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. This Kettle is not a toy. Children should be supervised to ensure they do not play with the Programmable Temperature Kettle or power base.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or it is dropped, or has been damaged in any manner. Contact Consumer Service.

NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.

9. Contact Consumer Service for examination, repair or adjustment.
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
11. Do not use the power base for other than intended use.

12. The Programmable Temperature Kettle may be used ONLY with the power base provided. The power base may be used ONLY with the Programmable Temperature Kettle.
13. The Programmable Temperature Kettle must never be used on a range top.
14. Do not use outdoors.
15. Never move the appliance by pulling on the cord. Do not let cord hang over edge of table or counter, or touch hot surfaces.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
CAUTION: To prevent the Programmable Temperature Kettle from overturning, and to prevent damage to property or injury, always position the power base on a stable, level surface, out of the reach of children.
18. To disconnect, press  to turn the power base OFF.
Then remove plug from wall outlet.
19. This product is designed for household only. Do not use the Programmable Temperature Kettle for other than its intended purpose.
20. Be certain lid is down before operating appliance. Scalding may occur if the lid is opened during heating.
21. Do not clean the Programmable Temperature Kettle with abrasive cleansers, steel wool pads, or other abrasive material.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use water only in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. Do not operate appliance without water (dry) or with an insufficient amount of water.
5. Do not fill above the MAX water level. If the Programmable Temperature Kettle is over-filled, there is a risk that boiling water may be ejected.
6. To avoid accidental scalding or burns, use extreme caution while moving this appliance when it contains hot water, and while pouring hot water from this appliance.
7. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance. Contact Consumer Service.

8. If this power base or Kettle falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water. Contact Consumer Service for examination and repair.
9. Do not leave this appliance unattended during use.
10. Always pour water into Programmable Temperature Kettle before plugging in and heating the appliance. Never pour water into heated Kettle.
11. Do not block emitted steam from the spout during use.
12. Do not place this appliance in a microwave oven.

WARNING:

- **To avoid personal injury, always use extreme caution when handling hot water.**
- **Do not touch any Programmable Temperature Kettle surface during and after use.**
- **Never lift the Programmable Temperature Kettle lid when boiling water.**

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding- type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur, or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Section 2

Instructions



Getting To Know Your Programmable Temperature Kettle


Product may vary slightly from illustration

1. Kettle Lid
2. Kettle Handle with Lid Release
3. MAX Water Level Indicator (not shown)
4. Touch-Activated Display Control Panel
5. Digital TEMP Display
6. Power Base with Center Electrical Connector
7. Power Cord with Polarized Plug (not shown)
8. Non-Skid Feet (not shown)
9. Cord Storage (not shown)




Touch-Activated Display Control Panel



A screen that only shows up when you need it.

The  button and any TEA or BOIL button will illuminate when active and vanish when not in use. Beautiful tea drinkers! This variable temperature control can be programmed for precision water temperature for a perfect brew every time.



- | | | |
|--|-----------|--------------------|
| 1.  | 4. Green | 7. + and – Buttons |
| 2. Digital TEMP Display | 5. Oolong | 8. Warm |
| 3. White | 6. Boil | |




- When the Programmable Temperature Kettle is plugged in, a tone will sound, the control panel will illuminate for 1 second. The  button will illuminate and then pulse slowly on and off.
- When  is pressed, a tone will sound, and the control panel will illuminate and remain active for 20 seconds.

- Press  to STOP any operation.




- When any TEA or BOIL button has been pressed, a tone will sound and preset target temperature will be displayed on the Digital TEMP Display.
- In 5 seconds, the current water temperature (°F) will be displayed.
- After water is heated to the programmed temperature, the Kettle will advance to WARM. At the end of 30 minutes, the Programmable Temperature Kettle will automatically turn OFF. If the WARM button is pressed, the unit will turn OFF when the target temperature is reached.


White

- When brewing white tea, press WHITE to begin operation. The Programmable Temperature Kettle will begin heating water to 165°F/75°C. When the temperature is reached, 3 tones will sound as the Kettle advances to WARM.
- Press  to turn OFF WHITE as the unit advances to standby mode.


Green

- When brewing green tea, press GREEN to begin operation. The Programmable Temperature Kettle will begin heating water to 175°F/80°C.
When the temperature is reached, 3 tones will sound as the Kettle advances to WARM.
- Press  to turn OFF GREEN as the unit advances to standby mode.

Oolong

- When brewing oolong tea, press OOLONG to begin operation. The Programmable Temperature Kettle will begin heating water to 195°F/90°C. When the temperature is reached, 3 tones will sound as the Kettle advances to WARM.
- Press  to turn OFF OOLONG as the unit advances to standby mode.


Boil

- When boiling water is needed quickly, press BOIL to begin operation. The Programmable Temperature Kettle will begin heating water to 212°F/100°C. When the temperature is reached, 3 tones will sound as the Kettle advances to WARM.
- Press  to turn OFF BOIL as the unit advances to standby mode.



- Press + or – to increase or reduce heating temperature in 5°F increments. After 5 seconds, the Programmable Temperature Kettle will begin to operate.
- When the target temperature is reached, 3 tones will sound as the Kettle advances to WARM.



- WARM cycle maintains the Programmable Temperature Kettle's programmed temperature WARM time defaults to 30 minutes.
- Press  to turn OFF WARM as the unit advances to standby mode.

Before Using for the First Time




1. Carefully unpack the Programmable Temperature Kettle and remove all packaging materials.
2. Position the power base on a stable, level surface near an electrical outlet. Wind the excess power cord into the cord storage area located beneath the power base. Make sure the cord exits through the cord exit slot on the side of the power base.

CAUTION: Do not immerse power base, power cord, or plug in water or any other liquid.




3. Following the detailed OPERATION instructions, boil 3 Kettles of clean water.
4. Discard the boiled water. Your Programmable Temperature Kettle is now ready for use.

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property. Keep hands and face clear of the area above the Programmable Temperature Kettle.

Operation

-
1. Place the power base on a flat, clean, dry counter top or table. Make sure the power base is unplugged.
WARNING! This Programmable Temperature Kettle may be used ONLY with the power base provided. The power base may be used ONLY with this Kettle.
 2. Remove the Programmable Temperature Kettle from the power base. Press the lid release to open the lid (Figure 1), or use the spout to fill the Kettle. Add fresh, cold water to at least the 0.5L MIN water level; do not fill above the 1.7L MAX water level (Figure 2). Wipe excess water from the Kettle.
CAUTION: Never add water above the 1.7L MAX water level. This could cause boiling water to splatter out.
NOTE: If the Programmable Temperature Kettle is accidentally switched ON without sufficient water, a boil-dry protection device will automatically turn the unit OFF. (See Boil-Dry Protection explanation in this Instruction Manual.)
 3. Close the lid and press down gently until it locks in place. Check to ensure the lid is fully closed.
 4. Place the Programmable Temperature Kettle onto the electrical connector in the center of the power base, taking care not to spill any water.
 5. Plug the power cord into the wall outlet. An audible tone will sound, the control panel will illuminate for 1 second, then turn off.
 6. The  button will pulse slowly on and off until use.

WHITE, GREEN, OOLONG TEA, BOIL

1. Press the pulsing . An audible tone will sound as the control panel illuminates and remains active for 20 seconds.
2. Press the desired TEA or BOIL button. A tone will sound. The  button, any TEA or BOIL button, and the WARM button will illuminate when active. All other buttons vanish when not in use.
NOTE: If no buttons are pressed in 20 seconds, the control panel will darken and the  button will illuminate and begin to pulse.
3. The digital TEMP display shows the pre-set temperature, and in 5 seconds, the Programmable Temperature Kettle will begin to heat. The digital thermometer will revert to the current water temperature and begin to rise until the target temperature is reached.
4. At the completion of any TEA or BOIL cycle, 3 tones will sound as the Programmable Temperature Kettle advances to WARM.
NOTE: If the Kettle is accidentally switched ON without sufficient water, a boil-dry protection device will automatically turn the unit OFF. (See boil-dry protection explanation.)

WARM

5. If the WARM button is pressed before any TEA or BOIL cycle begins, the WARM cycle will be cancelled and the unit will turn OFF when the target temperature is reached..
CAUTION: To avoid a risk of splashing, make sure the lid is securely closed onto the Programmable Temperature Kettle before operating. Pour slowly and be careful not over-tilt the Programmable Temperature Kettle.
CAUTION: Do not touch hot surfaces!
6. To reheat, check the water level to ensure it is above the MIN water level. If necessary, add more water before returning the Programmable Temperature Kettle to the power base.
7. When not in use unplug the power cord from the wall outlet. Allow the unit to cool completely before cleaning. Empty the Programmable Temperature Kettle after each use. Do not allow water to sit in the Programmable Temperature Kettle overnight. See User Maintenance Instructions.

8. Press + or – to increase or reduce heating temperature in 5°F increments (Figure 3). After 5 seconds, the Programmable Temperature Kettle will begin to operate. When the target temperature is reached, 3 tones will sound.

Figure 1



Figure 2



Figure 3



Figure 4



Beautiful Tea Chart

Follow this guide to achieve optimal flavor from different types of tea.

Steep Times listed are general and subject to personal preference. Steep times vary due to tea leaf size and bud consistency. Small leaves steep faster than whole buds. To avoid bitterness in a stronger tea, it is best to use more tea, rather than to extend steep time. Taste your tea every 30 seconds and extend steep as needed

	TEMP/°F	TEMP/°C	STEEP TIME
Puer	205 °F	96 °C	3 – 4 minutes
Green Tea	175 °F	80 °C	1 – 3 minutes
Flavored Green Tea	185 °F	85 °C	1 – 3 minutes
Mate Tea	205 °F	96 °C	5 – 6 minutes
Oolong	195 °F	90 °C	3 minutes
Black Tea	212 °F	100 °C	2 – 5 minutes
Flavored Black Tea	212 °F	100 °C	2 – 3 minutes
White Tea	165 °F	74 °C	2 – 5 minutes
Flavored White Tea	175 °F	80 °C	2 – 5 minutes
Rooibos Tea	175 °F	80 °C	5 – 6 minutes
Herbal Tea	212 °F	100 °C	5 – 6 minutes
French Press Coffee	195 – 203 °F	90 – 95 °C	4 – 5 minutes

NOTE: To change from °F to °C, press and hold + and – for 3 seconds.

Boil-Dry Protection

If the Kettle is without sufficient water, or if the water has evaporated, the safety thermostat automatically turns the Kettle OFF. To reset the boil-dry protection device, remove the Kettle from the power base and allow it to cool for at least 15 – 20 seconds before filling with fresh water and positioning on the power base.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

Care & Cleaning Instructions

WARNING: DO NOT IMMERSE THE POWER BASE, CORD, OR PLUG IN WATER OR OTHER LIQUIDS.

IMPORTANT: Never use scouring pads or harsh cleansers to clean your Programmable Temperature Kettle as they may damage the soft matte finish.

1. Empty the Programmable Temperature Kettle after each use. Do not allow water to sit in the Kettle overnight.

2. Make sure the Programmable Temperature Kettle power base is unplugged and completely cool.
3. Grasp the handle and remove the Programmable Temperature Kettle from the power base. Wipe the inside of the Kettle with a soft, damp cloth until dry.
4. Wipe the power base with a damp cloth or sponge. Dry thoroughly.
5. Use a soft sponge to remove any fingerprints or surface dirt from the Programmable Temperature Kettle body.
WARNING: Do not use harsh chemicals or abrasive cleansers as these may damage the finish of the Kettle.
6. Make sure both the power base and the Programmable Temperature Kettle is completely dry after cleaning and before use.

Descaling

Minerals, lime and calcium found in hard-water areas can accumulate and affect the operation of your Programmable Temperature Kettle. Depending on water conditions and frequency of use, your Kettle should be cleaned to remove scale when performance diminishes.

1. Before cleaning your Programmable Temperature Kettle, make sure the power base is unplugged and the Kettle is cool.
2. Fill the Programmable Temperature Kettle with 1 part white vinegar or lemon juice to 3 parts cold water.
3. Allow the filled Programmable Temperature Kettle to stand for 1 hour; then bring the Kettle contents to a BOIL.
4. Empty the Programmable Temperature Kettle, rinse thoroughly. BOIL clean water 2 or 3 times using cold water to rinse any residual acid taste.
5. After descaling, rinse the Programmable Temperature Kettle thoroughly then re-fill with fresh cold water.
6. Unplug the Programmable Temperature Kettle power base from the wall outlet.

WARNING:

- To avoid personal injury, always use extreme caution when handling hot water.
- Do not touch any Programmable Temperature Kettle surface during and after use.
- Never lift the Kettle lid when boiling water.

Storing Instructions

1. Unplug the power base and allow it to cool.
2. Never store the Programmable Temperature Kettle while the power base is still plugged in.
3. Store the Programmable Temperature Kettle with lid in place.
4. Use the cord storage area located on the bottom of the power base.
Never wrap cord tightly around the power base. Never place any stress on cord, especially where the cord enters the power base, as this could cause the cord to fray and break.
5. Store Kettle and power base in its box or in a cool, dry place.

PROBLEM	CAUSE	SOLUTION
The Programmable Temperature Kettle will not begin to heat.	Programmable Temperature Kettle has boiled dry. Boil-Dry Protection is activated.	<ul style="list-style-type: none">• Allow Programmable Temperature Kettle to cool for at least 15 – 20 seconds before filling• Add water to the Programmable Temperature Kettle.
Programmable Temperature Kettle's performance has slowed	Mineral, lime, calcium deposits have accumulated in the Programmable Temperature Kettle	<ul style="list-style-type: none">• Descale Programmable Temperature Kettle

Limited Two-Year Warranty

Sensio Inc. dba Made by Gather™ hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, Sensio Inc. dba Made by Gather™ will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable.

Keep the original sales receipt, as proof of purchase is required to obtain warranty validation.

Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified Sensio Inc. dba Made by Gather™ personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

Sensio Inc. dba Made by Gather™ shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-877-775-3564.

A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer

Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to Sensio Inc. dba Made by Gather™ Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. Sensio Inc. dba Made by Gather™ shall bear no responsibility or liability for the returned product while in transit to Sensio Inc. DBA Made by Gather™ Customer Service Center.




Sensio Inc.
dba Made by Gather™
New York, NY 10016/USA
www.cookwithbeautiful.com

For customer service questions or comments

1-877-775-3564
Made in China

Documents / Resources

	Beautiful 19016 Programmable Temperature Kettle with Touch Activated Display [pdf] Instruction Manual 19016, Programmable Temperature Kettle with Touch Activated Display, 19016 Programmable Temperature Kettle with Touch Activated Display, 19016 Programmable Temperature Kettle, Programmable Temperature Kettle, Temperature Kettle
---	--

References

- [Beautiful – Beautiful™](#)