



BEBONCOOL Switch Controller: Wireless Gamepad User Guide

[Home](#) » [BEBONCOOL](#) » **BEBONCOOL Switch Controller: Wireless Gamepad User Guide** 

The BEBONCOOL STK-7021S Switch Wireless Gamepad is a versatile and user-friendly game controller designed for Nintendo Switch. This wireless gamepad comes with a quick start guide that provides detailed instructions on how to pair and connect the controller to the console, adjust vibration intensity, calibrate control sticks, and upgrade the firmware. The controller is covered by a 3-year limited warranty and lifetime technical support, ensuring that customers receive quality products and services. The guide also includes information on the indicator light, factory motion controls calibration, and troubleshooting tips in case of connectivity issues. The BEBONCOOL Switch Controller is compliant with Part 15 of the FCC Rules and generates reasonable protection against harmful interference in a residential installation. The user-friendly design of this wireless gamepad makes it an ideal choice for avid gamers who want to enhance their gaming experience on Nintendo Switch.

BEBONCOOL

QUICK START GUIDE

Contents

- [1 STK-7021S Switch Wireless Gamepad](#)
- [2 First Time To Pair & Connect \(Y and Home\)](#)
- [3 Reconnect \(Home\)](#)
- [4 Factory Motion Controls Calibration](#)
- [5 Calibrate Control Sticks](#)
- [6 SPECIFICATION](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

STK-7021S Switch Wireless Gamepad

Game Controller for N S Quick Start Guide

3-Year Limited Warranty: All of our products are covered by a 3-year warranty and lifetime technical support. **4-Return and Replacement Policy:** We guarantee a 45-day return and 75-day replacement if the

product has any quality issues.

15.19 "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference. and
2. this device must accept any interference received. including interference that may cause undesired operation.-

First Time To Pair & Connect (Y and Home)

Pair & Connect: Press Y and Home Button Simultaneously

Step 1: Find Controllers Option —, Click Change Grip/Order. – Image 1/ Image 2

Step 2: Press and hold the Y and HOME button simultaneously, until the 4 LED lights flash in turn for 2 seconds, then release your finger and wait for the connection to complete. – Image 3

* **NOTE:** Enter the Change Grip/Order page, please complete the connection within 30 seconds as soon as possible. If you stay on this page for too long, you may not be able to connect to the NS console. – Image 3

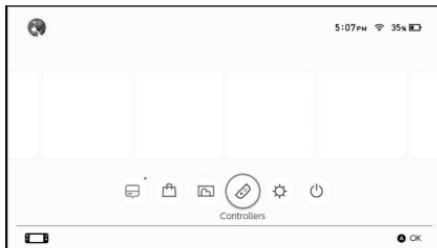 


Image 1

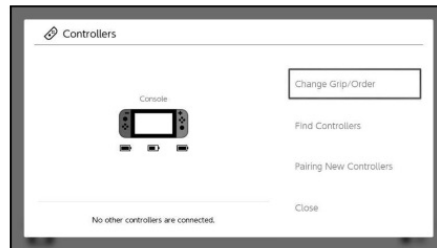 


Image 2



Image 3

Reconnect (Home)

Reconnect: Press Home Button

If your controller was once paired and connected to your NS console, next time you can press the Home button to make it to be rapidly connected.

Note:

For reconnecting, please turn on the NS console first, does not support pressing the Home button to wake up the console under standby mode.

Unable to connect, please follow 3 steps to solve this:

1. Turn off airplane mode.
2. Delete the information of this controller in the NS console, path: system setting-controllers and sensors-disconnect controllers.
3. Follow the first-time connection method and re-pair again.

Screenshot (+&)

Press '+' and '-' buttons simultaneously, and you can capture the image of your NS console.

Adjust Vibration Intensity

There are 2 levels of vibration intensity: weak and Strong

Step 1: Please make sure you connect the controller to the NS console.

Step 2: Press 4 buttons ('L', 'ZL', 'R', and 2R') simultaneously .

Step 3: Then release the 4 buttons when you feel the vibration.

The vibration mode can be adjusted by repeating the above operations.

Indicator Light

Charging – 4 LED lights flash Fully Charged – 4 LED lights off

Factory Motion Controls Calibration

Step 1: Please make sure your controller stays at power-off status, then put it on a flat surface.

Step 2: Press the '—B' HOME' 3 buttons simultaneously, the Group A indicators and Group B indicators will flash alternately. (LED1&LED2/ LED3&LED4)

Step 3: Press the '+' button and 4 LED indicators will flash alternately.

Step 4: After about 15 seconds, all indicators will turn off, which means the controller finish calibrating.

Calibrate Control Sticks

If the characters in the games is automatically anmng, please complete me calibrate motion controls" by following steps:

Step 1: System setting—controllers and sensors—calibrate control sticks

Step 2: Enter calibrates control sticks interface, and operate it according to the guide on the NS console.

Upgrade

We promise to provide sustainable upgrade services for this controller, if the controller can not pair the newest version of the NS console, please go to our official website to get the newest upgrade firmware.

Official Website: www.beboncool.com/upgrade

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

SPECIFICATION

Product Specifications	Description
Product Name	BEBONCOOL STK-7021S Switch Wireless Gamepad
Compatibility	Nintendo Switch
Warranty	3-year limited warranty and lifetime technical support
Return and Replacement Policy	45-day return and 75-day replacement for quality issues
FCC Compliance	Compliant with Part 15 of the FCC Rules
Connection Method	Y and Home button simultaneous press
Vibration Intensity	2 levels – weak and strong
Indicator Light	4 LED lights for charging and fully charged
Motion Controls Calibration	Factory calibration available
Control Stick Calibration	Available through system settings
Upgrade	Upgrade firmware available on official website

FAQS

What is the warranty period for the BEBONCOOL Switch Wireless Gamepad?

The controller is covered by a 3-year limited warranty and lifetime technical support.

How do I pair and connect the controller to the Nintendo Switch console?

Press Y and Home button simultaneously, find Controllers Option, click Change Grip/Order, and follow the instructions.

How do I reconnect the controller to the console?

Press the Home button to make it rapidly connect to the console.

How do I adjust the vibration intensity of the controller?

Press L, ZL, R, and 2R buttons simultaneously and release them when you feel the vibration.

What is the indicator light on the controller for?

The indicator light flashes when charging and turns off when fully charged.

How do I calibrate the control sticks on the controller?

Go to System setting—controllers and sensors—calibrate control sticks, and follow the instructions on the NS console.

Where can I find the newest upgrade firmware for the controller?

Visit the official website at www.beboncool.com/upgrade.

What should I do if I experience connectivity issues with the controller?

Turn off airplane mode, delete the information of this controller in the NS console, and follow the first-time connection method to re-pair again.

 
What should I do if the characters in the game are automatically moving?

Go to System setting—controllers and sensors—calibrate control sticks, and follow the instructions on the NS console.

Is the BEBONCOOL Switch Wireless Gamepad compliant with FCC Rules?

Yes, it is compliant with Part 15 of the FCC Rules.

Documents / Resources

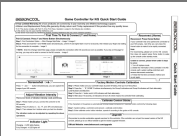	BEBONCOOL STK-7021S Switch Wireless Gamepad [pdf] User Guide STK-7021S, STK7021S, 2ATI7STK-7021S, 2ATI7STK7021S, STK-7021S Switch Wireless Gamepad, Switch Wireless Gamepad
---	---