



True Wireless Earbuds with Digital Display



USER'S MANUAL
ITEM: FBPGRTWS -WHT

Contents [[hide](#)]

- [1 Safety Precautions](#)
- [2 Introduction](#)
- [3 Package Contents](#)
- [4 Specifications](#)
- [5 A Closer Look](#)
- [6 Charging](#)
- [7 Setting the Time](#)
- [8 Bluetooth Pairing](#)
- [9 Listening to Music](#)
- [10 Handling Calls](#)
- [11 FCC Statement](#)
- [12 Warranty](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

Safety Precautions

When using your earbuds, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS.
2. Do not use the product near water. Do not put on wet surfaces.
3. Only clean using a soft, clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard.
Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F.
Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated.

Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

- Use a soft cloth or paper towel to clean your earbuds. Never use any harsh chemicals or detergents for cleaning. Make sure your earbuds are dry before charging.
- When your earbuds are not in use, they should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your charging case. Connect and disconnect cables as carefully as possible.
- Never expose your earbuds to high temperatures, or extreme cold.
- Please recycle or dispose of your earbuds properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your earbuds for further information.

Introduction

Thank you for purchasing the Beeper True Wireless Earbuds with Digital Display. In order to get the best results, please read this manual carefully before using.

Package Contents

- Beeper Earbuds Case
- One Pair of Wireless Earbuds
- Case Clip
- USB-C Charging Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Range: Up to 33 feet (10 meters)

Charging Input: 5V 1A max

Play Time: ~5 Hours Per Charge**

Extra Charges in the Case: ~2

 
Earbud Battery: 30mAh Li-Ion Rechargeable

Case Battery: 250mAh Li-Ion Rechargeable

Input Port: USB-C


****Applicable at 50% of maximum volume. Results will be lower when volume is higher.**

A Closer Look

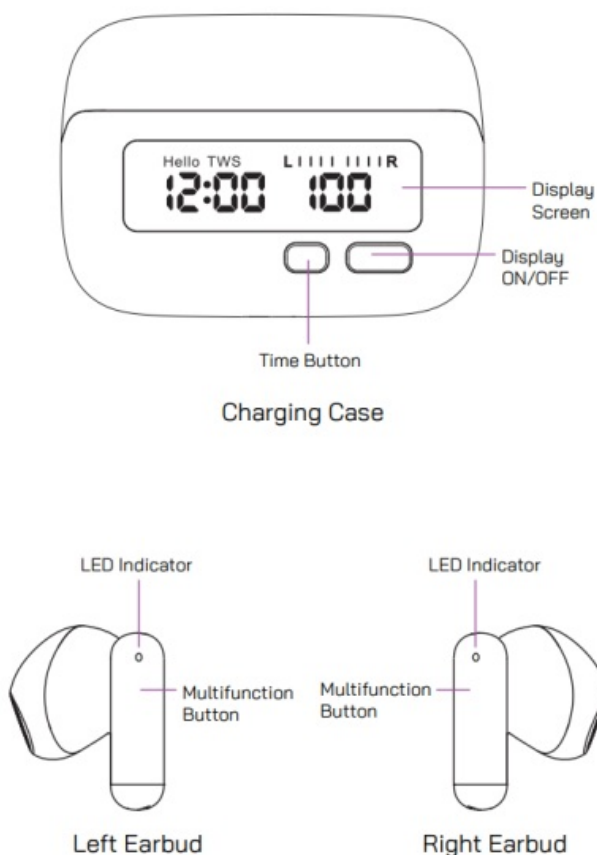


Charging

 1. To power the charging case, insert one end of the USB-C cable into the charging port located on the bottom of the charging case.
2. Insert the other end of the cable into any suitable USB power adapter.

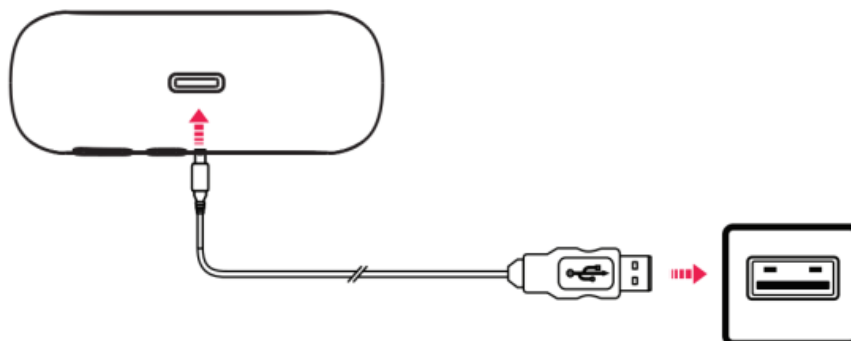

 3. While the charging case is plugged in, the number on the display screen will increase from 0-100 to show the case's charge level.
4. While the earbuds are inserted in the charging case the Right and Left Earbud Power Level icons will flash as the earbuds charge.

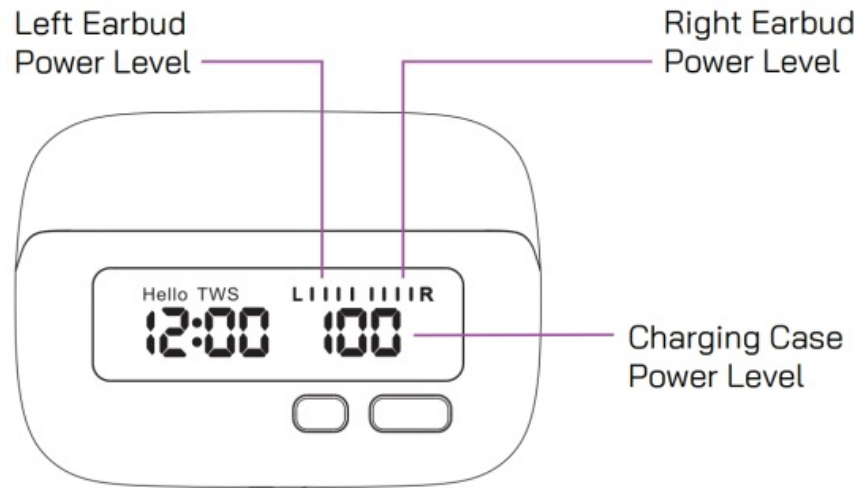


Setting the Time

1. Press the Display ON/OFF button to turn on the charging case's display screen. Press and hold the Display ON/OFF button for 3-4 seconds to turn off the charging case's display screen.
2. With the charging case's display screen powered on, press and hold the Time Button for 3-4 seconds to go into time setting mode.
3. With the hours flashing on the display screen, press the Time Button repeatedly to select the hour. Then press the Display ON/OFF button to enter your setting.
4. Next the minutes will flash on the display screen. Press the Time Button repeatedly to select the minute (press and hold the button will go back to the hour setting). Then press the Display ON/OFF button to enter your setting.

NOTES:

 The Time Button can only increase the hour and minute digits.

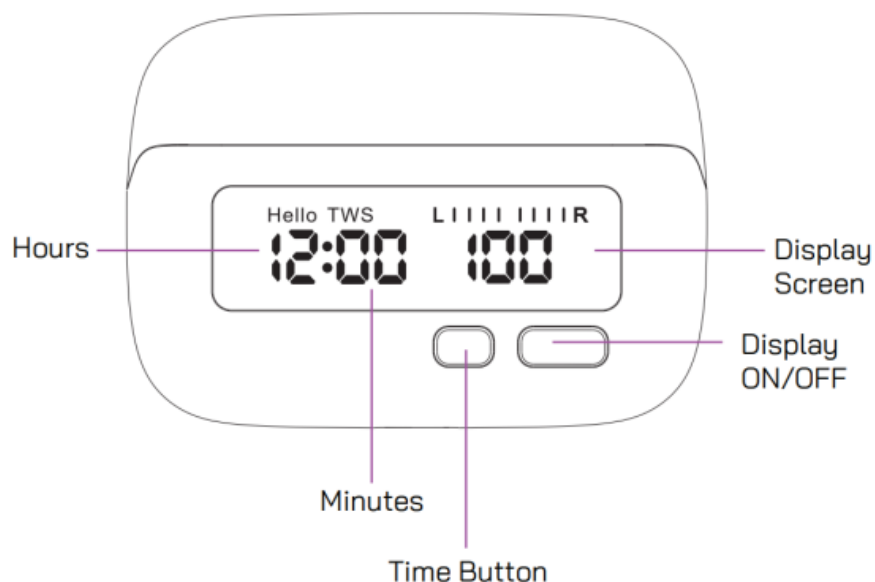


Bluetooth Pairing


1. Remove the earbuds from the charging case and they will turn on automatically.

NOTE: If the earbuds are already out of the charging case, put them in the case and then take them out again to turn them on.

 2. When in pairing mode, one earbud's indicator light will flash red and blue, and the other earbud's indicator light turn off.

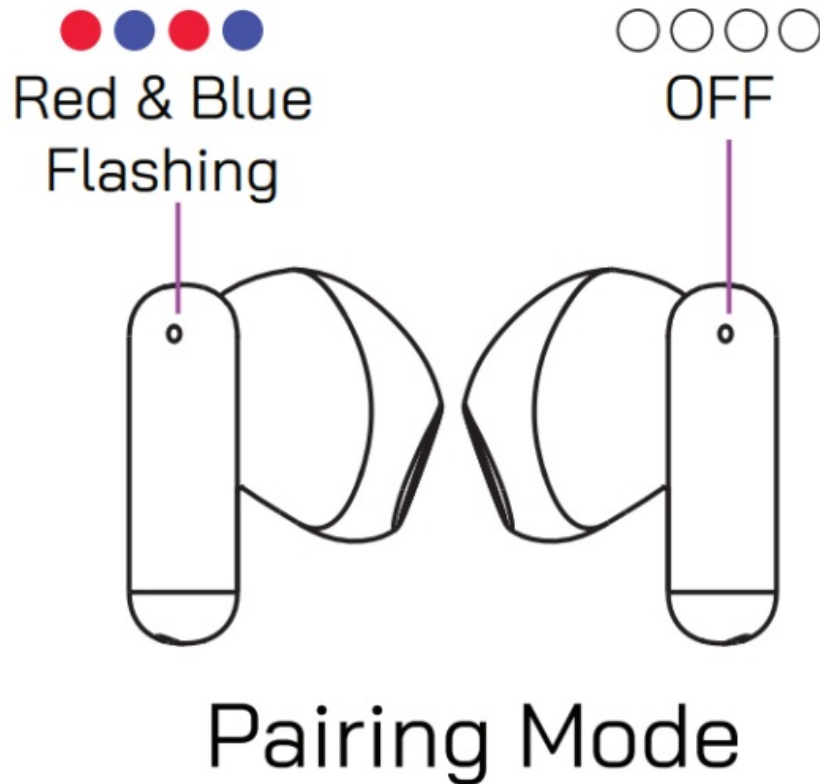


 3. Go to the Bluetooth page in the settings app on your phone. Make sure Bluetooth is ON before connecting to the available device 'Pager TWS'.

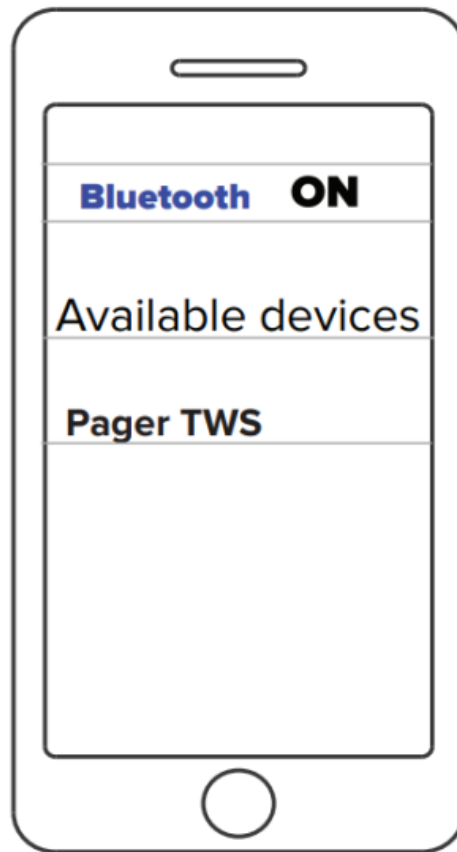

4. Both earbuds' indicator lights will turn off once paired to your phone.

 Listening to Music

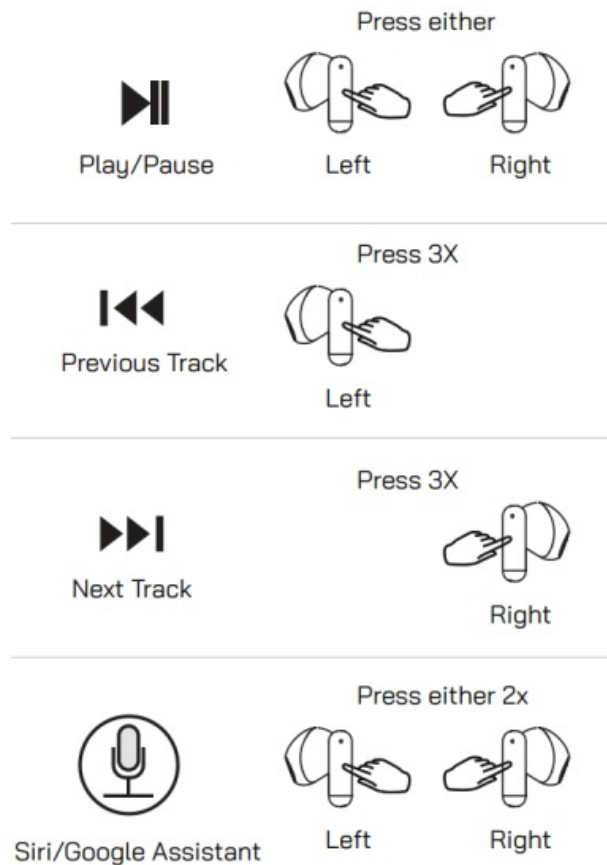


NOTES:

Your earbuds can be used independently. One earbud can be used when the other is off, as long as connected to Bluetooth.

Put the earbud into charging case so it will turn off automatically, or press and hold the Multi-function button for 3 seconds to turn it off.

 Handling Calls

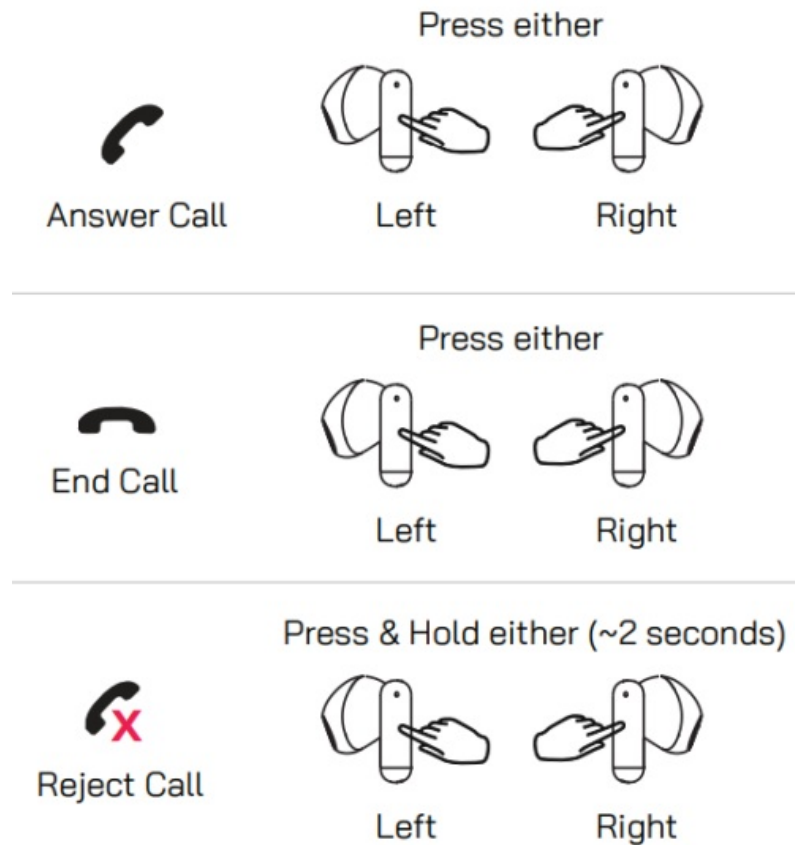

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AAPK-MA3928

Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-[800-592-9541](tel:800-592-9541) or visit our website at www.vivitar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or


accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.



© 2023 Sakar International 195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.

Documents / Resources

	Beeper MA3928 True Wireless Earbuds With Digital Display [pdf] User Manual A3928, 2AAPK-MA3928, 2AAPKMA3928, MA3928 True Wireless Earbuds With Digital Display, MA3928, True Wireless Earbuds With Digital Display, With Digital Display, Digital Display, Display
---	---

References

- [User Manual](#)

beeper
2AAPK-MA3928, 2AAPKMA3928, A3928, beeper, Digital Display, Display, MA3928, MA3928 True Wireless Earbuds With Digital Display, True Wireless Earbuds With Digital Display, with Digital Display

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.