



beFree sound BFS-1519 Bluetooth Portable Rechargeable Party Speaker Owner's Manual

[Home](#) » [BeFree Sound](#) » befree sound BFS-1519 Bluetooth Portable Rechargeable Party Speaker Owner's Manual 



Contents

- [1 BFS-1519 Bluetooth Portable Rechargeable Party Speaker](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 PACKAGE CONTENT](#)
- [4 RECHARGEABLE BATTERY](#)
- [5 PANEL DESCRIPTION](#)
- [6 REMOTE CONTROL](#)
- [7 SPECIFICATIONS](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

BFS-1519 Bluetooth Portable Rechargeable Party Speaker



BFS-1519
15" BT PORTABLE RECHARGEABLE PARTY SPEAKER
WITH SOUND REACTIVE LED PARTY LIGHTS,
USB/SD, MICROPHONE/GUITAR INPUTS & FM RADIO
OWNER'S MANUAL

Thank you for purchasing our product.
Make sure you have read the manual before using this product.
Please use the speaker in accordance with the instructions.
Please save these instructions.

IMPORTANT:

Do not use this unit until you have read this entire manual thoroughly!



IMPORTANT SAFEGUARDS

1. As with any electrical device, we recommend supervising children near the unit while it is in use.
2. IMPROPER USE MAY RESULT IN PERSONAL INJURIES.
3. IMPROPER USE MAY CAUSE DAMAGE TO PROPERTY.
4. DO NOT expose the speaker to dirty or dusty environments.
5. DO NOT insert any foreign objects into the speaker.
6. DO NOT expose the speaker to strong magnetic or electrical field.
7. DO NOT place near heat sources such as radiators, heaters, stoves or any other apparatus generating heat.
8. DO NOT expose the speaker to water, humidity, rain or any other liquids.
9. KEEP AWAY from direct sunlight for prolonged or extended periods of time.
10. DO NOT disassemble the unit. Any servicing or repair should be performed by an authorized representative.
Servicing is required when the unit has been damaged in any way , such as damage of the power supply cord or plug, spill of liquid on the unit, if any object has fallen on the unit, if the unit has been exposed to rain or

moisture , if the unit does not operate properly or if the unit has been dropped.

11. DO NOT block the speaker's vents; it may become hot and malfunction as a result.
12. Unplug the unit during storms, lightning storms or when unused for extended periods of time.
13. The power cord should not be waled on or pinched at plug points or where it exits the unit.
14. DO NOT place objects on top of the unit, as they may scratch the speaker.

PACKAGE CONTENT

 
 
- Speaker (1)
- Microphone (1)
- Remote Control (1)
- User Manual (1)

RECHARGEABLE BATTERY


- The rear panel of the unit features light indicators to indicate the different battery levels (FULL, CHAR, LOW). If the LOW indicator light is on, please plug the speaker to an electrical outlet with the appropriate voltage. When charging the unit, please ensure that the AC/DC switch is turned on. Unplug from the electrical outlet when the battery is full, and turn off your speaker when not in use to preserve battery life.
- he battery needs to be charged for 6 to 8 hours before the first use. For each use thereafter, please charge the battery for 5 to 6 hours for optimal battery life.
- The battery will last 2 to 3 hours per use, depending on the volume level the speaker is used at.
- Ensure to charge the battery after each use to extend its life. The battery life may be diminished if not charged frequently, even if the speaker is not in use.

PANEL DESCRIPTION


1.

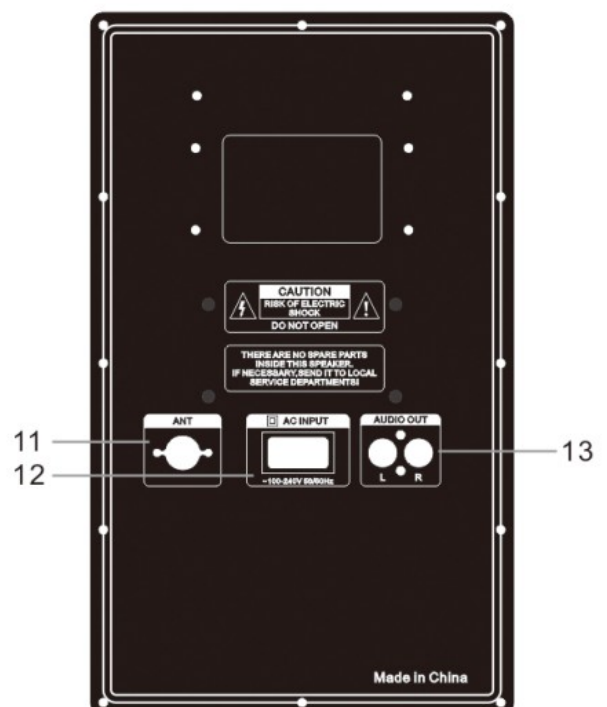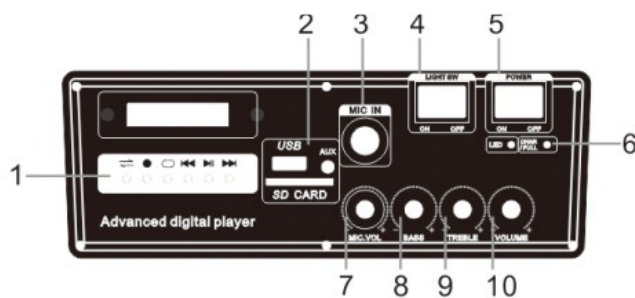


 Interchange

 Record

 Repeat

 
 Previous Song

 Play / Pause

 Next Song

2. USB / Aux / SD Card Slot
3. Microphone Input
4. Light Switch On/Off
5. Power On/off
6. Charge Level indicator
7. Adjust Microphone Volume
8. Adjust Bass Volume
9. Adjust Treble Volume
10. Adjust Main Volume
11. Antena
12. AC Inlut
13. Aux Output

REMOTE CONTROL

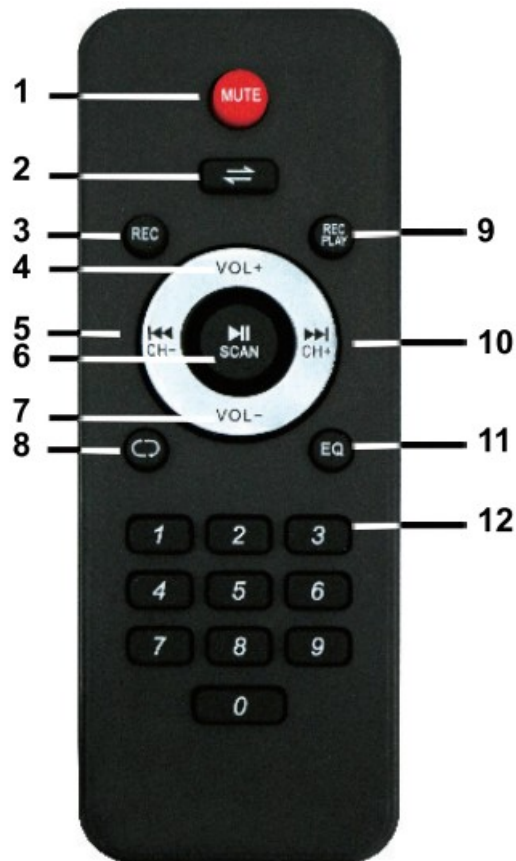

1. Toggle Mute On/Off	7. Decrease Volume
2. Mode (Select Source Input)	8. Repeat Track
3. Record	9. Play Recorded
4. Increase Volume	10. Next Track/FM Station
5. Previous Track/FM Station	11. Equalizer
6. Play/Pause/FM Stations Auto-Scan	12. Keypad

- For best results, aim the remote control directly at the receiving panel of the speaker, within a range of 16 feet, at a 30° angle
- Ensure that there are no obstacles between the remote and the receiving panel
- Keep the remote and the speaker away from direct sunlight
- Avoid combining old and new batteries. For optimal use, replace the remote batteries regularly. Remove the batteries when not using the unit for extended periods of time
- If you press and hold the 'Repeat' button it will turn the 'Mic. Priority' off (you want it off if you are singing karaoke).
- If you press and hold the 'Mode' button it will turn the voice off.
- If you press and hold the 'Play/pause' button it will change the language.
- Pressing the repeat button once will repeat one song, pressing it again will repeat all.

BT MODE

1. Press the MODE button to switch to BT mode
2. Ensure that the BT is enabled on your device. Enable it if it isn't. Use your device to search for nearby BT devices. (This function is usually in the BT settings menu; refer to your device's instruction manual to learn more)
3. Select "BFS-1519", "beFree Sound" or "BT Speaker" in the list of available devices on your phone
4. Music can be streamed directly from the external device once pairing is successful

Please Note

If you encounter any difficulties pairing your device to the speaker, please ensure that the previously connected BT device has been completely disconnected from this unit. The previously connected BT device may need to be forgotten from the unit in order for another BT device to be successfully paired to the speaker. For more information about forgetting a device, please refer to your external device BT menu/instruction manual .

SPECIFICATIONS

- 15" Woofer
- Wireless Connection
- USB/SD Compatible
- FM Radio
- Mic Inout Jack
- Remote Control Included
- Wires Microphone Included
- RCA Output
- Sound Reactive Light Inside Woofer

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.



the freedom of sound...

FOR WARRANTY INFORMATION AND FEEDBACK,

PLEASE VISIT WWW.BEFREESOUND.COM

Support & Warranty

(323) 306-3885

Documents / Resources

The thumbnail shows the cover of the beFree BFS-1519 Owner's Manual. It features the beFree logo at the top, the model number "BFS-1519" in the center, and a small image of the speaker. Text on the cover includes "10\"/> <p>BFS-1519</p> <p>10" BE PORTABLE RECHARGEABLE PARTY SPEAKER WITH SOUND REACTIVE LED PARTY LIGHTS USING MICROPHONE, COOL AIR FAN & THE RADIO</p> <p>OWNER'S MANUAL</p>	<p>befree sound BFS-1519 Bluetooth Portable Rechargeable Party Speaker [pdf] Owner's Manual</p> <p>BFS-1519 Bluetooth Portable Rechargeable Party Speaker, BFS-1519, Bluetooth Portable Rechargeable Party Speaker, Portable Rechargeable Party Speaker, Rechargeable Party Speaker, Party Speaker, Speaker, Bluetooth Portable Speaker</p>
--	---

References

- [beFree Sound](#)

[Manuals+](#)