

beFree Sound BFS-400 5.1 Channel Surround Sound BT Speaker System Instruction Manual

Home » BeFree Sound » beFree Sound BFS-400 5.1 Channel Surround Sound BT Speaker System Instruction

Manual



beFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Spactar;Systom



Thank you for choosing BeFree Sound Please read this manual carefully and keep it for future reference

NOTE: This unit is set on 5.1 mode upon startup, please press the 5.1/2.1 button for 2.1 surrond sound **Usage:**

Contents

- 1 Specification:
- 2 System connection diagram
- 3 How to use the remote control
- 4 Positioning the speakers
- **5 Documents / Resources**
- **6 Related Posts**

Specification:

Frequency Response:40Hz-20KHz

"Separation 5048

"Speaker: 4425 x5

Caution.

- 1. D0 not expose 10 dripping or splashing
- 2. D0 not place any objects fillad with water over the apparatus,
- 3. D0 not lock the ventilation holes,
- 4. Forindoor use only
- 5. When using high output signal don'turn the volume to maximum 10 avoid distortion.


Inside Package:

Subwoofer Speaker	1 pc
Satite Speakar	5pcs
Radio Cable	4 pcs
User Manual	1 pc
Ramota Control	1pc
FHAntenn	1 pc

How to use the BT:

- 1. select the audio input to BT status
- 2. search BT device with the name "BFS-400" on the device you want to pair
- 3. connect the BT
- 4. if your BT devise is below the 2.0 version, input password "0000" when connecting.

Frontpanel

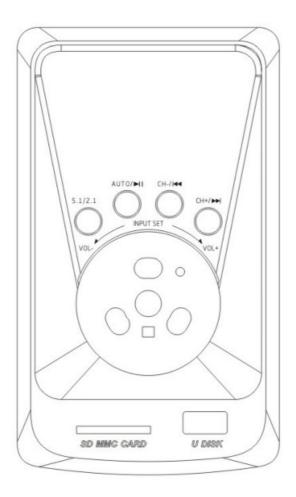

Front panel

INPUT Input function key, switch among AUX/USB/SD/FM mode; Select Standby function by pressing this button for 3 seconds when the unit is in AUX/USB/SD/FM mode.

VOLUME-/+ Rotate to the left to lower the volume Rotate to the right to lower the volume 5.1/2.1 5.1/2.1 function key.


AUTO USB/SDpause/Play function key. Automatically searches FM Stations when in FM Mode

CH- Previous song in USB/SD mode.

Previous saved channel in FM mode.

CH+ Next song in USB/SD mode. Next saved channel in FM mode . U DISK USB disk slot SD/MMC CARD SD / MMC card slot

System connection diagram

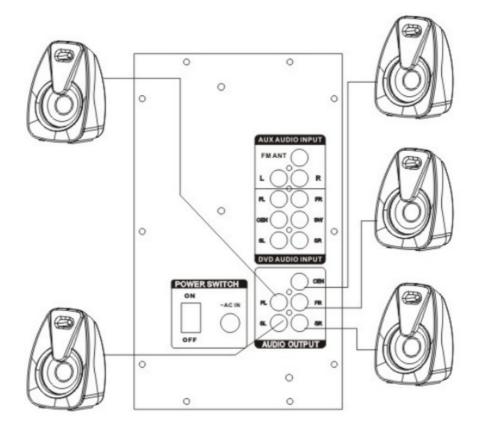


SPEAKER TERMINALS

SPEAKER TERMINALS Connect front speakers, a center speaker, surround speakers to 5.1 speaker output terminals.

- -The front speaker cords to the FRONT SPEAKERS terminals
- -The center speaker cords to the CENTER SPERKERS terminals -The surround speaker cords to the SURROUND SPEAKER terminals



NOTE: *Do not leave objects generating magnetism near the speakers.

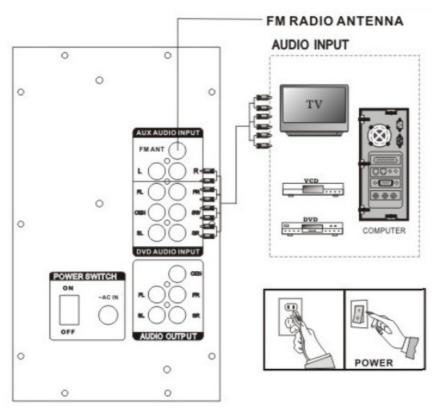

Connecting equipment


Jacks and plugs of the connecting cord are color-coded as follows: Red jacks and plugs: For the left channel of

audio signals

NOTE: Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.


Important: First, connect the speakers and all other external equipment, and finally connect the AC power cord

How to use the remote control

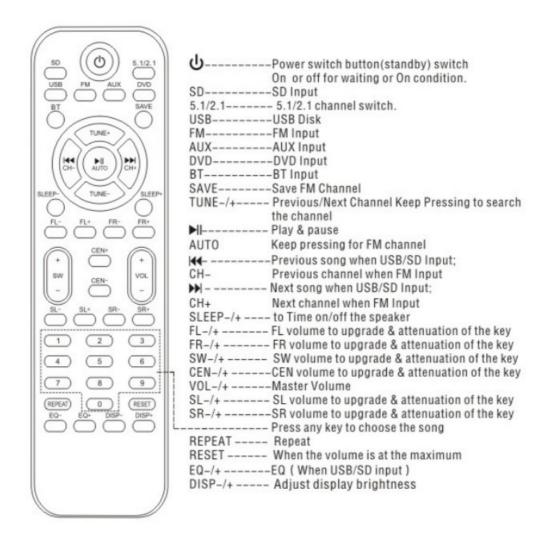

FLERSE NOTE. i 4 tmois coil 51 fncioning, peiss eplacoe btteries.

Positioning the speakers

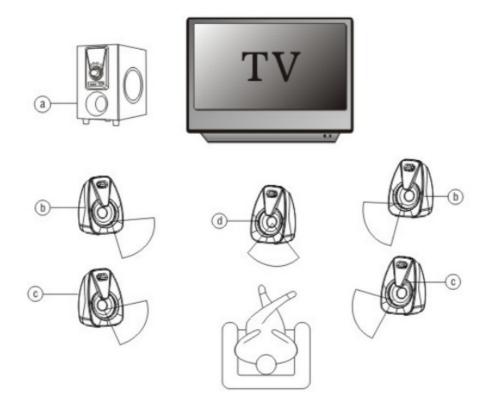

- a Sub-woofer Place the sub-woofer any place on the floor (There is no directional requirement for the Bass effect) b Front Speakers
- c Surround Speakers Place the surround speakers directly to the side behind the listening area Align them horizontally, about 1 meter above ear level
- d Center Speakers Position in the center of the two front speakers in addition position on or below the TV set, if connecting a TV set to the unit



Documents / Resources



<u>beFree Sound BFS-400 5.1 Channel Surround Sound BT Speaker System</u> [pdf] Instruction Manual

BFS-400 5.1 Channel Surround Sound BT Speaker System, BFS-400, 5.1 Channel Surround S ound BT Speaker System, Surround Sound BT Speaker System, Sound BT Speaker System, BT Speaker System

Manuals+,