

behringer Automatic and Ultra-Fast Feedback Destroyer Parametric EQ with 24 FBQ Filters User Guide

<u>Home</u> » <u>Behringer</u> » behringer Automatic and Ultra-Fast Feedback Destroyer Parametric EQ with 24 FBQ Filters
User Guide

Quick Start Guide



FEEDBACK DESTROYER FBQ1000

Automatic and Ultra-Fast Feedback Destroyer/Parametric EQ with 24 FBQ Filters

Contents [hide 1 Important Safety Instructions 2 FEEDBACK DESTROYER FBQ1000 Hook-up 3 FEEDBACK DESTROYER FBQ1000 Controls 4 FEEDBACK DESTROYER FBQ1000 Controls 5 FEEDBACK DESTROYER FBQ1000 Controls 6 FEEDBACK DESTROYER FBQ1000 Controls 7 FEEDBACK DESTROYER FBQ1000 Getting started 8 FEEDBACK DESTROYER FBQ1000 Preset chart 9 Specifications 10 Documents / Resources 10.1 References 11 Related Posts

Important Safety Instructions





Terminals marked with this symbol carry an electrical current of sufficient magnitude to constitute a risk of electric shock. Use only high-quality professional speaker cables with 1/4" TS or twist-locking plugs pre-installed. All other installation or modifications should be performed only by qualified personnel.

This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.

This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual. Caution To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user-serviceable parts inside. Refer servicing to qualified personnel.



To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Caution

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Use only attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a car is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plugis damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- 15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 17. Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute



to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office or your household waste collection service.

- 18. Do not install in a confined space, such as a bookcase or similar unit.
- 19. Do not place naked flame sources, such as lighted candles, on the apparatus.
- 20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed of at a battery collection point. This apparatus may be used in tropical and moderate climates up to 45°C.

LEGAL DISCLAIMER


Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly on or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances, and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Oberheim, Auratone, and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2021 All rights reserved.

LIMITED WARRANTY


For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at musictribe.com/warranty.

FEEDBACK DESTROYER FBQ1000 Hook-up

Step 1: Hook-Up

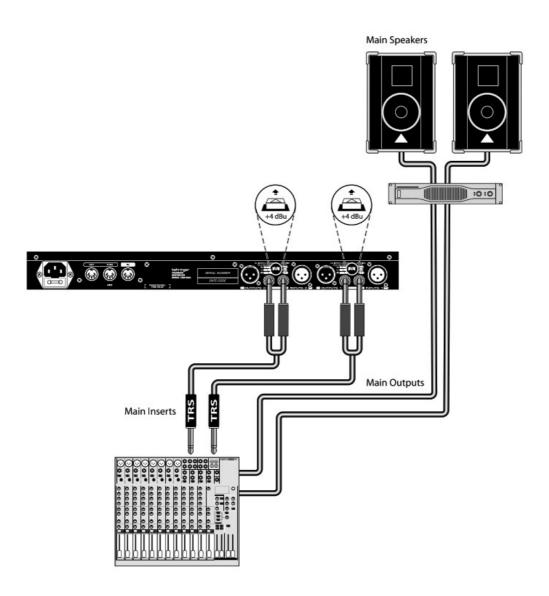


FBQ1000 in the insert path

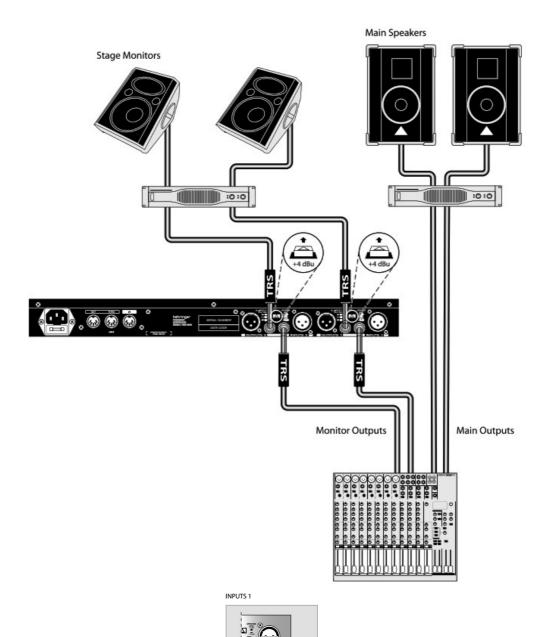

Feedback protection for stage monitors

FEEDBACK DESTROYER FBQ1000 Controls


Step 2: Controls

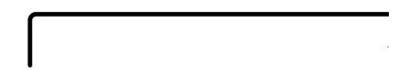

LED METER displays the output signal level. If the CLIP LED lights frequently, lower the gain setting for the channel. In Total Bypass mode, the LED METER displays the input signal level.

STATUS LEDs display the status of the 12 individual filters for each channel. Active filters or EQs are displayed by a lit LED. A flashing LED signifies that a filter is searching for feedback frequencies. Inactive filters are


displayed by an unlit LED.

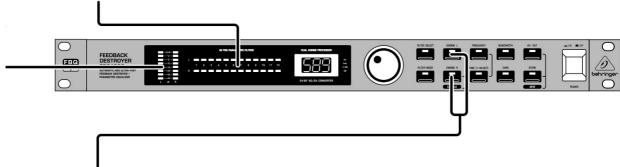

ENGINE L and R buttons select the left (L) and right (R) audio channels. Press both buttons simultaneously to enter Couple mode, which allows both channels to be edited at the same time.


FEEDBACK DESTROYER FBQ1000 Controls

Step 2: Controls

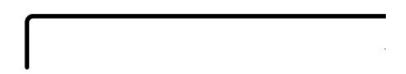

FILTER MODE button


accesses the four filter modes: Off (OF), Parametric EQ (PA), Single-Shot (SI), and Auto (AU). **JOG WHEEL** scrolls through presets and adjusts parameter values.

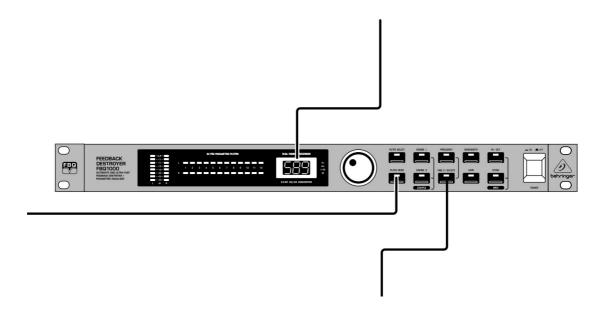

FINE button enables the JOG WHEEL to fine-tune the standard ISO frequencies.


FEEDBACK DESTROYER FBQ1000 Controls

Step 2: Controls

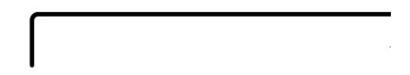


FREQUENCY button enables the JOG WHEEL to select the frequency that is to be edited in Parametric EQ mode.

BANDWIDTH button enables the JOG WHEEL to adjust the filter bandwidth (Q factor) of the≈selected filter.

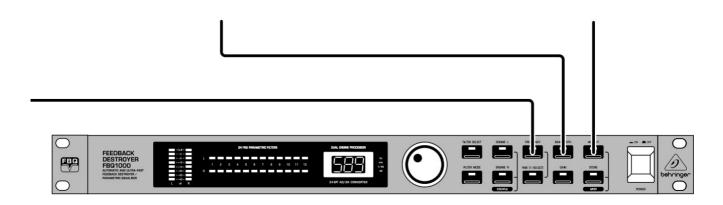

OPERATING LEVEL button switches between -10 dBV and +4 dBu, allowing the FBQ1000 to operate in its optimum range.

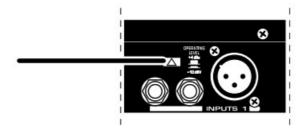


FEEDBACK DESTROYER FBQ1000 Controls

Step 2: Controls

GAIN button enables the JOG WHEEL to adjust the amount of boost or attenuation of the selected filter (+16 dB to -48 dB).

JOG WHEEL scrolls through presets and adjusts parameter values.

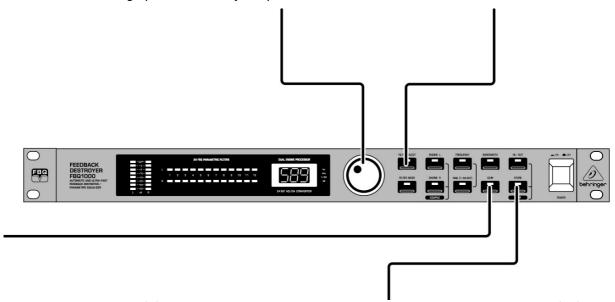


STORE button enables the JOG WHEEL to scroll through the 10 available preset slots. Press the STORE button again to confirm and save to the selected slot.


FEEDBACK DESTROYER FBQ1000 Getting started

Step 3: Getting started


- 1. Make all appropriate audio and power connections to the FBQ1000. Leave the power for all devices off!
- 2. Select the proper levels with the OPERATING LEVEL buttons to suit your application.
- 3. Press the POWER BUTTON to turn the unit on.

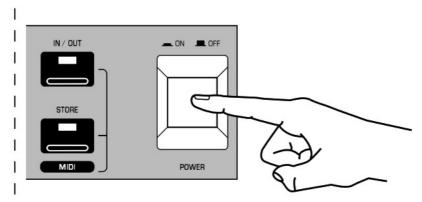

4. Use the JOG WHEEL to select preset 3. This sets all filters to Auto mode, which is a good starting point for eliminating feedback.

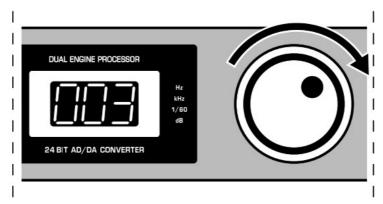

- 5. Press the ENGINE L or ENGINE R button to edit a specific channel. Press both ENGINE buttons simultaneously to enter Couple mode which allows both channels to be edited at the same time.
- 6. Press the FILTER SELECT button and turn the JOG WHEEL to select a specific filter.
- 7. Press the FILTER MODE button and turn the JOG WHEEL to edit the type of filter.
- 8. To save the preset, press the STORE button and turn the JOG WHEEL to select the preset location. The digit in the DISPLAY will flash.

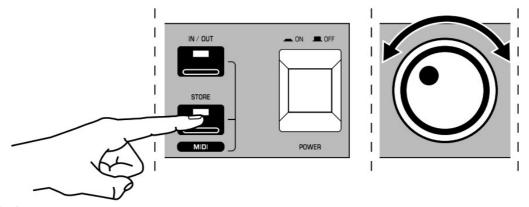

- 9. Press the STORE button to confirm and save.
- 10. Log on to behringer.com to download the full manual for more details on the FBQ1000's functionality.

FEEDBACK DESTROYER FBQ1000 Preset chart

| L R | SI | | | | | | | | | | | |
|-------------|--------------------------|-------------------------------|----------|----------|----------------------|------------------------------|--|----------------------------------|--|--|---|---|
| | CI | | | | MONO: 9 sir | ngle shot filter | s attenuate ro | om resonance | s before 3 aut | omatic filters (| destroy variab | le feedba |
| R | 31 | SI | SI | SI | SI | SI | SI | SI | SI | AU | AU | AU |
| | SI | SI | SI | SI | SI | SI | SI | SI | SI | AU | AU | AU |
| | | | | | | | | | | | | |
| 2 | | | | | 2 x M | ONITOR AS FEE | DBACK DESTRO | YER ONLY: 7 si | ngle shots / 5 a | automatic filte | rs for most mo | onitor setu |
| L | SI | SI | SI | SI | SI | SI | SI | AU | AU | AU | AU | AU |
| R | SI | SI | SI | SI | SI | SI | SI | AU | AU | AU | AU | AU |
| | | | | | | | | | | | | |
| 3 | | | | | | | MONO AUTO | PILOT: 12 Filte | ers per channe | l constantly ch | ase and destr | oy feedba |
| L | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU |
| R | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU | AU |
| | | | | | | | | | | | | |
| 4 | | | | | | | | | | requencies, all | | |
| Couple | 125 Hz | 160 Hz | 200 Hz | 250 Hz | 315 Hz | 400 Hz | 500 Hz | 630 Hz | 800 Hz | 1 k | 1.25 k | 1.6 k |
| | | | | | | | | TRICES B | | | 2/201 | C-1 0 |
| 5 | 40.11- | (211- | 10011- | 16011- | 25011- | | | | | requencies, all | | |
| Couple | 40 Hz | 63 Hz | 100 Hz | 160 Hz | 250 Hz | 400 Hz | 630 Hz | 1 k | 1.6 k | 2.5 k | 4 k | 6.3 k |
| | | | | | 2 x A | MONO: Sample | manitarina l | - 44 4 I II- | -14 /14\ | | | |
| L | SI | | | | | pro | monitoring, | ett for nandn | ela (lead) mic | ropnone(s), ri | ght for fixed (| backing) o |
| - | JI | SI | SI | AU | AU | AU | AU | AU AU | PA def | PA def | ght for fixed (PA def | |
| R | SI | SI SI | SI SI | AU SI | | | | | | | | PA de |
| | | | | | AU | AU | AU | AU AU | PA def PA def | PA def PA def | PA def PA def | PA de |
| R | SI | SI | SI | SI | AU SI | AU AU MO | AU AU NO PARAMETE | AU AU RIC AND SINGL | PA def PA def ESHOT FILTERS | PA def PA def S: A good start | PA def PA def | PA de PA de requaliza |
| R L | SI | SI | SI | SI | AU SI | AU AU MO | AU AU NO PARAMETE SI | AU AU RIC AND SINGLI SI | PA def PA def ESHOT FILTERS PA def | PA def PA def S: A good start PA def | PA def PA def for a monitor PA def | PA de PA de r equaliza |
| R | SI | SI | SI | SI | AU SI | AU AU MO | AU AU NO PARAMETE | AU AU RIC AND SINGL | PA def PA def ESHOT FILTERS | PA def PA def S: A good start | PA def PA def | PA de |
| R L | SI | SI | SI | SI | AU SI SI | AU AU MO | AU AU NO PARAMETE SI SI | AU AU RIC AND SINGLI SI SI | PA def PA def ESHOT FILTERS PA def PA def | PA def PA def S: A good start PA def PA def | PA def PA def For a monitor PA def PA def | PA de PA de PA de PA de |
| R L | SI SI SI | SI SI SI | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de |
| R L | SI SI SI PA | SI SI PA | SI | SI | AU SI SI | AU AU MO | AU AU NO PARAMETE SI SI | AU AU RIC AND SINGLI SI SI | PA def PA def ESHOT FILTERS PA def PA def | PA def PA def S: A good start PA def PA def | PA def PA def For a monitor PA def PA def | PA de PA de PA de |
| R L R | SI SI SI PA 40 Hz | SI SI SI PA 80 Hz | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def SI | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de |
| R L R | SI SI SI PA 40 Hz 1 Oct. | SI SI SI PA 80 Hz 1 Oct. | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def SI | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de |
| R L R | SI SI SI PA 40 Hz | SI SI SI PA 80 Hz | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def SI | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de |
| R L R | SI SI SI PA 40 Hz 1 Oct. | SI SI SI PA 80 Hz 1 Oct. | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def SI | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de PA de requaliza PA de PA de |
| R L | SI SI SI PA 40 Hz 1 Oct. | SI SI SI PA 80 Hz 1 Oct. | SI SI | SI SI | AU SI SI SI | AU AU MO SI SI STEREO FOH EQ | AU AU NO PARAMETE SI SI SI , providing 4 | AU AU SI SI SI parametric EQ | PA def PA def ESHOT FILTERS PA def PA def SI | PA def PA def St. A good start PA def PA def | PA def PA def for a monitor PA def PA def 2), plus 8 sing | PA de PA de PA de PA de PA de |

Specifications

Filter 2

Filter 1

Preset

Filter 3

Filter 4

Filter 5

Filter 6

Filter 7

Filter 8

Filter 9

AU

Filter 10 Filter 11 Filter 12

STEREO: libre.

| Audio Inputs | | | | | |
|-------------------------|--|--|--|--|--|
| Connectors | XLR and 1/4" TRS | | | | |
| Туре | RF-filtered, servo-balanced input | | | | |
| Impedance | $60 \text{ k}\Omega$ balanced, $30 \text{ k}\Omega$ unbalanced | | | | |
| Nominal operating level | -10 dBV to +4 dBu (switchable) | | | | |
| Max. input level | +16 dBu at +4 dBu nominal level, +2 dBV at -10 dBV nominal level | | | | |
| Audio Outputs | | | | | |

| XLR and 1/4" TRS | | | | |
|--|--|--|--|--|
| Electronically servo-balanced output stage | | | | |
| $60 \text{ k}\Omega$ balanced, $30 \text{ k}\Omega$ unbalanced | | | | |
| +16 dBu at +4 dBu nominal level, +2 dBV at -10 dBV nominal level | | | | |
| | | | | |
| 20 Hz to 20 kHz, +0/-1 dB | | | | |
| > 94 dB, unweighted (20 Hz to 20 kHz) | | | | |
| 0.0075% typ. @ +4 dBu, 1 kHz, Gain 1 | | | | |
| < -76 dB | | | | |
| | | | | |
| 5-Pin DIN Socket IN/OUT/THRU | | | | |
| | | | | |
| 24-bit Sigma-Delta, 64/128-times oversampling | | | | |
| | | | | |
| 2 ½-digit numeric LED display | | | | |
| | | | | |
| | | | | |
| 120 V~, 60 Hz (T 200 mA L, 250 V) | | | | |
| 240 V~, 50 Hz (T 100 mA L, 250 V) | | | | |
| 230 V~, 50 Hz (T 100 mA L, 250 V) | | | | |
| 220 V~, 60 Hz (T 100 mA L, 250 V) | | | | |
| 220 V~, 50 Hz (T 100 mA L, 250 V) | | | | |
| 100 V~, 50/60 Hz (T 200 mA L, 250 V) | | | | |
| approx. 15 Watts max. | | | | |
| Standard IEC receptacle | | | | |
| | | | | |
| 44 x 483 x 195 mm (1.7 x 19 x 7.7") | | | | |
| 1.9 kg (4.22 lbs) | | | | |
| | | | | |

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Behringer

FEEDBACK DESTROYER FBQ1000

Responsible Party Name: Music Tribe Commercial NV Inc.

Address: 5270 Procyon Street, Las Vegas NV 89118, United States

Phone Number: +1 702 800 8290

FEEDBACK DESTROYER FBQ1000

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. **Important information:**

Changes or modifications to the equipment not expressly approved by MUSIC Tribe can void the user's authority to use the equipment.



Hereby, Music Tribe declares that this product is in compliance with Directive 2014/35/EU, Directive 2014/30/EU, Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and

Directive 1907/2006/EC.

Full text of EU DoC is available at https://community.musictribe.com/

EU Representative: Music Tribe Brands DK A/S

Address: Ib Spang Olsens Gade 17, DK – 8200 Aarhus N, Denmark

Documents / Resources



<u>behringer Automatic and Ultra-Fast Feedback Destroyer Parametric EQ with 24 FBQ Filte</u>
<u>rs</u> [pdf] User Guide

Automatic and Ultra-Fast Feedback Destroyer Parametric EQ with 24 FBQ Filters, FEEDBACK DESTROYER FBQ1000

References

- <a>Behringer | Home
- Music Tribe