



behringer RX1602 16-Input Rack Mount Analog Mixer Instructions

[Home](#) » [Behringer](#) » behringer RX1602 16-Input Rack Mount Analog Mixer Instructions 



behringer
Other important information
Instructions

Contents

- [1 Important information](#)
- [2 Specification](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Important information

1. Register online. Please register your new Music Tribe equipment right after you purchase it by visiting musictribe.com. Registering your purchase using our simple online form helps us to process your repair claims more quickly and efficiently. Also, read the terms and conditions of our warranty, if applicable.
2. Malfunction. Should your Music Tribe Authorized Reseller not be located in your vicinity, you may contact the Music Tribe Authorized Fulfiller for your country listed under “Support” at musictribe.com. Should your country not be listed, please check if your problem can be dealt with by our “Online Support” which may also be found under “Support” at musictribe.com. Alternatively, please submit an online warranty claim at musictribe.com BEFORE returning the product.
3. Power Connections. Before plugging the unit into a power socket, please make sure you are using the correct mains voltage for your particular model. Faulty fuses must be replaced with fuses of the same type and rating


without exception.

Specification

Audio Inputs	
Type	1/4" TRS connector, electronically balanced
Impedance	10 k Ω / balanced or unbalanced
Gain range	$-\infty$ to +15 dB
Operating level	+4 dBu/-10 dBV (switchable)
Maximum input level	+22 dBu
CMRR @ 1 kHz	Typically > 50 dB
Audio Outputs	
Main Out UR	
Type	3=1/4" TRS connector, impedance balanced
Gain range	-00 to +15 dB
Impedance	240 Ω balanced, 120 Ω unbalanced
Maximum output level	-F22 dBu
Mon Out	
Type	1/4" TRS connector, impedance balanced, mono
Impedance	240 Ω balanced, 120 Ω unbalanced
Max. output level	+22 dBu
Phones Output	
Type	1/4" TRS connector, stereo
Minimum load impedance	1000
System Specifications	
Bandwidth	20 Hz – 20 kHz \pm 0.2 dB
Frequency range	10 Hz – 200 kHz, \pm 3 dB
Signal-to-noise ratio	< -97 dB
THD	0.003% @ +4 dBu, 1 kHz, unity gain
Crosstalk	< -70 dB
Power Supply	
Switch-mode autorange power supply	100-240 V -50/60 Hz
Power consumption	15 W
Mains connection	Standard IEC connector

Physical	
Dimensions (H x W x D)	44 x 483 x 149 mm (1.7 x 19.0 x 5.9")
Weight	1.8 kg (4.0 lbs)

Documents / Resources

	behringer RX1602 16-Input Rack Mount Analog Mixer [pdf] Instructions RX1602, 16-Input Rack Mount Analog Mixer, Rack Mount Analog Mixer, Analog Mixer, RX1602, Mixer
---	--