

# Behringer Ultra-Flexible MIDI Foot Controller User Guide

Home » Behringer » Behringer Ultra-Flexible MIDI Foot Controller User Guide 🖺

Behringer Ultra-Flexible MIDI Foot Controller User Guide



#### **Contents**

- 1 Important Safety Instructions
- **2 LEGAL DISCLAIMER**
- **3 LIMITED WARRANTY**
- 4 FCB1010 Controls
- **5 Specifications**
- **6 Other important information**
- 7 FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE **INFORMATION**
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts

## **Important Safety Instructions**



shock. Use only high-quality professional speaker cables with 1/4" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.

This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.

This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.



To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.



To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## **A** Caution

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
- 11. Use only attachments/accessories specified by the manufacturer. injury from tip-over.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into

the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

- 15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office, or your household waste collection service.
- 18. Do not install in a confined space, such as a book case or similar unit.
- 19. Do not place naked flame sources, such as lighted candles, on the apparatus.
- 20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed-of at a battery collection point.
- 21. This apparatus may be used in tropical and moderate climates up to 45°C.

#### **LEGAL DISCLAIMER**


Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Oberheim, Auratone and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2021 All rights reserved.


#### **LIMITED WARRANTY**


For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at musictribe.com/warranty.


#### **FCB1010 Controls**

EN Step 1: Controls

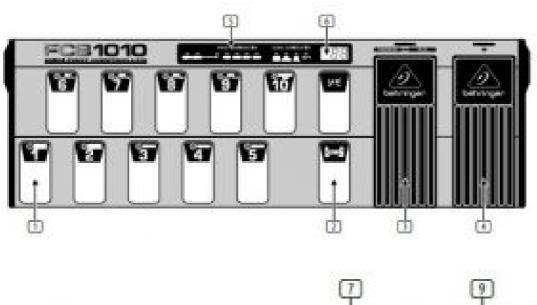

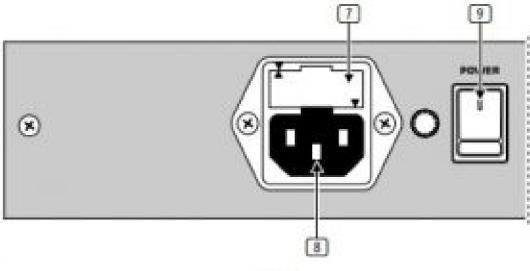

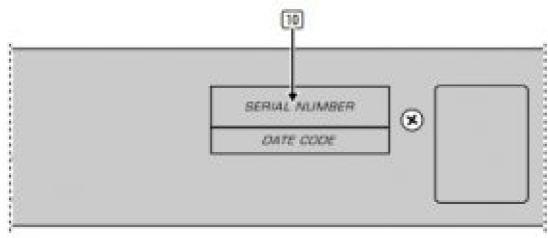

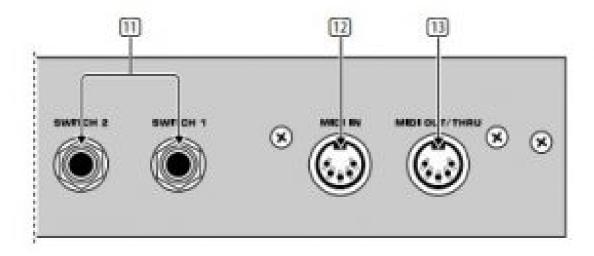

## **EN** Controls

- 1. **FOOTSWITCHES** 1 through 10/0. These keys are used for changing the presets, programming, entering values in programming mode and activating the DIRECT SELECT function (10/0 only).
- 2. **UP/DOWN** keys. These keys are used to navigate through different banks and programming layers. When in programming mode, use the UP key for ENTER (confirm) and the DOWN key for ESCAPE (cancel).
- 3. **EXPRESSION PEDAL A**. Allows you to change controller values continuously. In programming mode, the pedal is used for data entry.
- 4. **EXPRESSION PEDAL B.** Allows you to change controller values continuously.
- 5. **STATUS LEDs.** The yellow LEDs display the current status of the PRESET programming or GLOBAL CONFIGURATION functions.
- 6. **LED DISPLAY.** Informs you about the currently selected BANK/PRESET number. In programming mode, it displays any value changes.
- 7. FUSE HOLDER / VOLTAGE SELECTOR.
- 8. IEC POWER CONNECTOR.
- 9. Use the **POWER** switch to power up your FCB1010. Always make sure the **POWER** switch is in its "Off" setting when you connect the FCB1010 to the mains.
- 10. **SERIAL NUMBER.**
- 11. **SWITCH 1** and **2**. Use these jacks to connect your amplifier for channel selection (mono or stereo phone jack cable).
- 12. **MIDI IN.** The **MIDI IN** of your FCB1010 connects to a sequencer or similar device, in order to download the memory data saved before with the help of the MIDI SysEx function. Additionally, data can be looped through the FCB1010 and merged with other data using the MIDI MERGE function. Subsequently, the combined data are available at the MIDI OUT/THRU connector.
- 13. **MIDI OUT/THRU.** Use this jack to connect the devices you wish to control from your FCB1010. The SOFT THRU circuit allows you to loop through any signals present at the MIDI IN of your FCB1010, merge them with the unit's own data stream, and finally output the combined data at the MIDI OUT.

## **Specifications**

MIDI Interface	
Туре	5-pin DIN jacks IN and OUT / THRU
Display	
Туре	3-digit LED
Switching Output	
Туре	1/4" jack (open)
Power Supply	
Voltage	
USA/Canada	120 V~, 60 Hz
Europe/U.K./Australia	230 V~, 50 Hz
Japan	100 V~, 50 – 60 Hz
General export model	120/230 V~, 50 – 60 Hz
Power consumption	10 W
Fuse	100 – 120 V~: T 100 mA L 250 V 200 – 240 V~: T 50 mA L 250 V
Mains connection	Standard IEC connector
Dimensions/Weight	
Dimensions (H x W x D)	approx. 2 3/8 x 27 x 8 3/4" approx. 60 x 687 x 221 mm
Weight	approx. 9.55 lbs / 4.34 kg

Behringer is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

## Other important information

## Important information

1. Register online. Please register your new Music Tribe equipment right after you purchase it byM visiting

musictribe.com. Registering your purchase using our simple online form helps us to process your repair claims more quickly and efficiently. Also, read the terms and conditions of our warranty, if applicable.

- 2. Malfunction. Should your Music Tribe Authorized Reseller not be located in your vicinity, you may contact the Music Tribe Authorized Fulfiller for your country listed under "Support" at musictribe.com. Should your country not be listed, please check if your problem can be dealt with by our "Online Support" which may also be found under "Support" at musictribe.com. Alternatively, please submit an online warranty claim at musictribe.com BEFORE returning the product.
- 3. **Power Connections.** Before plugging the unit into a power socket, please make sure you are using the correct mains voltage for your particular model. Faulty fuses must be replaced with fuses of the same type and rating without exception

#### FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible Party Name	Music Tribe Commercial NV Inc
Address	5270 Procyon Street, Las Vegas NV 89118, United States
Phone Number	+1 702 800 8290

#### **FCB1010**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

## Important information:

Changes or modifications to the equipment not expressly approved by MUSIC Tribe can void the user's authority to use the equipment.



Hereby, Music Tribe declares that this product is in compliance with Directive 2014/35/EU, Directive 2014/30/EU, Directive 2011/65/EU and Amendment

2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive 1907/2006/EC.

Full text of EU DoC is available at <a href="https://community.musictribe.com/">https://community.musictribe.com/</a>

EU Representative: Music Tribe Brands DK A/S

Address: Ib Spang Olsens Gade 17, DK – 8200 Aarhus N, Denmark

## **Documents / Resources**



<u>behringer Ultra-Flexible MIDI Foot Controller</u> [pdf] User Guide Ultra-Flexible MIDI Foot Controller with 2 Expression Pedals and MIDI Merge Function

### References

- Music Tribe
- Music Tribe

Manuals+,