



behringer XENYX 1003B Premium Analog 10 Input Mixer User Guide

[Home](#) » [Behringer](#) » behringer XENYX 1003B Premium Analog 10 Input Mixer User Guide 

Contents

- [1 behringer XENYX 1003B Premium Analog 10 Input Mixer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Important Safety Instructions](#)
 - [4.1 LEGAL DISCLAIMER](#)
 - [4.2 LIMITED WARRANTY](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

behringer

behringer XENYX 1003B Premium Analog 10 Input Mixer



Product Information

The XENYX 1003B is a premium analog 10-input mixer with 5 mic preamps. It is designed for professional audio mixing and offers optional battery operation for added portability. The mixer provides high-quality sound and versatile control over audio input s, making it suitable for various applications such as live performances, recording studios, and broadcasting.

Product Usage Instructions

Before using the XENYX 1003B mixer, please read and adhere to the following instructions:

1. Read and keep the user manual for future reference.
2. Pay attention to all safety warnings and instructions provided.
3. Avoid removing the top cover or rear section of the mixer as it contains dangerous voltage. Only qualified personnel should perform servicing.
4. Avoid exposing the mixer to rain, moisture, or liquids. Do not place objects filled with liquids on the apparatus.
5. These service instructions are intended for qualified service personnel only. Do not attempt any servicing beyond what is specified in the operation instructions.
6. Do not use the apparatus near water.
7. Clean the mixer with a dry cloth only.
8. Ensure proper ventilation by not blocking any ventilation openings. Install the mixer according to the manufacturer's instructions.
9. Avoid placing the mixer near heat sources such as radiators, heat registers, stoves, or other heat-producing apparatus.
10. Do not modify or remove the polarized or grounding-type plug. Consult an electrician if the provided plug does not fit your outlet.
11. Protect the power cord from being pinched or walked on, especially at plugs and receptacles.
12. Use only attachments and accessories specified by the manufacturer.
13. When using a cart, stand, tripod, bracket, or table with the mixer, exercise caution to prevent tip-over injuries.
14. Unplug the mixer during lightning storms or when not in use for extended periods of time.

15. Refer all servicing to qualified service personnel if the mixer has been damaged, exposed to moisture, does not operate normally, or has been dropped.
16. Connect the mixer to a mains socket outlet with a protective earthing connection.
17. Ensure that the disconnect device, such as the MAINS plug or appliance coupler, remains easily operable.
18. Avoid installing the mixer in confined spaces such as bookcases or similar units.

By following these instructions, you can safely and effectively use the XENYX 1003B mixer for your audio mixing needs.

Important Safety Instructions



Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.



Caution

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.



Caution

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Caution

These service instructions are for use by qualified service personnel only.


To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



17.  Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact

your local city office, or your household waste collection service.

18. Do not install in a confined space, such as a book case or similar unit.
19. Do not place naked flame sources, such as lighted candles, on the apparatus.
20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed-of at a battery collection point.
21. This apparatus may be used in tropical and moderate climates up to 45°C.

Caution

- Always remove battery if consumed or if product is to be left unused for a long time
- Replacement of a battery with an incorrect type that can defeat a safeguard! Replace only with the same or equivalent type!
- Risk of fire or explosion if the battery is replaced by an incorrect type
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas
- Attention should be drawn to the environmental aspects of battery disposal


LEGAL DISCLAIMER

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aston Microphones and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2022 All rights reserved.

LIMITED WARRANTY



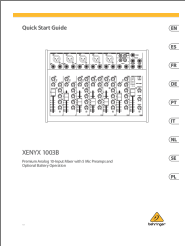

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at community.musictribe.com/pages/support#warranty.

Documents / Resources

	<p>behringer XENYX 1003B Premium Analog 10 Input Mixer [pdf] User Guide XENYX 1003B Premium Analog 10 Input Mixer, XENYX 1003B, Premium Analog 10 Input Mixer, Analog 10 Input Mixer, 10 Input Mixer, Mixer</p>
---	---

References

-  [Music Tribe](#)

-  [Music Tribe](#)
-  [Music Tribe](#)
-  [Music Tribe](#)
-  [Music Tribe](#)

Manuals+