



BEIWO 88918 Transforming Robot Remote Control Car Instruction Manual

[Home](#) » [BEIWO](#) » BEIWO 88918 Transforming Robot Remote Control Car Instruction Manual 

Contents

- [1 BEIWO 88918 Transforming Robot Remote Control Car](#)
- [2 PREFACE](#)
- [3 PACKAGE CONTENTS](#)
- [4 RC CAR'S DETAILS](#)
- [5 REMOTE CONTROL FUNCTIONS](#)
- [6 BATTERY INSTALLATION](#)
- [7 CHARGING](#)
- [8 OPERATION](#)
- [9 FCC STATEMENT](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

BEIWO

BEIWO 88918 Transforming Robot Remote Control Car









PREFACE

 
To make your experience with this remote control car as straightforward and convenient as possible, please read this Instruction For Use before operating and keep it for future reference and maintenance.

1. In order to protect the legitimate rights and interests of users, please be sure to carefully read the relevant contents of this manual provided with this product before using this product.
2. During the use of this product, please be sure to strictly observe and perform the requirements including but not limited to the instructions and safety instructions. For any personal injury, accident, property loss, legal dispute, or any other adverse event causing a conflict of interest resulting from the use of the product or any irresistible factors that are in violation of the safety instructions, the user shall bear the related responsibilities and losses. FDJ will not take any responsibility.
3. Once you start using this product, you are deemed to have read, understood, endorsed, and accepted all the terms and contents of the instructions (including disclaimers, safety instructions, warning instructions, etc.) included with this product.
4. Any questions or suggestions Please contact us via Amazon when you play it. Thank you.


PACKAGE CONTENTS

 ×1	 ×1	 ×5
RC Car	Remote Control	Car Battery
 ×1	 ×1	 ×1
USB Charging Cable	Screwdriver	Instructions For Use

RC CAR'S DETAILS

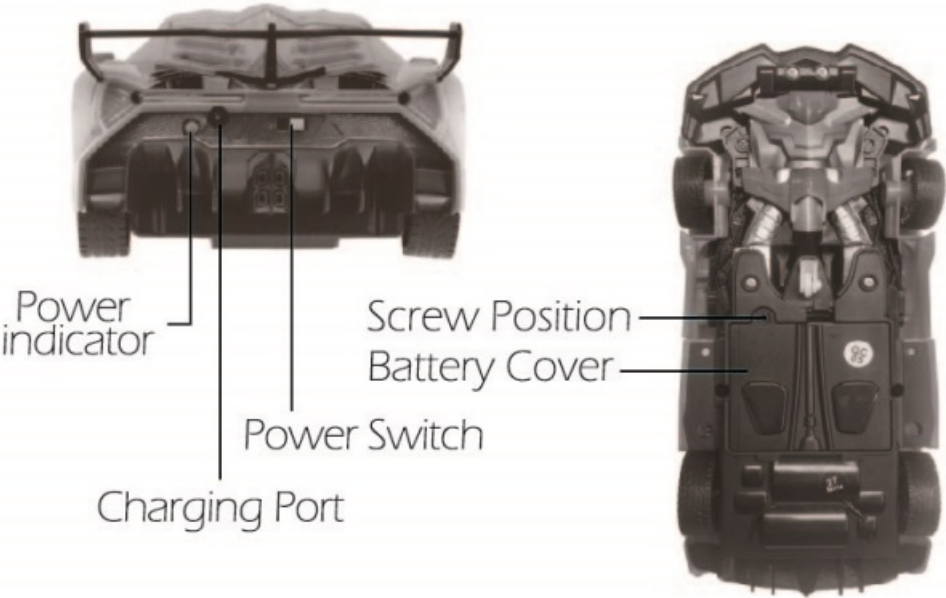


REMOTE CONTROL FUNCTIONS

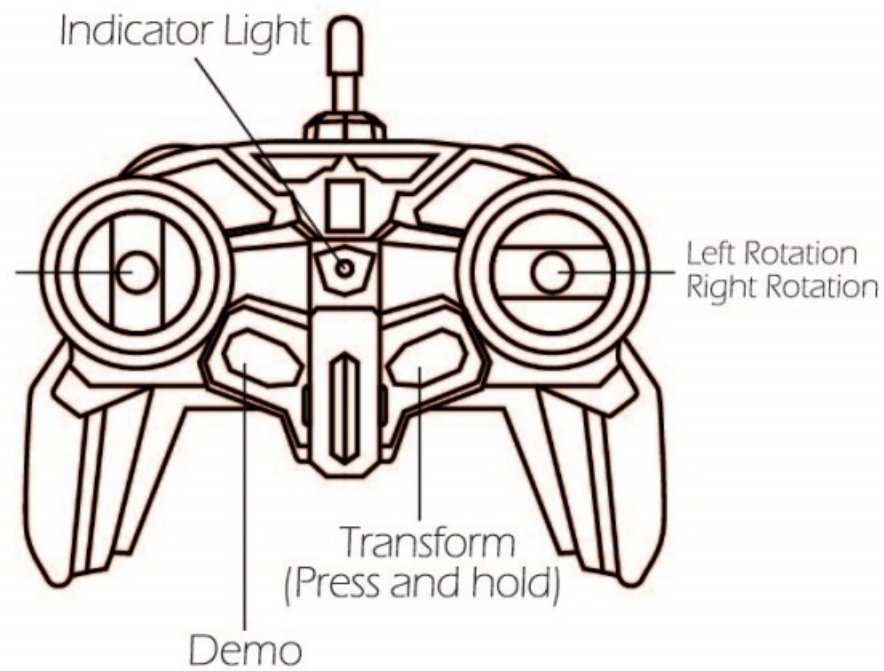 

BATTERY INSTALLATION

 
RC Car Battery

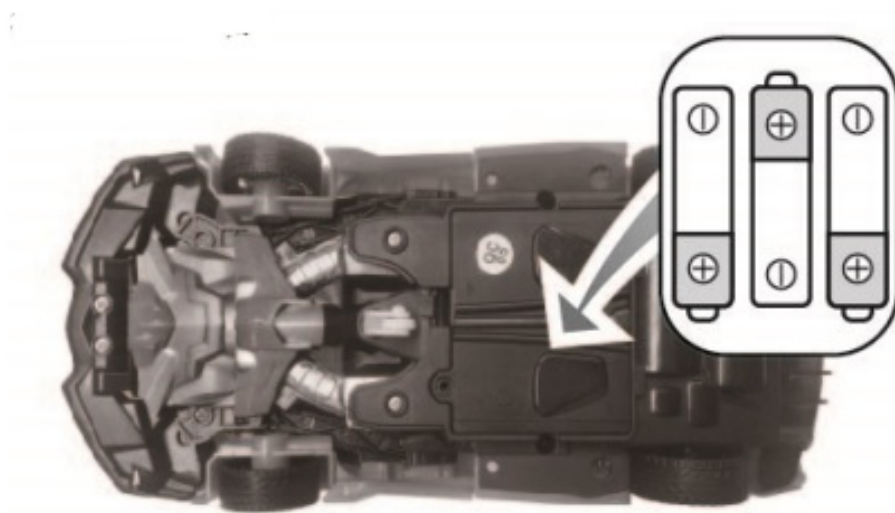

- Unscrew and open the battery cover.
- Insert 3 car batteries in the right direction.
- Close the battery cover and lock it.

If the car will not be used for a long time, make sure to take out the batteries.

 
Remote Control Battery

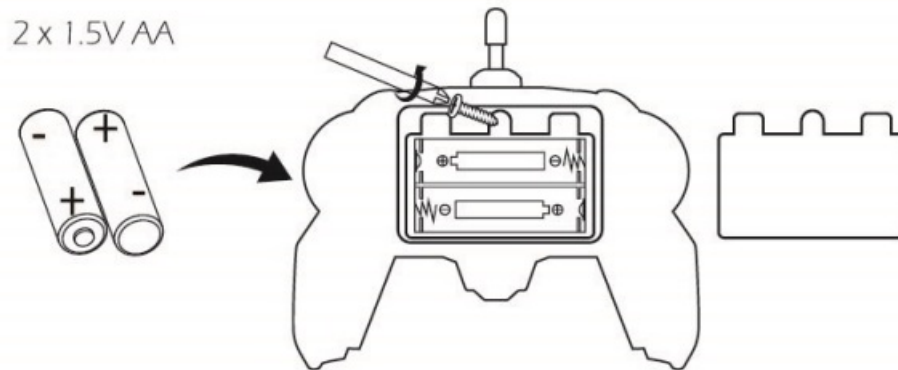

1. Unscrew and open the battery cover
2. Insert 2 AA batteries in the right direction.
3. Close the battery cover and lock it.

If the remote control will not be used for a long time, make sure to take out the batteries.

 CHARGING

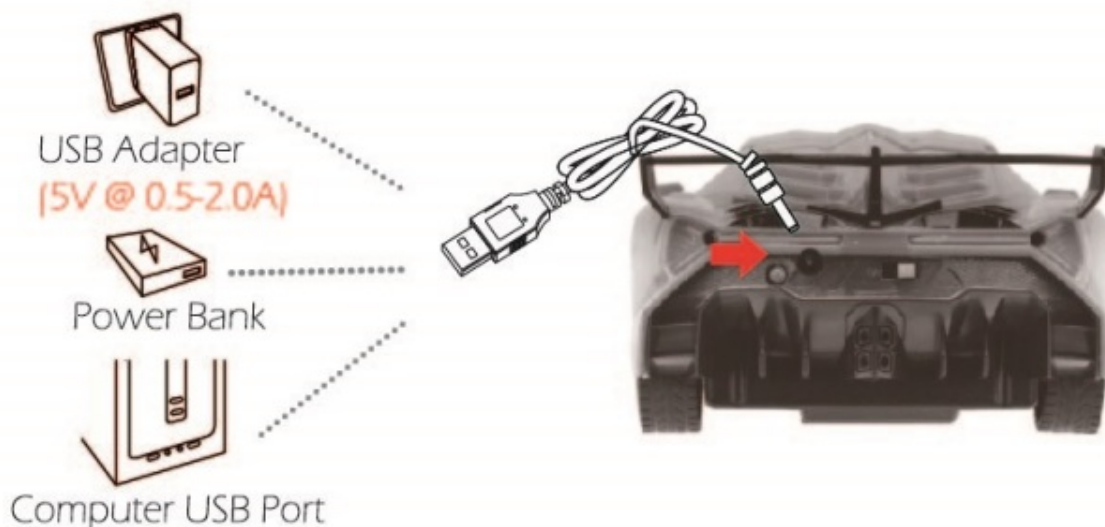

1. Plug the USB charging cable into a USB charging port on the computer, power bank or USB adapter (5V@ 0.5-2.0A).
2. Plug the USB charging cable into the car's charging port
3. Charging time: about 120 minutes.
4. The car's power indicator will be on when the car is charging., and will turn off once the car is fully charged.

ATTENTION:

Please keep the car in sight when charging. Do not put the car on a flammable surface. If you find that the charging port and USB charging cable are damaged, stop using it immediately and replace the accessories as soon as possible.

OPERATION

Pairing

Once batteries are inserted to the car and the remote, turn on the car then the remote. Both will automatically pair.

Forward and Backward

Push the A stick forward, the car goes forward. Push the A stick backward, the car goes backward.



Left Rotation and Right Rotation

Push the B stick to the left, the car will rotate to the left. Push the B stick to the right, the car will rotate to the right.



Transform

Press and hold C button to transform the car.



Demo mode

Press D button once and the car will enter demo mode. Push the stick to exit.



SPECIFICATIONS

- Operating Time: 30 minutes
- Dimensions: 23 x 9 x 6 cm
- Battery Type For Car: 1.2V N-Cd battery
- Charging Time: about 120 minutes
- Max Control Distance: 20m
- Battery Type For Remote Control: 1.5V AA battery
- USB Charging Cable: Voltage 5V Rated Power s 10W
- Operating Temperature Range: 32" to 104'F (0" to 40'C)


FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

	<p>BEIWO 88918 Transforming Robot Remote Control Car [pdf] Instruction Manual 88918, 2A5ER88918, 88918 Transforming Robot Remote Control Car, Transforming Robot Remote Control Car</p>
---	---