

BELIMO NF Series Spring Return Damper Actuator Instruction Manual

Home » BELIMO NF Series Spring Return Damper Actuator Instruction Manual



Contents

- 1 BELIMO NF Series Spring Return Damper **Actuator**
- **2 Product Usage Instructions**
- **3 INSTRUCTION**
- **4 DIMENSION**
- **5 Documents / Resources**
 - **5.1 References**



BELIMO NF Series Spring Return Damper Actuator



Product Information:

The product is identified by the model numbers NF(..)A(-S2) or SF(..)A(-S2).

Key Specifications:

• Operating Voltage: AC 24 V / DC 24 V

• Temperature Range: 10°C to 22°C

• Valve Stroke: 10 mm to 14 mm

Valve Diameter: 19 mm to 25.4 mm
Pressure Range: 12 bar to 18 bar

Flow Rate: 15 l/minTightness: 1mmTorque: 10 Nm


• Duty Cycle: 33% to 100%


Product Usage Instructions


- Make sure to connect the product to an appropriate power source with an operating voltage of AC 24 V or DC 24 V.
- 2. Ensure that the temperature range is set between 10°C and 22°C.
- 3. Adjust the valve stroke within the range of 10 mm to 14 mm.
- 4. Select the appropriate valve diameter between 19 mm and 25.4 mm.
- 5. Set the pressure range between 12 bar and 18 bar.
- 6. Ensure a flow rate of 15 l/min.
- 7. Check the tightness of the valve, ensuring it is set to 1mm.
- 8. Apply a torque of 10 Nm during installation.
- 9. Adjust the duty cycle between 33% and 100% based on your requirements.


For more information, visit the **Belimo website** or refer to the **safety guidelines**.


INSTRUCTION

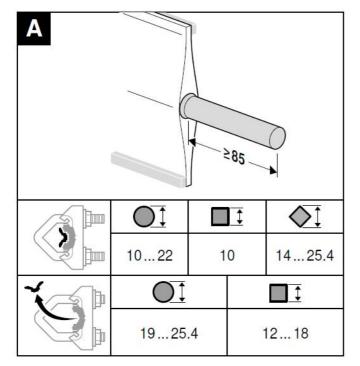


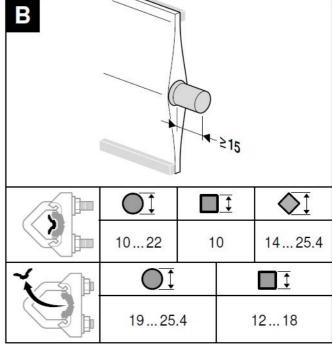


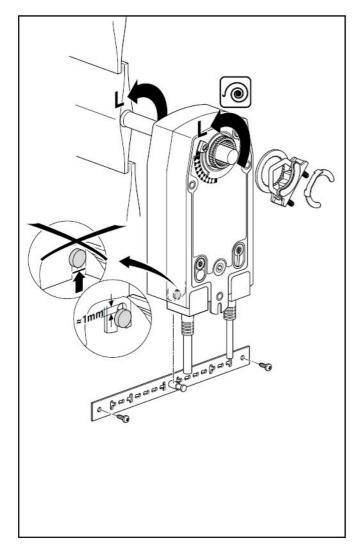


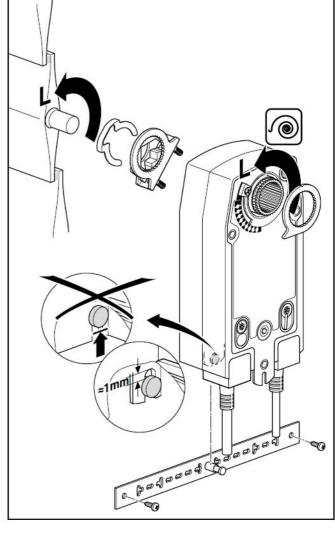


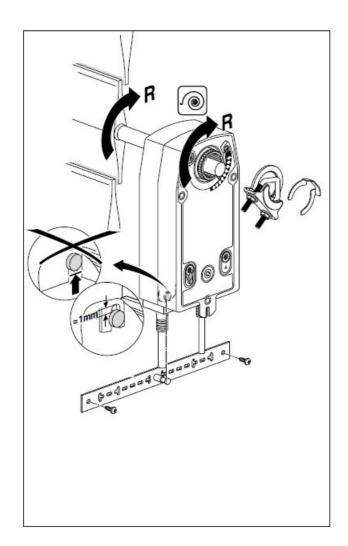

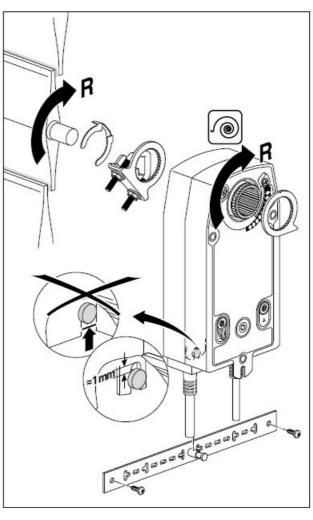


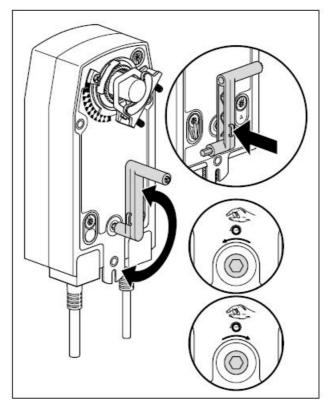

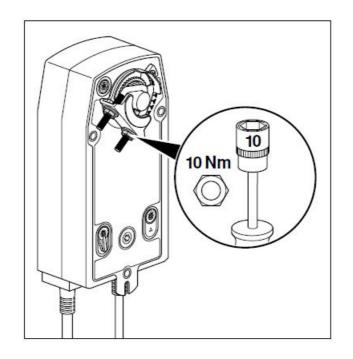

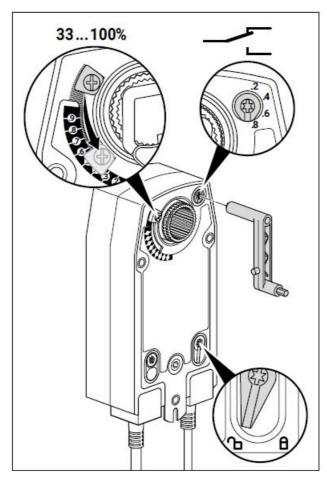

DIMENSION

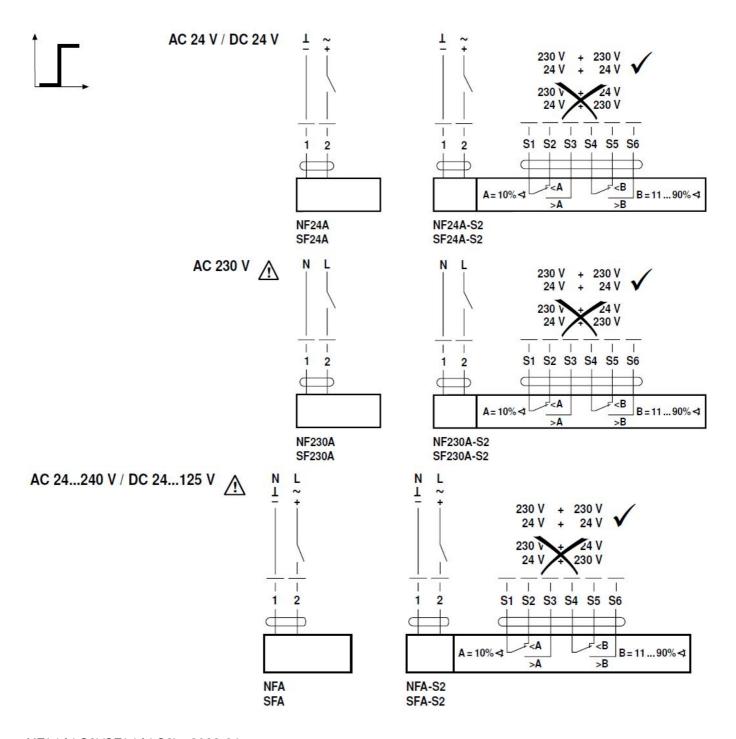

NF(..)A(-S2)/SF(..)A(-S2) • 2022-04 www.belimo.com

Documents / Resources



<u>BELIMO NF Series Spring Return Damper Actuator</u> [pdf] Instruction Manual NF Series Spring Return Damper Actuator, NF Series, Spring Return Damper Actuator, Return Damper Actuator, Damper Actuator, Actuator

References

• Mome | Belimo

