



Bell 2GIG Door / Window Sensor or Flood Detector Instructions

[Home](#) » [Bell](#) » Bell 2GIG Door / Window Sensor or Flood Detector Instructions 



Battery replacement instructions for your Bell Smart Home equipment.

Enclosed you will find the replacement battery for your Bell Smart Home device or sensor. Please refer to the list below to identify the device or sensor belonging to you that requires a battery replacement, then follow the step-by-step instructions on how to replace it.

Contents

- [1 Battery Disposal](#)
- [2 Instructions](#)
- [3 Recessed Door / Window Sensor](#)
- [4 Door / Window Sensor or Flood Detector](#)
- [5 2GIG Flood Sensor](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Battery Disposal

We encourage you to dispose of your old batteries in an environmentally friendly way. For more information about the designated battery types and recycling depot locations, please visit www.call2recycle.ca.

Instructions

Please start by disarming your system.

Recessed Door / Window Sensor

Battery Type: 1 x CR2



Circuit Board Before removing the circuit board, notice that it fits inside a channel on the inside of the case. When replacing the board, ensure you fit it back into the same channel for a proper fit.

1. Carefully insert a small flat-head screwdriver into the notch in the sensor cover and pry open to remove the top cover.
2. Remove the circuit board. The battery is attached to the end of the circuit board.
3. Remove the existing battery.
4. Install the new battery, ensuring the (+) side is facing up.
5. Carefully slide the circuit board back into the sensor the same way you removed it to ensure a proper fit.
6. Replace the cover.
7. Contact Technical Support to confirm the battery replacement was successful and the sensor is in proper working order. Contact numbers are located at the end of this document.

Door / Window Sensor or Flood Detector

Battery Type: 1 x CR2



1. Insert a small flat-head screwdriver into either side of the unit and carefully twist to separate the top and bottom plastic cases.
2. Observe the battery polarity.
3. Remove the old battery.
4. Install the new battery, maintaining proper polarity.
5. Replace the sensor cover.
6. Contact Technical Support to confirm the battery replacement was successful and the sensor is in proper working order. Contact numbers are located at the end of this document.

2GIG Flood Sensor

Battery Type: 1 x CR2



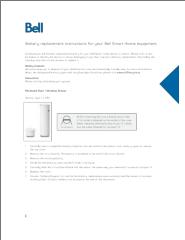
1. Place your thumb on the tab located on the top of the sensor and push down until the sensor case separates.

2. Remove the cover from the base.
3. Observe the battery polarity.
4. Remove the old battery.
5. Install the new battery, maintaining proper polarity.
6. Replace the sensor cover.
7. Contact Technical Support to confirm the battery replacement was successful and the sensor is in proper working order. Contact numbers are located at the end of this document.

For any additional questions about your Bell Smart Home equipment, visit bell.ca/smart-home. Or call our Technical Support team using the following numbers: Ontario and Québec: **1 877 267-2004**. Manitoba: **1 866 949-0078**. New Brunswick, Nova Scotia, Newfoundland and Labrador, and PEI: **1 844 474-2023**.

108087405
CR2

Documents / Resources

	<p>Bell 2GIG Door / Window Sensor or Flood Detector [pdf] Instructions 2GIG, Door Window Sensor or Flood Detector</p>
--	---

References

- [Bell](#) [Maison intelligente | Sécurité résidentielle et domotique | Bell change selected close](#)
- [Bell](#) [Smart Home | Security System and Home Automation | Bell Canada change selected close](#)
- [Call2Recycle® | Canada](#)