

bemi CGX Touch Screen And Dual Color Front Light User Manual

 
[Home](#) » [bemi](#) » bemi CGX Touch Screen And Dual Color Front Light User Manual 



Contents

- 1 bemi CGX Touch Screen And Dual Color Front Light User Manual
- 2 SAFETY PRECAUTIONS
- 3 Home screen
- 4 Documents / Resources
 - 4.1 References

bemi CGX Touch Screen And Dual Color Front Light User Manual

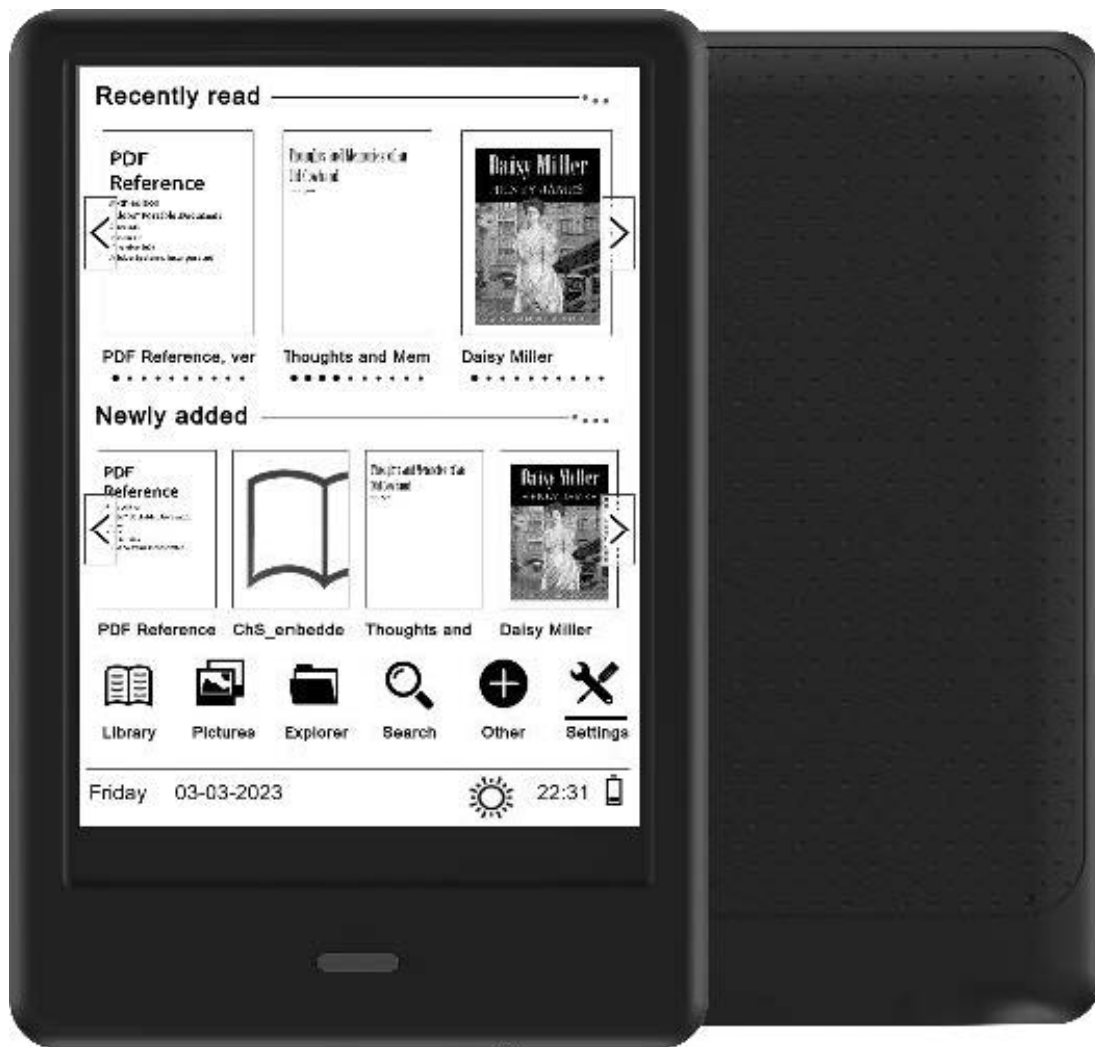

Shenzhen Minrek Electronic Ltd.
C602, 6th Floor, Building C, Hangcheng Road,
Huafen International Robot Industrial zone,
xi'xiang, Bao'an, Shenzhen, China 528226

Tel- +86 755 23224486

(DECLARATION OF CONFORMITY)

Number : NR 004/2023

(Number of declaration of Conformity: NR 011/2022)

Shenzhen Minrek Electronic Ltd

C602, 6th Floor, Building C, Hangcheng Road, Huafeng International Robot Industrial Zone,
Xi'xiang, Bao'an, Shenzhen, China 518126

Niniejszym z petr@ odpowiedzialnoécia deklarujemy, te wyr6b:

(under our responsibility, declare, that the product):

(product description):ebook reader, czytnik ksiq2ek

(product brand): Bemi

(product model): Cognita X

(to which this declaration relates is in conformity with the following standards):

EN 300 328 V2.2.2

EN 301 489-1 V 2.2.3:2019

EN 301 489-17 V 3.2.4:2020
EN 55032:2015+A11 :2020
EN 55035:2017+A11 :2020
EN 62311:2020

(following the provisions of):
RoHS 2011/65/EU and 2015/863

Shenzhen 01.03.2023 r.

Ji Min, Dyrektor

Imię, nazwisko, stanowisko
osoby upoważnionej do wystawienia deklaracji



SAFETY PRECAUTIONS

It is mandatory to read this manual before starting to use the device.

Do not expose the device to high (over + 50 ° C), low (below -10 ° C) temperatures or heat due to, for example, sunlight or other heat source. It may damage the device.

Do not handle the device with wet hands.

Do not use this device while driving or walking.

Do not expose the device to cleaning agents, caustics or other chemicals.

Producer does not claim liability for any data loss, damage caused by inappropriate use/maintenance or any mechanical damage.

Please back up your important material at any time to avoid loss.

Do not strongly press the display panel.

Use only authorized accessories.

Prevent the device from falling on the ground or being strongly impacted.

Do not attempt to repair this appliance yourself.

In case of damage, contact authorized service point for check-up or repair.

Always disconnect the product from the power source before cleaning.

The appliance should be connected to a power supply as per specification in the operating instructions or as marked on the appliance.

The battery is not detachable, do not attempt to disassemble the battery.

 
The product is not suitable for children and infants.

Charging

For charging, please use the provided charging cable. The recommended power adaptor current is 5V, 1A. It takes about 3 hours to fully charge device. To charge, first connect the micro USB connector of the charging cable to the device. Then connect its USB 2.0 connector to the power source. After connecting the device properly, a Charging graphic should appear on the device screen. Note: if the device was completely discharged then animation of charging may appear after a few minutes.

Buttons and connectors

1. Back button: short press to back, long press to back to main menu. 2. Micro USB port. 3. MicroSD card slot. 4. Power button. 5. Reset button.

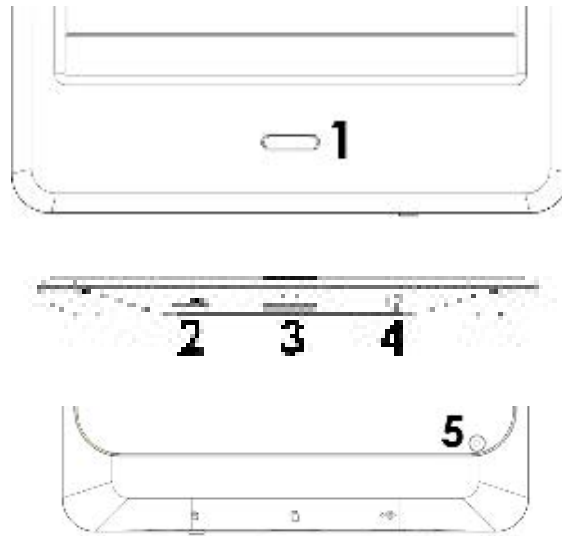

How to turn on device

Press the power button for 5 seconds to turn on the device.
To turn off the device, press the power button for 5 seconds.

Standby

Short press the power button to enter standby/sleep mode.

Activation of the built-in screen backlight

The reader has a built-in backlight in cold and warm colors.

To enter the backlight settings menu, tap the icon at the bottom of the home screen or in the menu while reading a book.

A.

 


B.

He started right in to teach me the difference 'tween right and wrong; I asked him a thousand questions as together we rode along.



Then the settings menu will appear at the top of the screen.

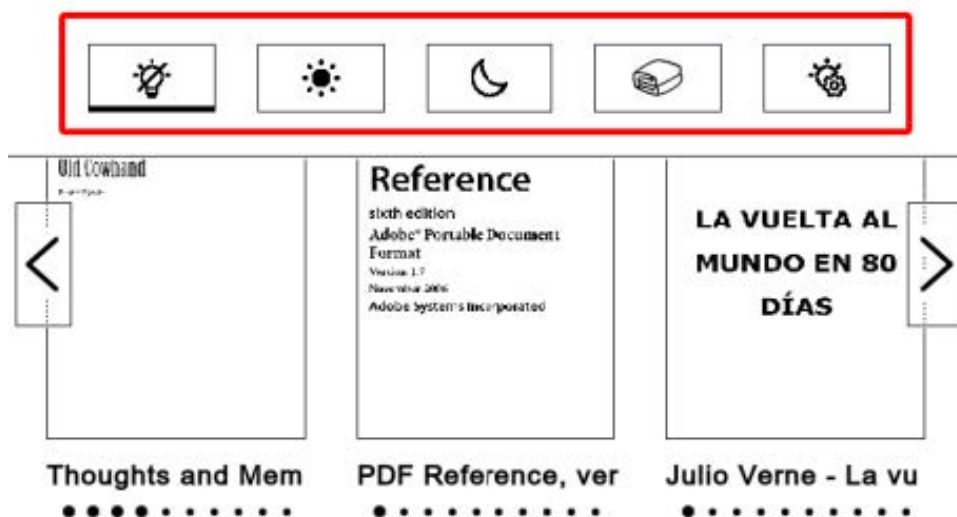

From left to right, the following settings are available:



Tap to turn on/off the backlight



Default setting for daytime reading



Default setting for reading at dusk and night



Default settings for bedtime reading



 
Additional settings menu

Click on the menu icon for additional settings.

Here it is possible to set:


1.Backlight brightness

2.Backlight colors (cold from left, warm to right)

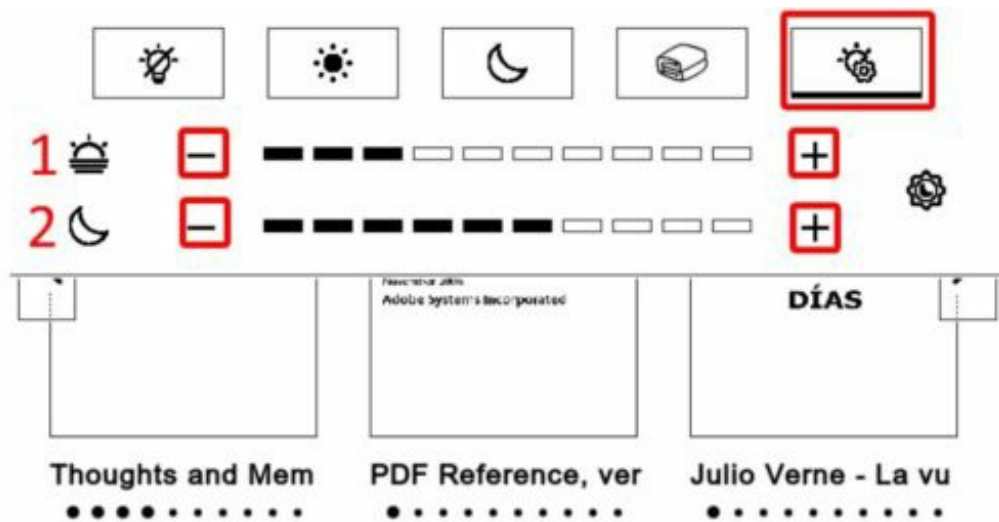

Click on the icons **—** and **+** To change parameters.

 Click on the icon as in the picture below so that the brightness and color parameter change simultaneously.

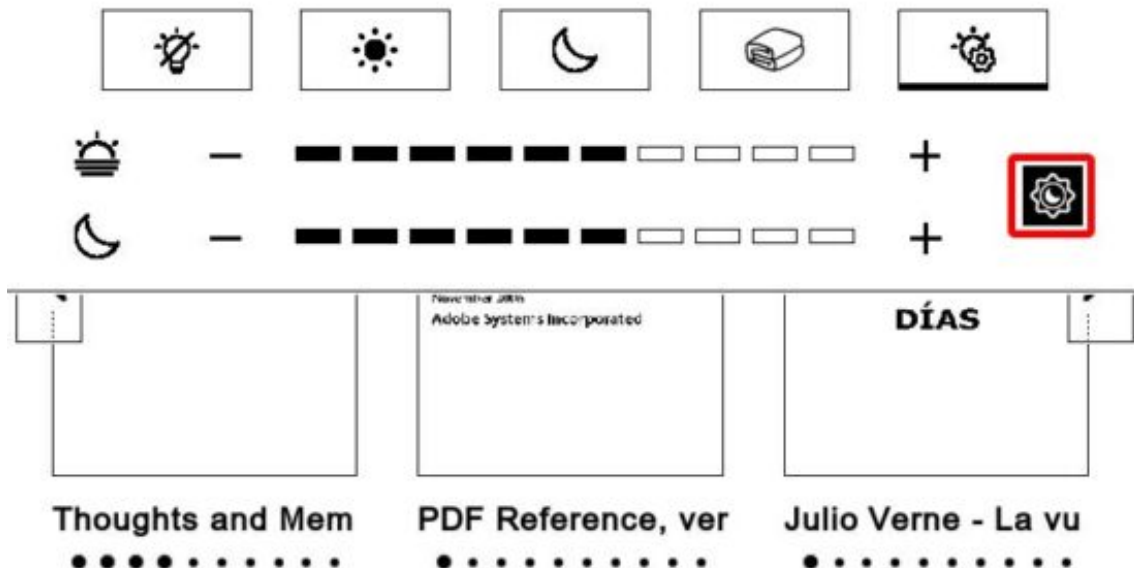


Home screen

Recently read section displays 12 recently opened e-books.


Newly added contains 16 last added e-books. Tap on arrow icons to see next /more books.

In the upper right corner of the book cover, the device gives the % of the read content.

 
Recently read

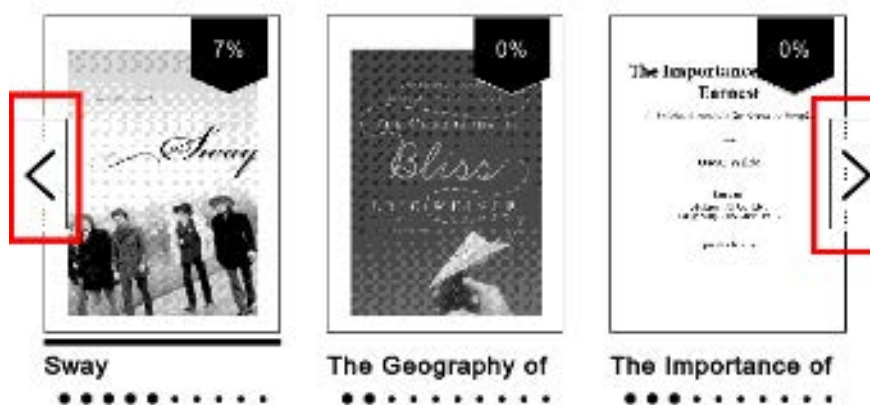


Newly added

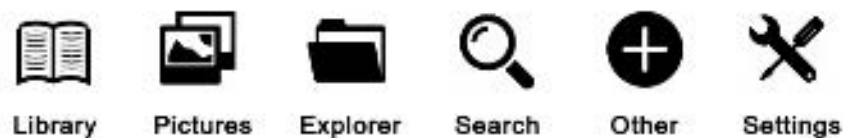 

Thursday 06-05-2021

 


 In main screen there are available below shown sections:

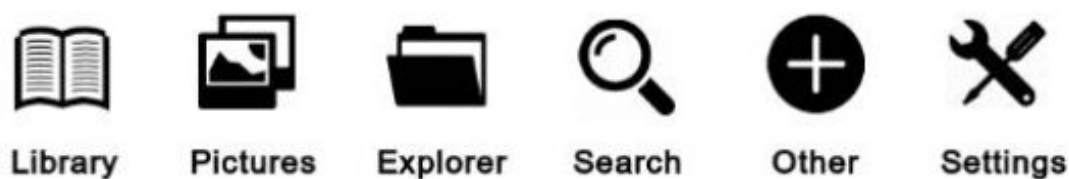

1. Library

 Enter the Library section to display all e-books on the reader (both in internal memory and microSD if inserted). On the right side of the title, there is displayed file's format. In the Library submenu, user can display the list of favorite e-books, search for books, sort by title / author / recently read / newly added.

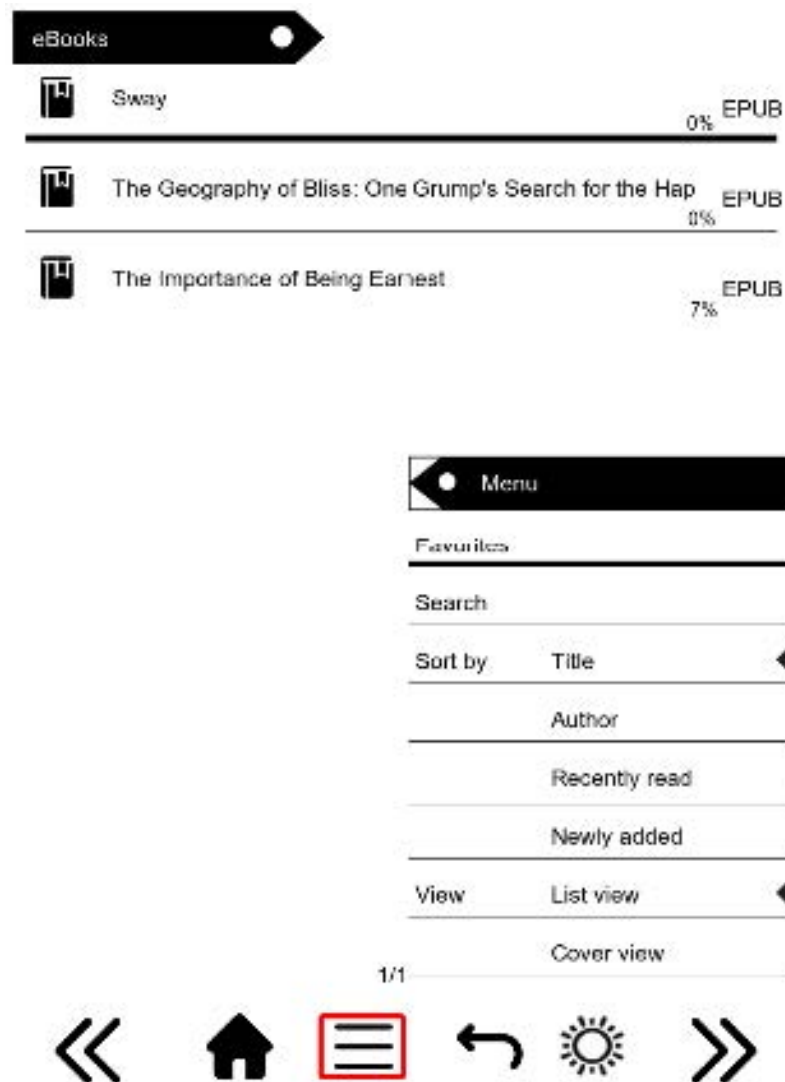

View

 
Set the type of displaying files (list or thumbnails — covers).





1.1. Reader Menu

When reading book tap on bottom of screen and menu will be shown.

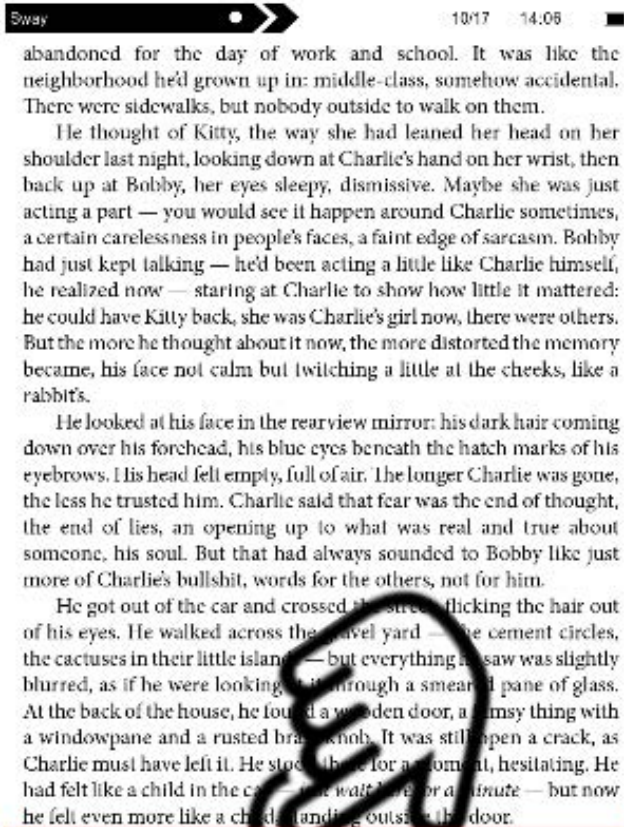

abandoned for the day of work and school. It was like the neighborhood he'd grown up in: middle-class, somehow accidental. There were sidewalks, but nobody outside to walk on them.

He thought of Kitty, the way she had leaned her head on her shoulder last night, looking down at Charlie's hand on her wrist, then back up at Bobby, her eyes sleepy, dismissive. Maybe she was just acting a part — you would see it happen around Charlie sometimes, a certain carelessness in people's faces, a faint edge of sarcasm. Bobby had just kept talking — he'd been acting a little like Charlie himself, he realized now — staring at Charlie to show how little it mattered: he could have Kitty back, she was Charlie's girl now, there were others. But the more he thought about it now, the more distorted the memory became, his face not calm but twitching a little at the cheeks, like a rabbit's.

He looked at his face in the rearview mirror: his dark hair coming down over his forehead, his blue eyes beneath the hatch marks of his eyebrows. His head felt empty, full of air. The longer Charlie was gone, the less he trusted him. Charlie said that fear was the end of thought, the end of lies, an opening up to what was real and true about someone, his soul. But that had always sounded to Bobby like just more of Charlie's bullshit, words for the others, not for him.

He got out of the car and crossed the street, flicking the hair out of his eyes. He walked across the gravel yard — the cement circles, the cactuses in their little islands — but everything he saw was slightly blurred, as if he were looking at it through a smeared pane of glass. At the back of the house, he found a wooden door, a flimsy thing with a windowpane and a rusted brass knob. It was still open a crack, as Charlie must have left it. He stood there for a moment, hesitating. He had felt like a child in the car — *just wait here for a minute* — but now



1.1.1. Dictionary

Tap to enter to dictionary mode.



1.1.2. Footnote

If book include footnote on page, tap on T2 icon then on middle of the page to see footnote text.




1.1.3. Home

Tap to back to main menu.



1.1.4. Settings

Tap Menu icon to display possible options. Please note, the reading menu options are different during reading e-books in different formats, as not every option is available for every file format.

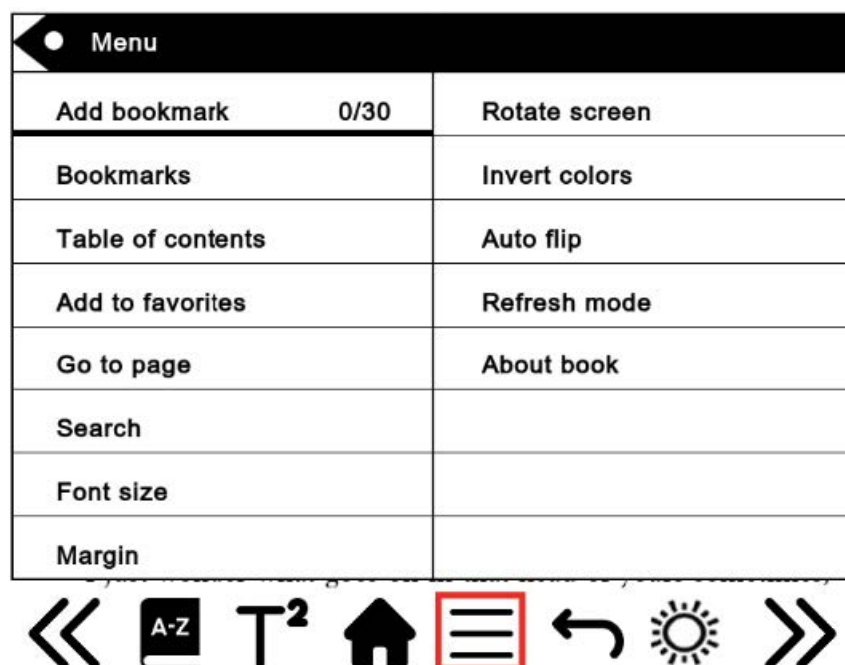 

Add bookmark — add a bookmark in the book you read.

Bookmarks — displays saved bookmarks.

Table of contents — displays table of contents, if available; (not available in .txt file formats).

Add to favorites — add currently read book favorite list.

Go to page — choose a page to move to.

Search — search for particular words in the currently read book.

Zoom size — zoom in/out the file (available only in .pdf format).

Font size — increase / decrease font size of the currently read text; (not available in .pdf file format).

Font type — change font type of the text (available in .txt/.html/.fb2/.rtf/.

mobi file formats only).

Line spacing — change spacing between lines (available in .txt/.html/.fb2/.rtf/.mobi file formats only).

Margin — change the margins of the book.

Text only — user can change between displaying file in .pdf format in its original form or as a text only (available only in .pdf format).

Rotate screen — rotate screen 90° clockwise or anticlockwise.

Invert colors — invert display colors (by default the background is white and letters are black; when inverted the background is black and letters are white); (not available in .pdf file formats).

Auto flip — set automatic page flip: 10 seconds/20 seconds/30 seconds/1 minute/2 minutes.

Refresh mode — select screen refresh frequency settings: after every page/ after every 3 pages/after every 5 pages.

About book — displays information about the currently opened e-book: title, author, publisher and format (if available).

 
1.1.5. Back

Tap to back.



1.1.6. Page up and down arrows

Tap on arrows to change pages. You can also tap on left and right side of screen to change pages too.

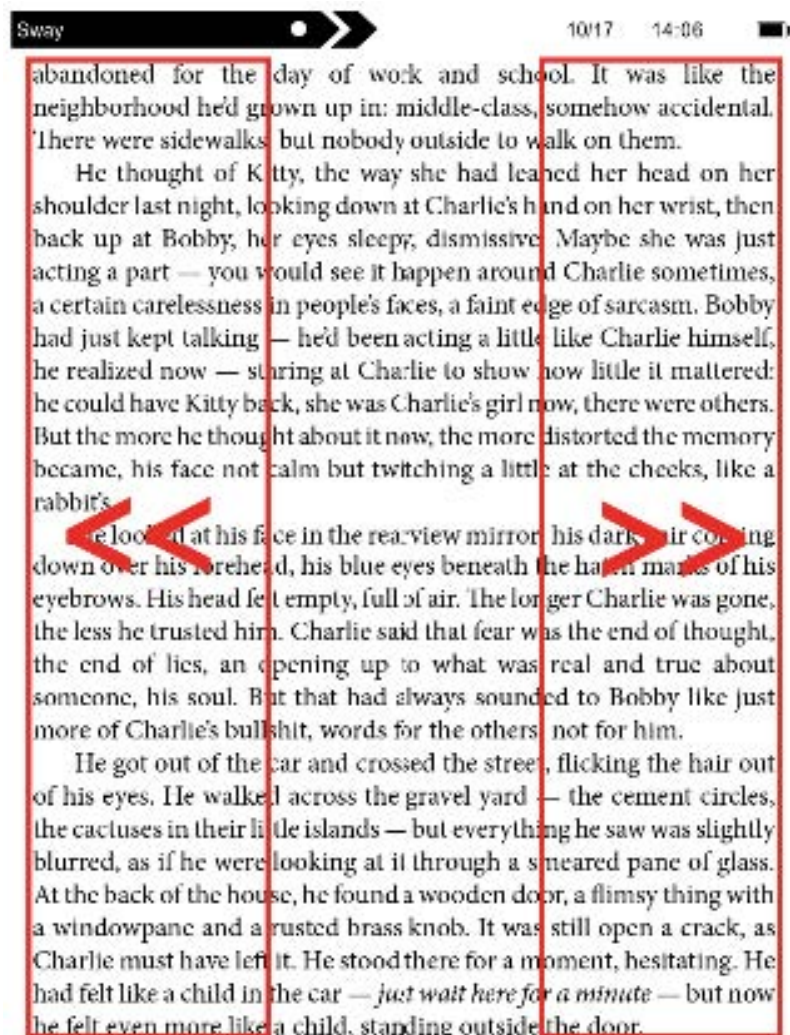

Fonts

Device does not guarantee proper operation of every file on this device. Correct display of fonts, especially of diacritic signs, on this reader is solely dependent on the e-book file format and whether they have been prepared to be displayed on an e-book reader. For files in .txt format, it is suggested to make sure the file is in UTF format for optimum display of fonts. When reading e-books in .rtf/.txt/.fb2/.mobi formats in a language which consists of diacritic signs, it is suggested not to set default font for optimum display of fonts.

2. Pictures

Open the section to display all pictures (both in internal memory and microSD card if inserted). To display possible function, open the picture, tap on Menu icon to open picture submenu. Submenu offers options: setting the picture as screensaver, restoring default screensaver, setting the picture as off screen, restoring default off screen, rotating the picture, zooming in/out. Press "Left" / "Right" buttons to display second page of the submenu, where you can set picture slide interval: off/5 sec./10 sec./20 sec./30 sec./1 minute, as well as display information about the picture (name and format).

3. Explorer

Enter to display directory of files on the reader. While in memory subfolder, tap on "Menu" icon to display list of additional options: search, delete and display of internal or external memory switch.

4. Search

Enter the Search. The screen will display search menu. Use keyboard to type in searched phrase, tap DONE and OK to begin search. The device will display all available e-books with the searched word. You can search for files by file name and author.

5. Other

Other section included: Calendar, Games, Dictionary and Notes.



5.1. Calendar


Enter to display calendar. The calendar will open at the current month, with marked current day (remember to set the correct date in Settings).

Device can add notes and reminders for each day.

Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	Sun.
26	27	28	29	30	01	02
03	04	05	06 *	07	08	09
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30
31	01	02	03	04	05	06

To add Note tap on Add icon.

 Then tap on Edit icon.

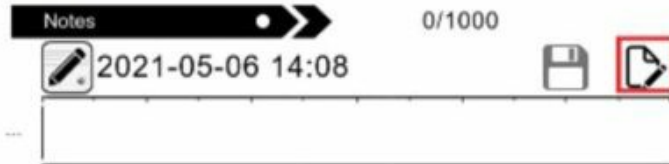

Input note text then save.



Tap on date to see your Note. Below note you can find three additional functions.



Delete

To delete your note tap on icon below.



 
Edit

To edit your note tap on icon below.




Set Reminder

1. Tap on icon below to set reminder about your note. For example, you can set reminder about birthday or important event.
2. Then tap on icon in left corner to enable / disable reminder.

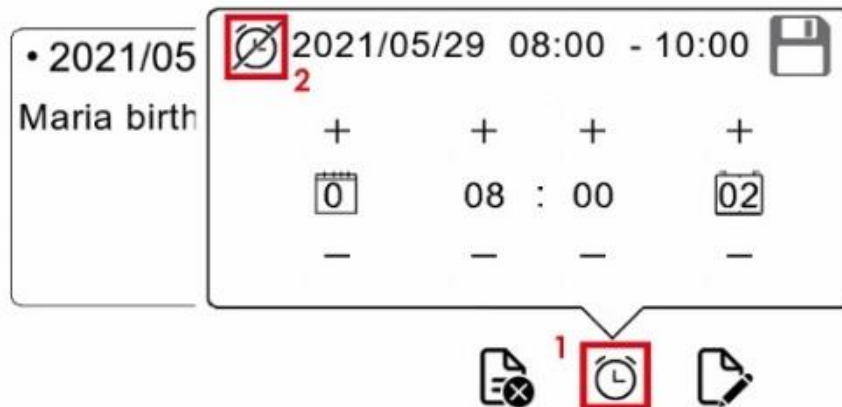

Now you can set reminder parameters.

 1. You can set how many days in advance reminder will pop up.
 2. You can set starting hour.
 3. You can set for how many hour reminder message will pop up.
- After setting all parameters please tap on Save icon in right top corner.

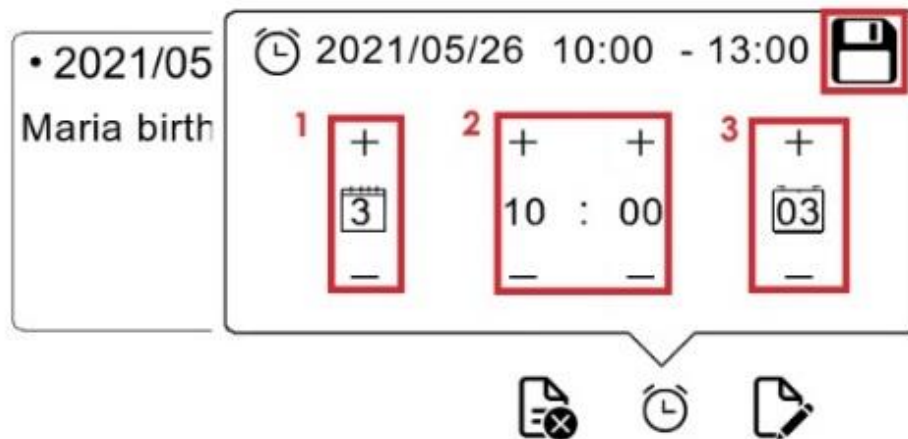

Tap on date to see all set parameters of your reminder.



In desired time reminder will pop up.



5.2. Games

There are two games preinstalled on the reader: Sokoban and Jigsaw.

5.3. Dictionary

Device has built in dictionary from seven languages to English and from English into those languages. Additionally, there is available Webster's English – English dictionary. To change language tap on language square box.



Then select desired dictionary language.

Dictionary

A cappella	Russian	RU-EN	EN-RU
Aalborg	Polish	PL-EN	EN-PL
Aare	Spanish	ES-EN	EN-ES
Aaron (posta	German	DE-EN	EN-DE
Abadan	Italian	IT-EN	EN-IT
Abakus (licz	French	FR-EN	EN-FR
ABC	Portuguese	PO-EN	EN-PO
Abchazja	Webster's English	EN-EN	

Tap on empty line before magnifier icon.
Keyboard will appear, input desired word.
Select word from list to see translation.

Dictionary

A cappella

Aalborg

Aare

Aaron (postać biblijna)

Abadan

Abakus (licznica)

á	â	ä	ç	é	ë	í	ó	ô	ö
ú	ü	ý	ă	ą	ć	ę	ě	ł	ń
ň	ő	í	ś	š	ű	ű	ž	ž	
△	e	a	n	o	i	r	t	✕	
						←	>>En		

house



EN-EN

house

1/10

House, n.; pl. Houses. Etym: [OE. hous, hus, AS. h; akin to OS. &

OFries. h, D. huis, OHG. h, G. haus, Icel. h, Sw. hus, Dan. huus,

Goth. gudh, house of God, temple; and prob. to E. hide to conceal.

See Hide, and cf. Hoard, Husband, Hussy, Husting.]

1. A structure intended or used as a habitation or shelter for animals of any kind; but especially, a building or edifice for the habitation of man; a dwelling place, a mansion.

Houses are built to live in; not to look on. Bacon.
Bees with smoke and doves with noisome stench
Are from their hives and houses driven away.
Shak.

2. Household affairs; domestic concerns; particularly in the phrase to keep house. See below.

5.4. Notes

Device has built in notes function.


To input new note tap on Add icon in top right corner of the screen.

Notes



001	 2013/03/01 00:41 Lista zakupów	
002	 2013/03/20 23:09 rrj	
003	 2013/03/01 00:44 Przepis na szarlotkę	
004	 2013/03/01 00:45 Telefon do babci	
005	 2013/03/01 00:46 Spotkanie klasowe	

 Then tap Edit icon.

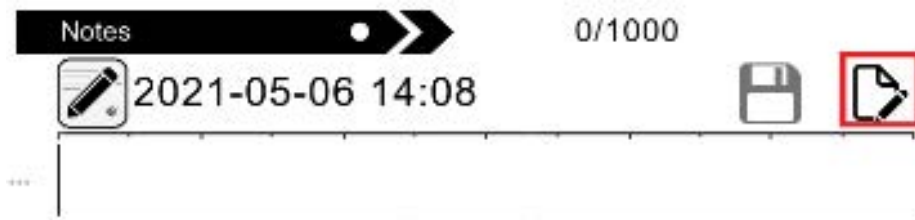

Keyboard will appear.

Input desired note text and tap on Save icon.

 


Note will appear in Notes list.

Tap on Delete icon, then Trash icon to remove note from list.



6. Settings

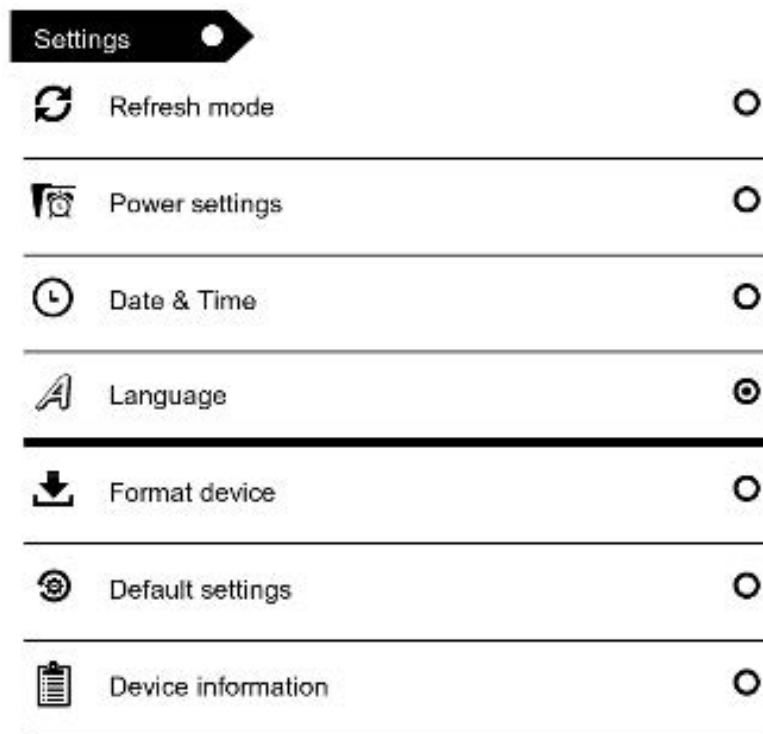

6.1. Refresh mode

Enter to set display refreshing pattern: after each page/after every 3 pages/after every 5 pages.

6.2. Power settings

Enter to set auto shutdown time and standby time.

 
6.2.1. Auto shutdown: user can either disable or set 1/2/3/4 hour for auto shutdown function (the device will automatically turn off after set time to save energy). Note: user can customize off screen up to his needs: open a preloaded picture, tap on Menu icon and select set as off screen.

6.2.2. Standby: disable or select 5/10/15/30 minutes/1 hour. When enabled, the function switches the reader to standby mode to save energy. Note: user can customize screensaver up to his needs: open a preloaded picture, tap on Menu icon and select set as screensaver.

6.3. Date & time


On Home screen, day of week and date appears in the bottom left corner of the display and time appears in the bottom right corner of the display. When reading a book, the time is displayed in the upper right corner of the screen. To change data and time enter Settings, go to Date & Time and enter respective tab.

To set the time, tap on hour number (HH) / minute (MM) and then use the arrows at the bottom of the screen to set the desired hour / minute.

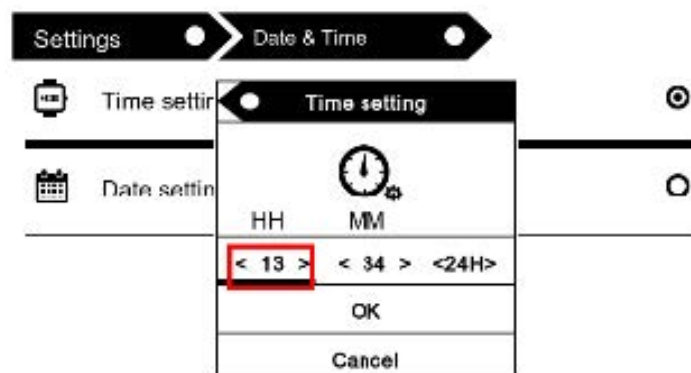




 You can also change the hour format to 24 / 12 (am/pm). To do this, tap on the format and then change it using the arrows.

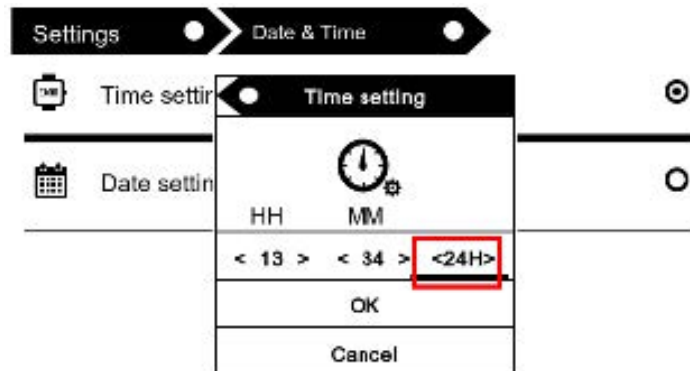

Similarly, we proceed to select a date. Tap on the day number (DD) / month (MM) and year (YY) and then use the arrows at the bottom of the screen to set the desired value.

 Tap OK to confirm and save.

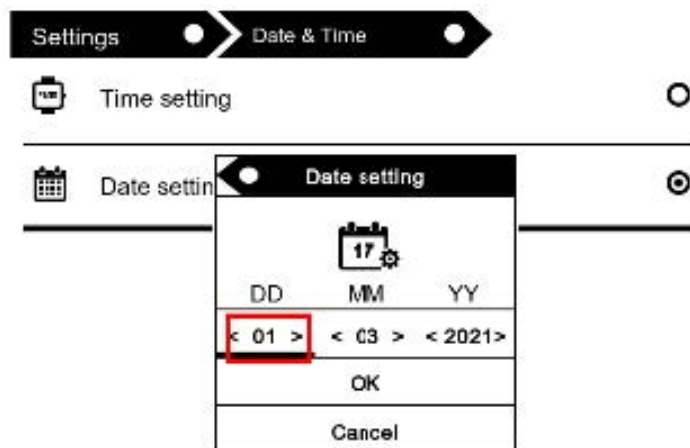

6.4. Language

In order to change language, go to Settings, select Language. A pop up window with available languages will appear, then choose appropriate, tap on it to confirm.

6.5. Format device

User can format the device memory. Please keep in mind that during formatting all data saved on the internal memory will be deleted! Back up your important data! It is suggested to remove memory card from the device before performing formatting. Tap on OK to confirm.

6.6. Default settings

In order to restore default settings of the reader, enter this tab, tap on OK to confirm. The default settings will be restored, and a language selection prompt will be displayed on the screen.

6.7. Device information

Enter to display software version, device model number, used and total capacity of internal memory as well as used and total capacity of external memory.

Data transfer

There are two ways to upload files uploading:

1. Insert microSD card with preloaded files into memory slot of the device.
2. Connect the reader to a PC with the include USB cable. A prompt about successful USB connection will be displayed on the screen. It is possible now to copy files to the device or memory card. Note: Do not disconnect the reader from the computer during data copying, it can lead to damage of device memory.

Reset – Insert thin tool into reset hole at the back of the device, and press and hold the button to restart the device.

Basic Parameters: Screen: E Ink, 6 inches 1024×758 pixels, touch panel, dual color front light, battery capacity: 1800 mAh, storage: 8GB, microSD card slot.



Proper disposal of this product. The device cannot be disposed of together with household waste. To prevent potential threats to the environment and human health due to improper disposal of waste, it is mandatory to take used electronic equipment to a designated collection point, or to the place where the product was purchased for the purpose of recycling electronic waste.

Warning: Lithium battery inside.



This device, Ebook reader model Cognita X, is in compliance with Directive 2014/53/EU of the European Parliament and of the Council. The complete declaration of conformity is available online at the following link:

www.bemi-electronics.com/certificates

This manual is not covered by the warranty, and the appearance and/or functionality of the software installed on the device may be different from the one described. The Guarantor reserves the right to modify the instruction manual at any time without prior notice.


Manufacturer: Shenzhen Minrek Electronic Ltd.

Address: 602, 6/F, Block C, Huafeng International Robotics Industry Park, Huacheng Community Road, Xi'xiang, Bao'an, Shenzhen, China

Made in China

Read More About This Manual & Download PDF:

Documents / Resources

	<p>bemi CGX Touch Screen And Dual Color Front Light [pdf] User Manual</p> <p>CGX Touch Screen And Dual Color Front Light, CGX, Touch Screen And Dual Color Front Light, Screen And Dual Color Front Light, Dual Color Front Light, Color Front Light, Front Light, Light</p>
---	--

References

- [!\[\]\(fd4127b9e2af37bd6ea0fa06afa8e6d8_img.jpg\) electronics.com](#)
- [!\[\]\(3278d6283d12f18012b5aa7d40747611_img.jpg\) electronics.com](#)
- [!\[\]\(bb96b32142ec45f72f12316beae3ef61_img.jpg\) Wearables | Bemi | China](#)
- [!\[\]\(a75d0d7d1ac0ea815a0c027a77b137d5_img.jpg\) Declarations & Certificates | Wearables BEMI](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.