



Home » BenQ » BenQ BL2491T LCD Monitor Instruction Manual

BenQ BL2491T LCD Monitor Instruction Manual

June 25,

2025

Contents [hide]

- 1 BL2491T LCD Monitor
- 2 Specifications:
- 3 Product Usage Instructions:
 - 3.1 1. Disassembly Tools
 - 3.2 2. Product Exploded View
 - 3.3 3. External Cable
 - 3.4 4. Product Disassembly
 - 3.5 5. Recycle Characteristics
 - 3.6 6. Disassembly Time
- 4 FAQ:
 - 4.1 Q: Can I recycle the LCD monitor parts at home?
 - 4.2 Q: Do I need any additional tools for disassembling the monitor?
 - 4.3 Documents / Resources
 - 4.3.1 References

BL2491T LCD Monitor

"

Specifications:

Product Name: LCD Monitor

Model No.: GW2491, GW2491E, GW2491T, BL2491, BL2491T

Product Usage Instructions:

1. Disassembly Tools

- Philips Screwdriver for M3 Screw
- Nosed Pliers
- Diagonal Cutting Pliers
- Slotted screwdriver
- Six Point Sockets
- Philips Screwdriver for M2.5 Screw
- Knife

2. Product Exploded View

Item	Description
1	Deco

3. External Cable

Item	Description	Qty	Unit
P1	Power cable	1	PCS

4. Product Disassembly

1. Place the monitor face down on a smooth surface.

5. Recycle Characteristics

Recycle characteristics: Part Reuse Recycle WEEE annex VII

6. Disassembly Time

Total time: 30 minutes

FAQ:

 
Q: Can I recycle the LCD monitor parts at home?

A: No, for proper disposal and recycling of the parts containing hazardous substances, it is recommended to take them to authorized handling plants.

Q: Do I need any additional tools for disassembling the monitor?

A: The necessary disassembly tools are listed in the manual. Make sure to use them as instructed for safe disassembly.

View Fullscreen



Recycle Disassemble Instruction (Dismantled Information)

Requirements according to ANNEX VII of DIRECTIVE 2012/19/EU on waste electrical and electronic equipment (WEEE)

Materials and components with hazardous content LCDs may contain hazardous substances like Pb and BFRs which are covered by exemptions under the RoHS directive. However, the majority is present in the printed circuit boards assembly. In order to reduce emissions as much as possible, a complete disposal of the old appliance is required. This treatment may only be performed in authorized handling plants.

Product Name: LCD Monitor Model No.:

GW2491,GW2491E,GW2491T,BL2491,BL2491T

1.Disassembly Tools

picture 2.Product exploded view Item Description 1 Deco 2 Panel 3 Mylar 4 Screw 5 Screw 6 Rubber lens-cover 7 Lens

Tool Philips Screwdriver for M3 Screw Nosed Pliers Diagonal Cutting Pliers Slotted

screwdriver Six Point Sockets Philips Screwdriver for M2.5 Screw Knife

Key board
9
Power board
10 Main board
11 Main frame
12 Screw
13 Screw
14 Rear cover
15 Screw
16 Hinge
17 Screw
18 Stand
19 Base
20 Screw
Table 1 Disassembly parts list
Item Description
21

Foot pad

3.External cable
External cable
Item
Description
Qty
Unit
P1
Power cable
1
PCS
P2
HDMI cable
1
PCS
4.Product Disassembly
Place the monitor face down on a smooth surface first. 1. Remove the stand and base.
a) Hold the both protruding clips located on the base and squeeze them inward without
releasing, at
the same Time, use your thumb with the other hand against the base, push it downward

b) Use the sharp object to press the protruded object, and hold the stand with the other

until the base detached.

hand to push it downward until the stand detached.

- 2. Remove the back cover. a) Release the screws first.
- b) Use the tool (not provided) starting from the opening to open all the latches of back cover slowly and carefully.
- c) Disconnect cable to remove back cover.
- 3. Remove main frame from the panel.
- a) Tear out tapes and mylar, then disconnect all the cables.
- b) Release all the screws.
- c) Lift up main frame and disconnect cable to remove it.
- 4. Take out bezel from panel.
- 5. Separate the board from the main frame.

Turn over the main frame, remove mylar and release all the screws to separate boards from main frame.

- 6. Take out the key board from back cover. Do not miss the part remarked in yellow
- 5. Recycle characteristics

Recycle characteristics Part Reuse Recycle WEEE annex VII Recovery Disposal

No. 1,3,4,5,6,7,11,12,13,14,15,16,17,18,19,20,21 2,8,9,10, P1~P2 –

6.Disassembly Time

Total time: 30 minutes

Documents / Resources



BenQ BL2491T LCD Monitor [pdf] Instruction Manual

GW2491, GW2491E, GW2491T, BL2491, BL2491T, BL2491T LCD Monitor, LCD Monitor

References

User Manual

- BenQ, BL2491, BL2491T, BL2491T LCD Monitor, GW2491, GW2491E, GW2491T, LCD Monitor,
- BenQ Monitor

Leave a comment

Your email address will not be published. Required fields are marked* Comment * Name Email Website ☐ Save my name, email, and website in this browser for the next time I comment. **Post Comment** Search: e.g. whirlpool wrf535swhz Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.