



## beper P101CUD052 Popcorn Maker Machine User Manual

[Home](#) » [beper](#) » beper P101CUD052 Popcorn Maker Machine User Manual 

beper P101CUD052 Popcorn Maker Machine



## Contents

- 1 Precautions
- 2 Product Description Fig. A
- 3 Instructions For Use
  - 3.1 Before the first use
  - 3.2 How to use it
- 4 Cleaning And Maintenance Of The Popcorn Machine
- 5 Technical Data
- 6 GUARANTEE CERTIFICATE
  - 6.1 GUARANTEE CONDITIONS
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts

## Precautions

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable.

The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. It is recommended not to throw these packing material in the domestic

waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label. The appliance can be damaged if the voltage is not correct. If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

Do not use the appliance if the cable or the plug shows any damages.

Do not use the appliance after a possible irregular working. In this case, switch it off and do not break it open. Refer to an authorized Beper after-sale service for repair and require original spare parts only. Failing to follow these instructions may impair the safety of your appliance.

This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

This appliance is for household use only.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.


Do not use the appliance near explosives, highly flammable materials, gases or burning flames.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

## **Product Description Fig. A**

1. Main unit
2. Removable bowl
3. Cooking compartment
4. Cover with popcorn outlet
5. Measuring cup
6. ON/OFF switch

**Fig.A**

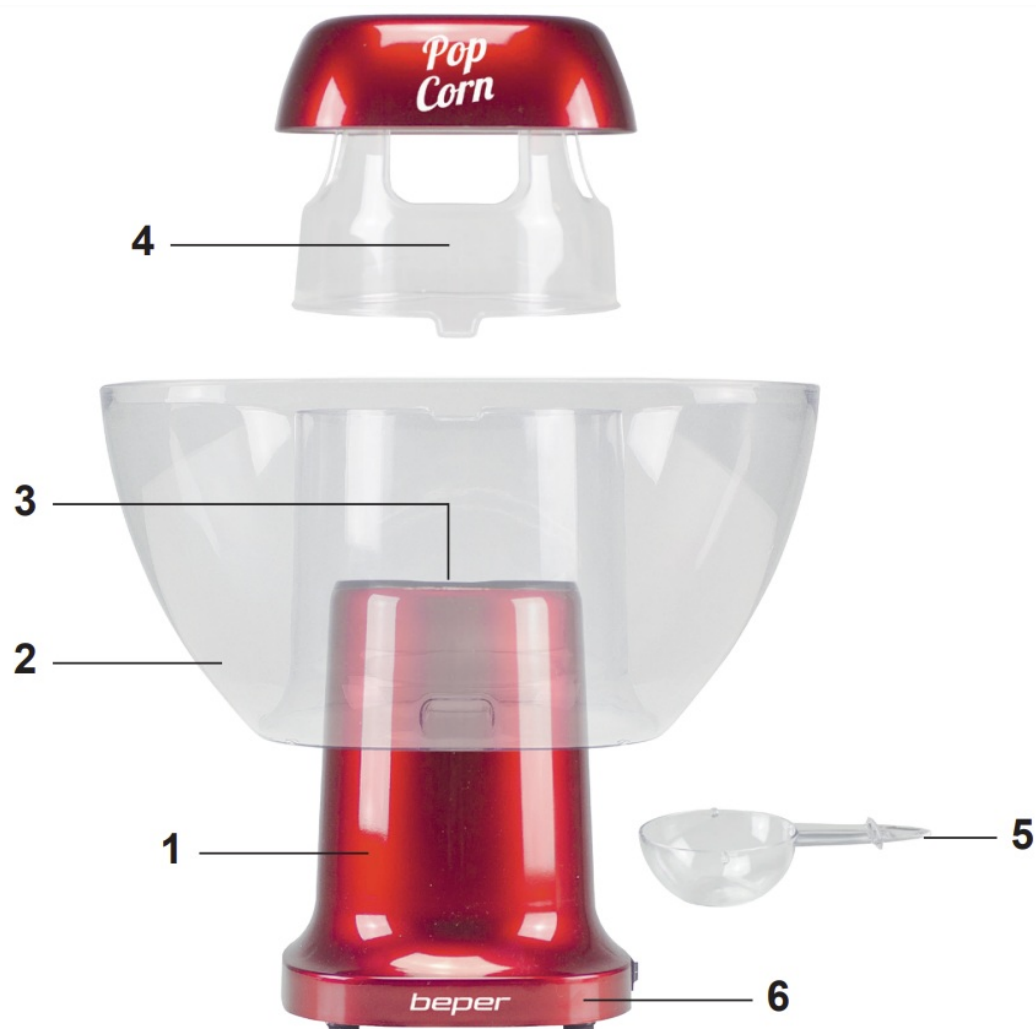

## Instructions For Use

### Before the first use

Before the first use wash the bowl, cover and measuring spoon with warm water and dry carefully. Clean the cooking compartment with a damp cloth and dry well. Do not immerse the main unit in water.

### How to use it

Place the main unit of the popcorn machine on a stable and horizontal surface. Insert the bowl over the main unit until it is well seated. Place the cover on top of the main unit and the bowl so that the protruding tab of the cover is well engaged in its corresponding slot located on the inner edge of the bowl.

Use the measuring cup to pour corns into the cooking compartment. Do not add more than 80 grams of corns (equivalent to one measuring cup).



**Warning:** For cooking popcorn you should not use oil or other fats. Do not add sugar, chocolate, or caramel during cooking. Add them only at the end when the popcorn is already in the container to serve!

Connect the power cord to the electrical outlet. Turn on the popcorn machine by placing the power switch on "I". The cooking time of popcorn is about 3-4 minutes, depending on the amount of corn.

Do not operate the machine before adding corn.

It is important that the popcorn comes out of the cover's outlet and falls into the bowl and does not block the exit of

the popcorn itself.

Once the popcorn stops popping, turn off the machine by repositioning the switch to O.

Before repeating the operation, let the popcorn machine cool for about 15 minutes.

## **Cleaning And Maintenance Of The Popcorn Machine**

Make sure to turn off the popcorn machine. The switch should be placed on "O" and the power cord disconnected from the electrical outlet. Wait for the cooking chamber and the main unit to cool. Clean the bowl, transparent cover with warm water and soap. Do not wash in dishwashers.

Wipe the cooking compartment with a cloth moistened with warm water and dry carefully. Do not use abrasive sponges or detergents. Wipe the main unit with a soft cloth moistened with warm water.

Do not immerse the popcorn machine in water. Do not spray cleaning liquids directly onto the popcorn machine.

## **Technical Data**

### **Power**

1200W

### **Power supply**

220-240V~ 50/60Hz

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



■ The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

## **GUARANTEE CERTIFICATE**

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

## **GUARANTEE CONDITIONS**

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beper reserves the right to replace only the very part in question and not the entire product

Contact your distributor in your country or after sales department Beper.

E-mail [assistenza@beper.com](mailto:assistenza@beper.com) which will forward your enquiries to your distributor.

## CUSTOMER CARE BEPER



## BEPER SRL


Via Salieri, 30 – 37050 – Vallese di Oppeano – Verona

Tel. 045/7134674 – Fax 045/6984019

[www.beper.com](http://www.beper.com)



## Documents / Resources

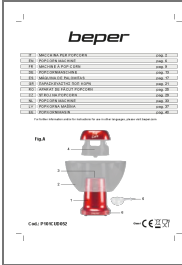

[beper P101CUD052 Popcorn Maker Machine](#) [pdf] User Manual  
P101CUD052, Popcorn Maker Machine, Popcorn Maker, Popcorn Machine, Machine

References

- [Home - Beper](#)

[Manuals+.](#)