



bepers P101TOS502 Multi-Function Grill User Manual

[Home](#) » [bepers](#) » beper P101TOS502 Multi-Function Grill User Manual 

bepers

MULTI-FUNCTION GRILL Use instructions

For further information and/or instructions for use in other languages, please visit: bepers.com

Fig.A





Contents

- [1 Precautions](#)
- [2 Use instruction](#)
- [3 Average cooking times](#)
- [4 GUARANTEE CERTIFICATE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Precautions

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents. Remove the packing and make sure that the appliance is intact, with special attention to the supply cable. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. It is recommended not to throw these packing materials in domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label. The appliance can be damaged if the voltage is not correct. If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption. Generally, the use of adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded. Do not use the appliance if the cable or the plug shows any damages. Do not use the appliance after a possible irregular working. In this case, switch it off and do not break it open. Refer to an authorized Beper after-sale service for repair and require original spare parts only. Failing to follow these instructions may impair the safety of your appliance. This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong, or incautious use.

This appliance is for household use only.

To protect against electric shock, do not immerse the cord, plug or any parts of the appliance in water or other fluids. Do not use the appliance near explosives, highly flammable materials, gases, or burning flames.

Do not allow children, disabled people, or people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance is used by or near children.

Description fig.A

1. Working light (red)
2. Ready temperature light (green)
3. Adjustable temperature control

4. Removable fat tray
5. Handle
6. Top cooking ribbed plate
7. Bottom cooking ribbed plate
8. Cord Supply
9. 180°opening button
10. Feet

Use instruction

Remove any promotional materials and packaging materials before use. Check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth.



Attention: when used for the first time, light smoke may appear; that is due to only manufacture treatment.

Place the contact grill on a plane, smooth and resisting heat surface. Plug the appliance to the socket, the power light (red light) illuminates. Turn the variable temperature control to "MAX" for fast heat-up, the green "Ready" light illuminates. When preheating the contact grill must be closed. After some minutes the variable temperature control (green light) turns off and the contact grill is up to max. temperature (200°C approx.). Open the cooking plate using the handle. Place the foods to be cooked on the bottom of the lower cooking plate. Liquids such as water, fat, etc. will drop into the removable fat tray. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the food, using the handle. Do not touch the hot parts of the contact grill. Cooking last about 5-8 minutes. In any case, the cooking times will always depend of personal taste, type, and thickness of food. Check the cooking and refer to grilling recipes or guide for cooking times. When complete, lift the cooking plate with a handle and remove food using a plastic spatula (not included). When removing food does not touch the hot parts of the contact grill.

Do not use metallic spatulas or knives because that could damage the cooking plate coating.

The appliance can be used also open, the upper and lower plates line up to create one large cooking surface. Press the 180°opening button placed on the right side and bring back the upper housing until the two parts (upper, and lower) will be aligned.

Average cooking times

Food	Cooking times
Beef – Steak – Sirloin steak – Minute steak – Hamburger patties	4-6 minutes 3 minutes for medium rare 5-6 minutes for well done 1-2 minutes 4-6 minutes
Pork – Loin steak – Fillet – Bacon	2-3 minutes 2-3 minutes 2-3 minutes
Lamb – Loin – Cutlets	3 minutes 4 minutes
Chicken – Breast filet – Leg	6 minutes 4-5 minutes
Sausages – Thin – Thick	3-4 minutes 6-7 minutes
Sandwich or focaccia	3-5 minutes
Vegetables sliced – Eggplant – Zucchini – Potatoes	3-5 minutes 3-5 minutes 3-5 minutes
Seafood – Fish fillets – Fish cutlets – Octopus (cleaned) – Prawns – Scallops	2-4 minutes 3-5 minutes 3 minutes 2 minutes 1 minute

Care and cleaning

Before cleaning, make sure the contact grill must be cool and well plugged to the socket. Clean the plates and external parts with a soft cloth.

Do not use metallic cutting utensils or abrasive detergent that could damage the plates.

Do not immerse the grill contact into water or other liquids.

Do never rinse with water.

Store the grill contact only when completely cool.

Technical data

Power: 1800W

Power supply: 220-240V ~ 50/60Hz

For any improvement reasons, Beer reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed-out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of

the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of the original purchase, a 24-month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of a claim to guarantee.

The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

GUARANTEE CONDITIONS

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on the condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise, it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or have visible signs of use in consumable products (such as lamps, batteries, and heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage, and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport, and any other damage not attributable to the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beer reserves the right to replace only the very part in question and not the entire product. Contact your distributor in your country or after-sales department Beer.

E-mail assistenza@beper.com which will forward your inquiries to your distributor.

BEPER SRL

Via Salieri, 30 – 37050 – Vallese di Oppeano – Verona

Tel. 045/7134674 – Fax 045/6984019


beper.com



CUSTOMER CARE
BEPER



Documents / Resources



[beper P101TOS502 Multi-Function Grill](#) [pdf] User Manual
P101TOS502, Multi-Function Grill, Grill, P101TOS502

References

-  [Home - Beper](#)