



## BERGSTROM K702 Projector Alarm Clock and Weather Station Instruction Manual

[Home](#) » [BERGSTROM](#) » BERGSTROM K702 Projector Alarm Clock and Weather Station Instruction Manual 



Projector Alarm Clock and Weather Station  
K702 v001: 08/04/22

Please read and retain these instructions for future reference



## Contents

- 1 Dimensions
- 2 ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:
- 3 Operation:
- 4 DISPOSAL
- 5 Documents / Resources
  - 5.1 References
- 6 Related Posts

## Dimensions

(H) 11 x (W) 15 x (D) 6.2cm

Length of USB lead: 1m

Batteries required: 2x AAA (not included)

- TIME, CALENDER & ALARM
- TEMPERATURE & HUMIDITY
- TIME PROJECTION
- HUMIDITY TREND
- SNOOZE & BACKLIGHT
- MAX & MIN TEMPERATURE & HUMIDITY RECORDS
- FITS RIGHT IN ON YOUR NIGHTSTAND TO PROJECT TIME AND TEMPERATURE ONTO THE CEILING OR WALL.
- COLOUR SCREEN
- TIME: 12 OR 24HR CLOCK

- POWER: USB OR 2\* AAA BATTERY (NOT INCLUDED)
- USB CORD INCLUDED – USB RECHARGABLE
- PROJECTOR CAN ROTATE 90°

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.


### Power connection:

Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

Battery backup (requires 2 AAA batteries. Not included) can keep the time settings when there is an unexpected blackout.

**Note:** the clock will not stay lit and no adjustment can be made when the unit is only powered by batteries.

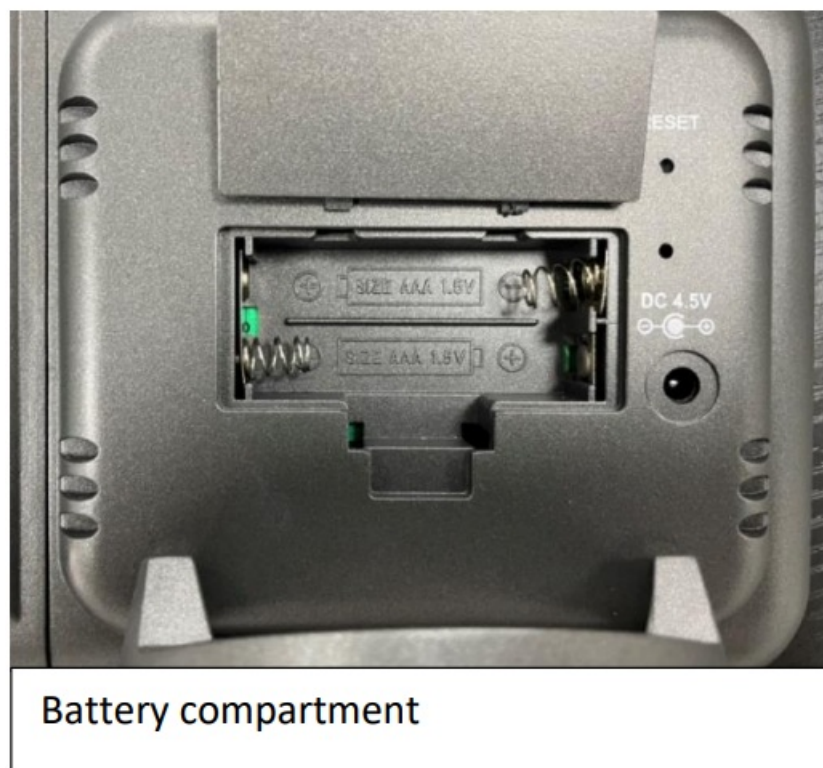

Battery compartment

### Operation:

Press MODE one time to the view calendar.

Press MODE one more time to view the alarm time.

### Setting the time:

Press and hold MODE for 3 seconds to enter the time setting mode.

The hour digits are blinking and can be set by pressing UP or DOWN for setting the hour.

Press MODE again:

The minute digits are blinking and can be set by pressing UP or DOWN for setting the minutes.



### **Setting the calendar**

Press MODE to view the calendar

Press MODE hold for 3 seconds to enter the calendar setting mode.

The year digits are blinking and can be set by pressing UP or DOWN for setting the year.

Press MODE again:

The month digits are blinking and can be set by pressing UP or DOWN for setting the month.

Press MODE again:

The days digits are blinking and can be set by pressing UP or DOWN for setting the day.

### **Setting the alarm**

Press MODE to view the alarm time

Press MODE hold for 3 seconds to enter the alarm setting mode

The hour digits are blinking and can be set by pressing UP or DOWN for setting the hour.

Press MODE again:

The minute digits are blinking and can be set by pressing UP or DOWN for setting the minutes

### **Alarm on/off**

Press UP to turn alarm on/off

### **MAX/MIN**

Press MAX/MIN to view MAX temperature and humidity record. The measuring temperature range is 0-50°C. Below 0°C, it shows "LLL", above 50°C, it shows "HHH". Press MAX/MIN again to view MIN temperature and humidity record. The humidity range is 20%-95%.

### **12/24 Format hour**

In the same mode, Press UP for 3 seconds to switch 12 or 24 format hour time display.

### **Temperature Display Format**

Press DOWN to switch °C/°F display

## **Projector Alarm Clock and Weather Station K702**

Please read and retain these instructions for future reference

### **Instructions for Use**

v001: 28/02/22

### **Temperature & Humidity Trend**

The display below shows the Temperature trend over the past 12 hours

The difference to the current temperature can be seen for the previous 1 hour, 2 hours, 3 hours, 6 hours and 12 hours

### **Display Format**

See below illustration as an example. From right to left side:

0: Current time. Temperature trend is zero.

-1: means 1 hour ago, Reports as "zero" means temperature is the same as current

-2: means 2 hours ago, Temperature was about 2°C 3.6 °F) higher than current.

-3: means 3 hours ago, Temperature was 3°C 5.4 °F) higher than current

-6: means 2 hours ago, Temperature was about 2°C 3.6 °F) higher than current.

-12: means 2 hours ago, Temperature was about 2°C 3.6 °F) higher than current.

The display range of the Temperature trend is +/- 3°C 5.4 °F). For temperature differences over +3°C or 3°C, the display the display will show +3°C or -3°C



### Snooze/Light/Projector

In alarm to press SNZ/LIGHT for snooze mode

Press SNZ/LIGHT to turn on light, and the projector will display the real time on the opposite wall or on the ceiling in dark room.

When clock is powered by USB, the projector is always working.

The projector can rotate by 90°.

The display focus can be adjusted on the dial.



Projector



Dial

### BATTERIES


- ALWAYS USE ALKALINE BATTERIES. DO NOT USE LITHIUM BATTERIES.
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- KEEP BATTERIES AWAY FROM CHILDREN AND PETS.
- DO NOT MIX USED AND NEW BATTERIES.
- NEVER DISPOSE OF BATTERIES IN A FIRE.
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE PROPERLY DISPOSED OF AND RECYCLED IN OMPLIANCE WITH LOCAL REGULATIONS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL AUTHORITY.

- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.



## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.

Code & Symbol	 PETE
Type of Plastic	Polyethylene Terephthalate
Commonly used for	Soft drink and juice bottles, shampoo bottles, meat trays, fruit punnets
Notes	Commonly recycled and collected from household recycling bins. Check with your local authority

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



## The Enterprise

### Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.

Please check with your telephone supplier.

## Documents / Resources



**[BERGSTROM K702 Projector Alarm Clock and Weather Station](#)** [pdf] Instruction Manual  
K702 Projector Alarm Clock and Weather Station, K702, Projector Alarm Clock and Weather Station, Projector Alarm Clock, Alarm Clock, Projector Weather Station, Weather Station

## References

- **C** [Coopers of Stortford | Home, Garden and Lifestyle | UK Delivery](#)
- **C** [Coopers of Stortford | Home, Garden and Lifestyle | UK Delivery](#)