



BERTAZZONI MAS486IGFEPXT 48 Inch Induction Range Installation Guide

[Home](#) » [Bertazzoni](#) » BERTAZZONI MAS486IGFEPXT 48 Inch Induction Range Installation Guide 




MAS486IGFEPXT 48 Inch Induction Range Installation Guide

Contents


- [1 MAS486IGFEPXT 48 Inch Induction Range](#)
- [2 INSTALLATION](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

MAS486IGFEPXT 48 Inch Induction Range

SIDE VIEW

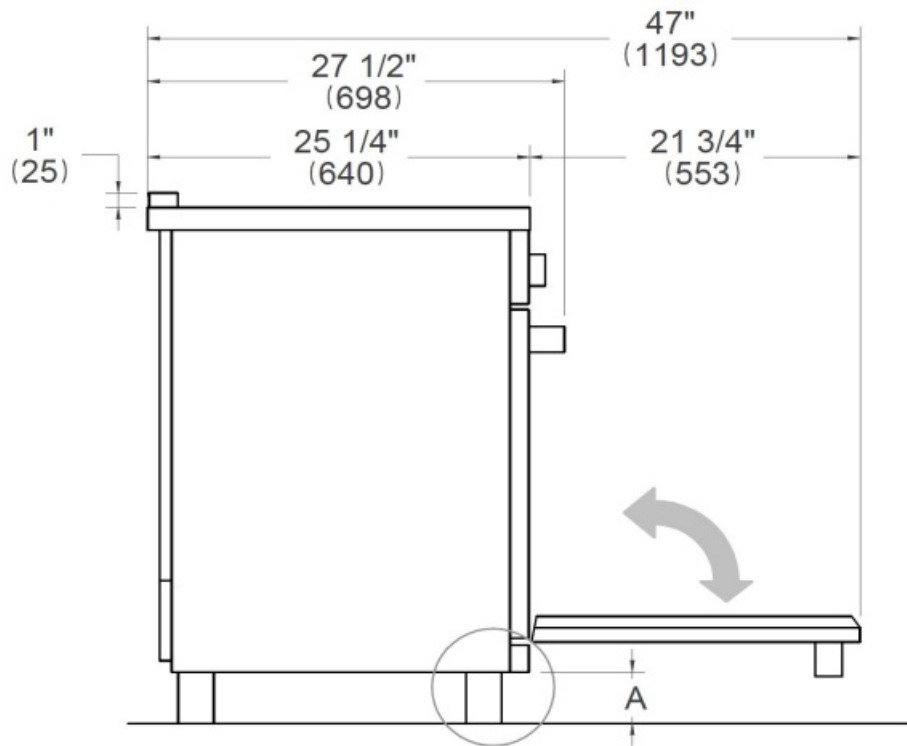


FRONT VIEW

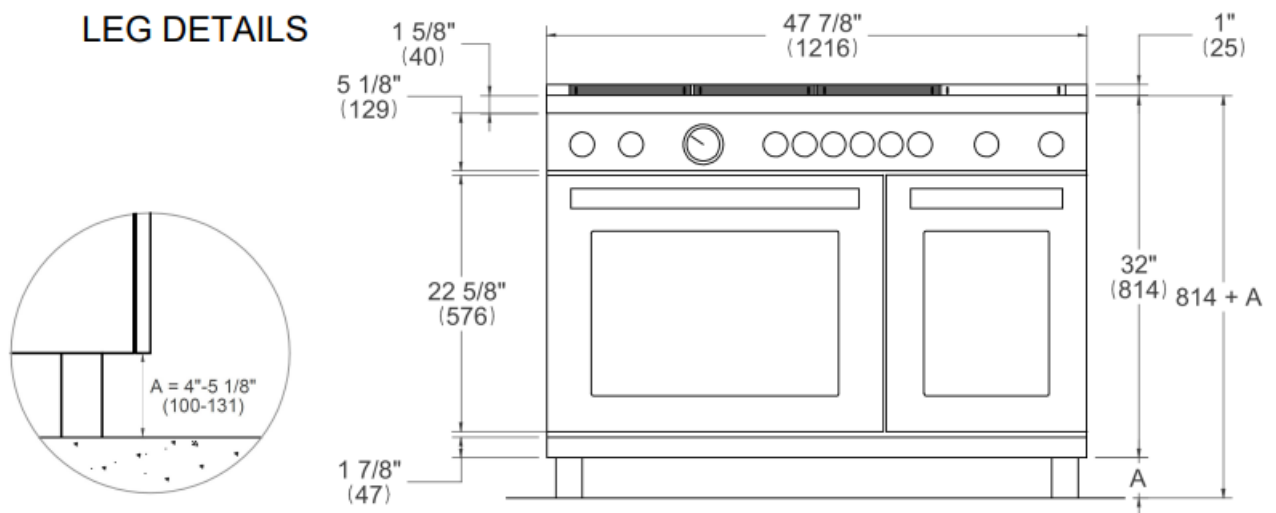


LEG DETAILS

WORKTOP DETAILS

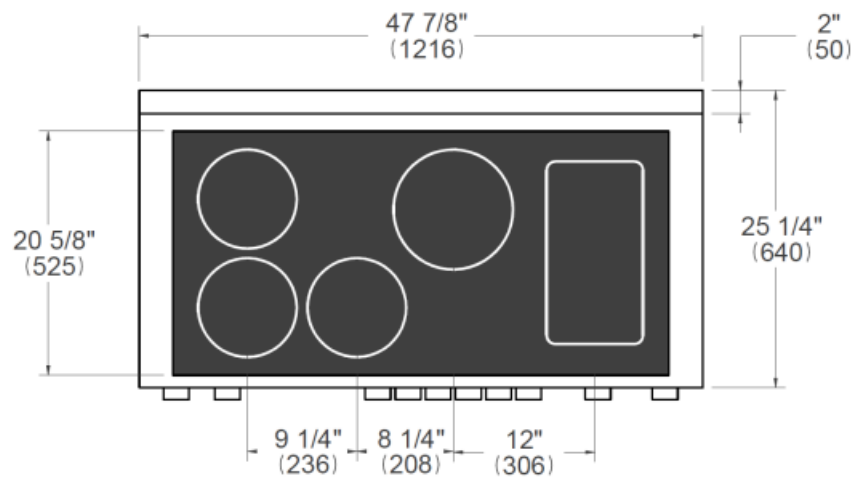


REAR VIEW

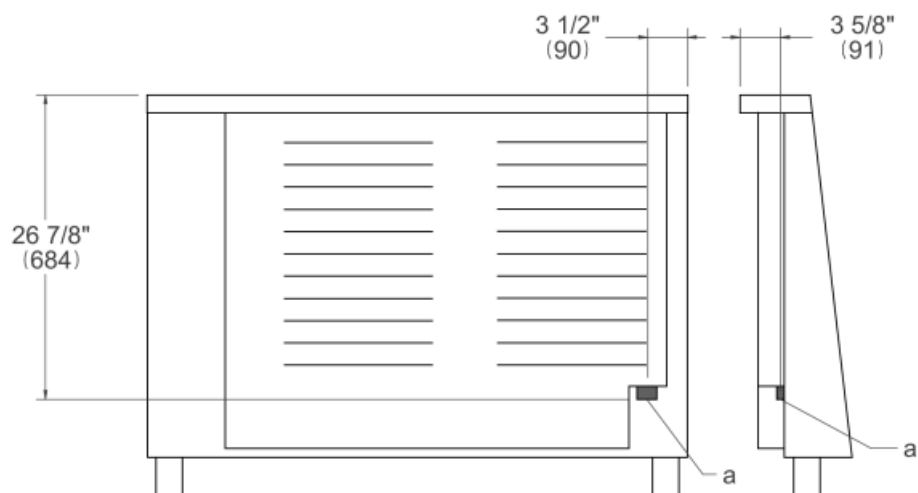


INSTALLATION

A properly-grounded horizontally mounted electrical receptacle should be installed no higher than 3" (7.6 cm) above the floor, no less than 2" (5 cm) and no more than 8" (20,3 cm) from the left side (facing product). Check all local code requirements.

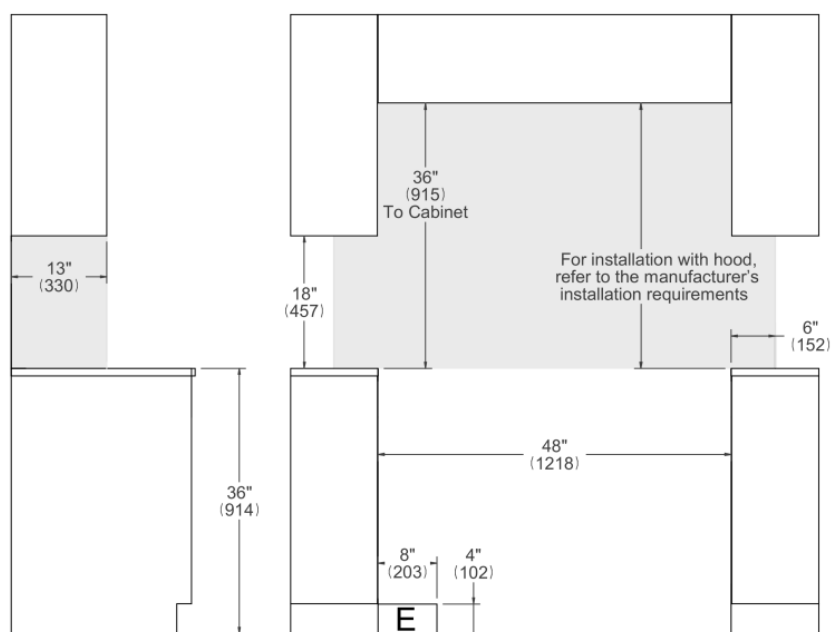

NOTE

- a. Electrical Connection
- b. Gas Connection

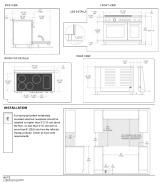

[BERTAZZONI MAS486IGFEPXT 48 Inch Induction Range](#) [pdf] Installation Guide
MAS486IGFEPXT, MAS486IGFEPXT 48 Inch Induction Range, 48 Inch Induction Range,
Induction Range, Range