



BEST LEARNING 1011VB Touch and Learn Tablet User Guide

[Home](#) » [BEST LEARNING](#) » BEST LEARNING 1011VB Touch and Learn Tablet User Guide 

BEST LEARNING 1011VB Touch and Learn Tablet



Contents


- 1 INTRODUCTION
- 2 INCLUDED IN THIS PACKAGE
- 3 GETTING STARTED
 - 3.1 Battery Installation
 - 3.2 Start Playing
 - 3.3 SLEEP MODE
- 4 HOW TO PLAY
 - 4.1 Choose a learning level by the 2-stage Switch.
 - 4.2 Select any of the modes to play
 - 4.3 Enjoy the game!
- 5 FOUR MODES TO PLAY
- 6 CARE AND MAINTENANCE
- 7 BATTERY SAFETY
- 8 TROUBLESHOOTING
- 9 Documents / Resources
- 10 Related Posts

INTRODUCTION

The perfect and first learning tablet for babies and toddlers! Every touch will be full of surprises, making learning a rich experience with auditory and visual interaction! With Touch & Learn Tablet, little ones will learn about the

letters A to Z with their pronunciations, the spellings, singing along with the ABCs song, and challenging the exciting quiz and memory games.

With two stages of learning levels to grow along with children! **(2+ years)**

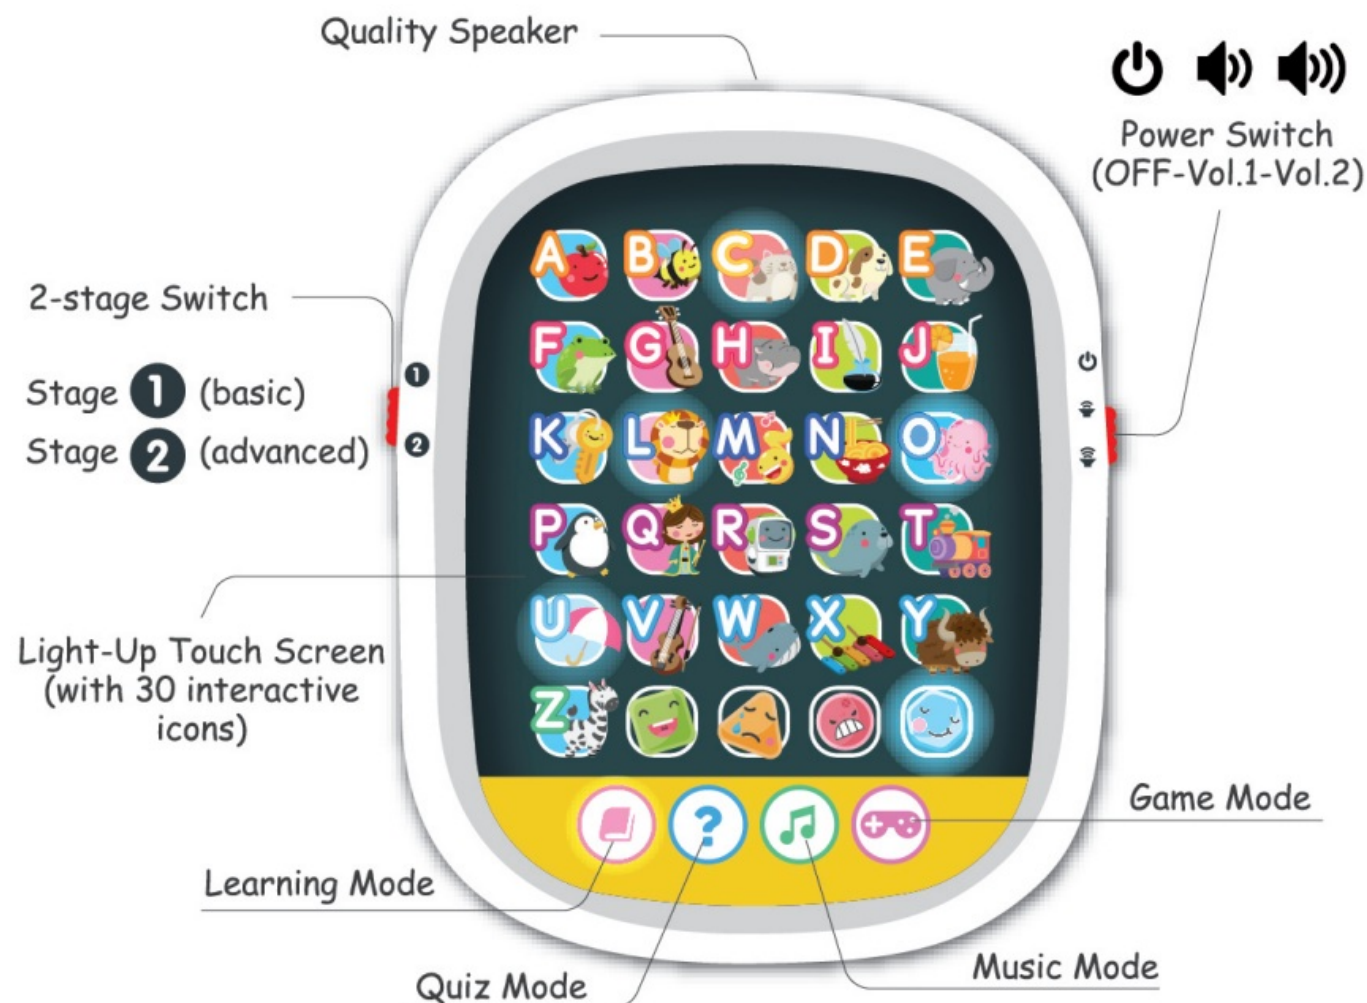

INCLUDED IN THIS PACKAGE

- 1 Touch & Learn Tablet

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

GETTING STARTED

Take the Touch & Learn Tablet out of the storage slot.





Battery Installation

The Touch & Learn Tablet operates on 3 AAA (LR03) batteries.

1. Locate the battery cover on the back of the unit & open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.



Start Playing

1. Once batteries are installed, switch on the system from  to  or  to start the game.
2. To turn OFF the system, just switch back to .

SLEEP MODE

1. If the Touch & Learn Tablet is not active for more than 2 minutes, it will automatically go into sleep mode to save power.
2. To wake up the system, either reset by the Power Switch or the 2-stage Switch.

HOW TO PLAY

Choose a learning level by the 2-stage Switch.

Once turned on the power, choose any learning levels by the 2-stage Switch.

- Stage 1 is for basic challenges.
- Stage 2 is for advanced challenges.



Select any of the modes to play

There are 4 modes on the bottom of the Light-Up Touch Screen. Select then press any of the modes to play!



Learning Mode



Quiz Mode



Music Mode



Game Mode

Enjoy the game!

Follow the instruction to play! You can exchange the learning levels by the 2-stage Switch at any time.



FOUR MODES TO PLAY

Choose any one of the modes to play. Change the learning level for basic or advanced by 2-level Switch at any time!



Learning Mode

Follow the instruction, then press an icon to hear what it is.

- Stage 1 In basic learning, it teaches the letters A to Z with their pronunciations, and words with playful sounds.

Plus 4 basic shapes (square, triangle, circle, and hexagon).

- Stage 2 In advanced learning, follow the lights to learn how to spell the words step by step.

Plus 4 core emotions (happy, sad, angry, and proud).



Quiz Mode

Challenge yourself with a series of questions related to the learning mode.

1. Follow the question, then press any icon to answer.
 2. It will tell you the answer is correct or not by the voices and melodies.
 3. After three wrong tries, it will show you the correct answer by lighting up the icon(s).
- Stage 1 In basic quiz, it will ask you to find a particular letter, word, or shape.
 - Stage 2 In advanced quiz, it will ask you to spell a particular word or find the specific emotion icon.



Music Mode

Follow the music, sing the ABCs song!

1. Press any icon to make a sound effect while the ABCs song is playing.
 2. Once the song is over, you can press any letter icon to replay that part of the song. Or just press the music mode button again to replay the whole song.
- Stage 1 In this stage, it will play the ABCs song with a vocal-on.
 - Stage 2 In this stage, it will play the ABCs song with a vocal-off.



Game Mode

How many lights can you remember? Give it a try!

1. Includes basic & advanced challenging levels.
 2. In each round, you have three chances to try.
 3. Once you lose a round, it will go back to the last level.
 4. If you win three rounds in a row, it will go to the next level.
 5. A total of 5 levels:
 - level 1 for two icons; level 2 for three icons; level 3 for four icons;
 - level 4 for five icons; level 5 for six icons.
- Stage 1 In basic level, remember the positions of the releasing icons, then find them by pressing the correct icons.
 - Stage 2 In advanced level, remember the positions of the releasing icons, then press the icons in the correct sequences.

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY


- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul style="list-style-type: none">• Make sure batteries are correctly installed.• Make sure battery cover is secured.• Remove batteries and put them back in.• Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.• Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul style="list-style-type: none">• Clean battery contacts per above instructions.• Install new batteries.



Documents / Resources

	<p>BEST LEARNING 1011VB Touch and Learn Tablet [pdf] User Guide</p> <p>1011VB, Touch and Learn Tablet, 1011VB Touch and Learn Tablet, Learn Tablet, Tablet</p>
---	--