



BEST LEARNING 8123 INNO PAD Instruction Manual

Home » BEST LEARNING » BEST LEARNING 8123 INNO PAD Instruction Manual

Contents

- 1 BEST LEARNING 8123 INNO PAD
- **2 INTRODUCTION**
- **3 GETTING STARTED**
- **4 HOW TO PLAY**
- **5 FUNCTIONAL BUTTONS OF**

CARDS

- **6 FEATURES**
- **7 CARE AND MAINTENANCE**
- **8 BATTERY SAFETY**
- 9 TROUBLESHOOTING
- 10 FREQUENTLY ASKED

QUESTIONS

- 11 VIDEO PRODUCT OVERVIEW
- 12 References
- 13 Related Posts



BEST LEARNING 8123 INNO PAD



INTRODUCTION

The interactive INNO PAD: Smart Fun Lessons concepts that entertain and teach various lessons; make learning a rich experience. This exclusive value pack, it comes with 16 interactive pages of fun lessons, and many activities, gives your child a head start in school! (2+ years)



INCLUDED IN THIS PACKAGE

- 1 INNO PAD
- 8 Plastic learning cards (double-sided, 16 activities)

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

GETTING STARTED


Take the INNO PAD out of the storage slot.

Battery Installation

The INNO PAD operates on 3 AAA (LR03) batteries.

- 1. Locate the battery cover on the back of the unit and open it with a screwdriver.
- 2. Insert 3 AAA (LR03) batteries as illustrated.

3. Close the battery cover and screw it back.

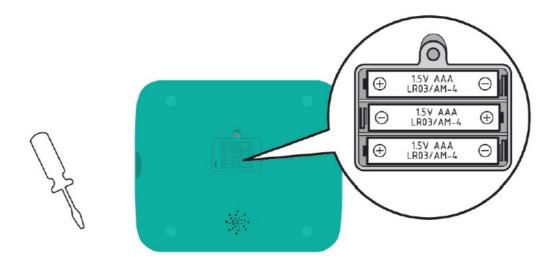

Start Playing

Once batteries are installed, press the power button Then start to play! Oto turn on the power.

SLEEP MODE

- 1. If the INNO PAD is not active for more than 2 minutes, it will automatically go into sleep mode to save power.
- 2. Press the power button again to restart the game.

HOW TO PLAY

1. Select and insert a learning card into the slot.



2. Press the start button on the bottom of each card to start a lesson.



3. Choose any one of the modes then press a picture or word to play and learn.







Basic Quiz





FUNCTIONAL BUTTONS OF CARDS

Power ON / OFF

To turn your INNO PAD ON or OFF, press this button once. The system will turn OFF automatically after 2 minutes of idle.



Start Button

Press this button after inserting a learning card to select a lesson. When you switch sides or cards, press it again.

Learn Mode

In this mode, select and press a picture or word to hear what it is. Press it again to learn more!

Basic Quiz Mode

Challenge yourself with a series of questions. When a question is asked, select a picture or word to answer.

Advanced Quiz Mode

Advanced quiz! Challenge yourself with a series of advanced questions. When a question is asked, select a picture or word to answer.

Music Mode

In some cards, press this button once to play or stop a song. In this mode, you can press a picture or word to hear the lively sound of the card.



In lesson 16, press the to start to record by pressing the colorful keyboard to create your very own 20-second music! After recording the music, just press the and enjoy your music!



Change the volume of the INNO PAD to your desire.

FEATURES

- · Anti-tearing Cards
- · Quality Speaker
- Not easy to slip out!



16 Fun Lessons

- 1. Alphabet A-M
- 2. Alphabet N-Z
- 3. Numbers 1-10
- 4. What Time Is It
- 5. Colorful Fruits

- 6. Shapes Around Us
- 7. How Is The Weather
- 8. How Are You Feeling
- 9. Super Trucks
- 10. Rescue Team
- 11. On The Farm
- 12. On The Street
- 13. Animals In The Savanna
- 14. Animals In The Savanna
- 15. Profession's Headwear
- 16. Music Party

CARE AND MAINTENANCE

- · Keep products away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- · Never submerge the product in water.
- · Remove batteries during prolonged storage.
- Avoid exposing the product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children and must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- · Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in a fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom: Possible Solution

Toy does not turn ON or does not respond.

Make sure batteries are correctly installed.

- · Make sure the battery cover is secured.
- · Remove the batteries and put them back in.
- Clean the battery compartment by rubbing it lightly with a soft eraser and then wiping it with a clean dry cloth.
- Install new batteries.

Toy makes strange sounds, behaves erratically, or makes improper responses.

- Clean battery contacts per the above instructions.
- · Install new batteries.

CONFORMS TO CE EN71 UKCA ASTM F963

Item No. 8123



FREQUENTLY ASKED QUESTIONS

What is the Best Learning 8123 INNO PAD?

The Best Learning 8123 INNO PAD is an interactive learning tablet designed for young children. It features various educational modes, including learn, quiz, and music modes, aimed at engaging kids and supporting their early learning development.

What are the dimensions of the Best Learning 8123 INNO PAD?

The Best Learning 8123 INNO PAD measures 7.44 x 0.83 x 8.86 inches, making it a compact and child-friendly size for small hands.

How much does the Best Learning 8123 INNO PAD weigh?

The INNO PAD weighs approximately 13.4 ounces, which is light enough for young children to handle comfortably.

What is the recommended age range for the Best Learning 8123 INNO PAD?

The Best Learning 8123 INNO PAD is recommended for children aged 24 months to 5 years. It is

designed to be age-appropriate and engaging for toddlers and preschoolers.

How does the Best Learning 8123 INNO PAD help with a child's learning?

The INNO PAD features multiple educational modes such as learn, quiz, and music modes. These modes help children learn numbers, letters, and basic concepts while engaging them in interactive quizzes and fun music activities.

What type of batteries does the Best Learning 8123 INNO PAD require?

The Best Learning 8123 INNO PAD requires 3 AA batteries to operate. Ensure you have fresh batteries on hand to keep the toy functioning properly.

What materials is the Best Learning 8123 INNO PAD made from?

The INNO PAD is made from durable, child-safe plastic materials designed to withstand regular use by young children.

The INNO PAD is made from durable, child-safe plastic materials designed to withstand regular use by young children.

The INNO PAD includes learn, quiz, and music modes. Each mode provides a different type of interactive learning experience, helping children with various aspects of early education.

How long does the battery life last in the Best Learning 8123 INNO PAD?

Battery life can vary based on usage. It's advisable to use high-quality batteries and turn off the toy when not in use to extend battery life.

What should I do if the Best Learning 8123 INNO PAD stops working?

If the INNO PAD stops working, first check if the batteries need replacement. Ensure the batteries are installed correctly and check for any loose connections.

Why is the screen of my BEST LEARNING 8123 INNO PAD not responding to touch?

The screen may not respond if there is dirt or oil on the surface. Try cleaning the screen with a soft, dry cloth. If the problem persists, restart the device by turning it off and on.

What should I do if my BEST LEARNING 8123 INNO PAD does not power on?

Ensure that the batteries are properly installed and have sufficient charge. If the INNO PAD still doesn't power on, try replacing the batteries with fresh ones.

Why is the sound on my BEST LEARNING 8123 INNO PAD distorted or too low?

Check the volume settings and make sure they are not set too low. If the sound is still distorted, the batteries might be low; replacing them could resolve the issue.

 
How do I fix the issue of my BEST LEARNING 8123 INNO PAD freezing during use?

If the INNO PAD freezes, perform a soft reset by removing and reinserting the batteries. If the issue continues, check for any software updates or reset the device to factory settings.

How can I resolve connectivity issues with my BEST LEARNING 8123 INNO PAD when trying to download updates?

Make sure that the device is within range of a stable Wi-Fi connection. If you continue to experience connectivity issues, try restarting your router and the INNO PAD.

VIDEO – PRODUCT OVERVIEW



DOWNIO AD ATHE IPS To plot the plot of the property of the pro

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.