



# BEST LEARNING i-Poster My World Interactive Map User Manual

[Home](#) » [BEST LEARNING](#) » BEST LEARNING i-Poster My World Interactive Map User Manual 

## Contents

- [1 BEST LEARNING i-Poster My World Interactive Map](#)
- [2 INTRODUCTION](#)
- [3 INCLUDED IN THIS PACKAGE](#)
- [4 GETTING STARTED](#)
- [5 Battery Installation](#)
- [6 MUSIC & LEARNING FUN!](#)
- [7 CARE AND MAINTENANCE](#)
- [8 BATTERY SAFETY](#)
- [9 TROUBLESHOOTING](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)



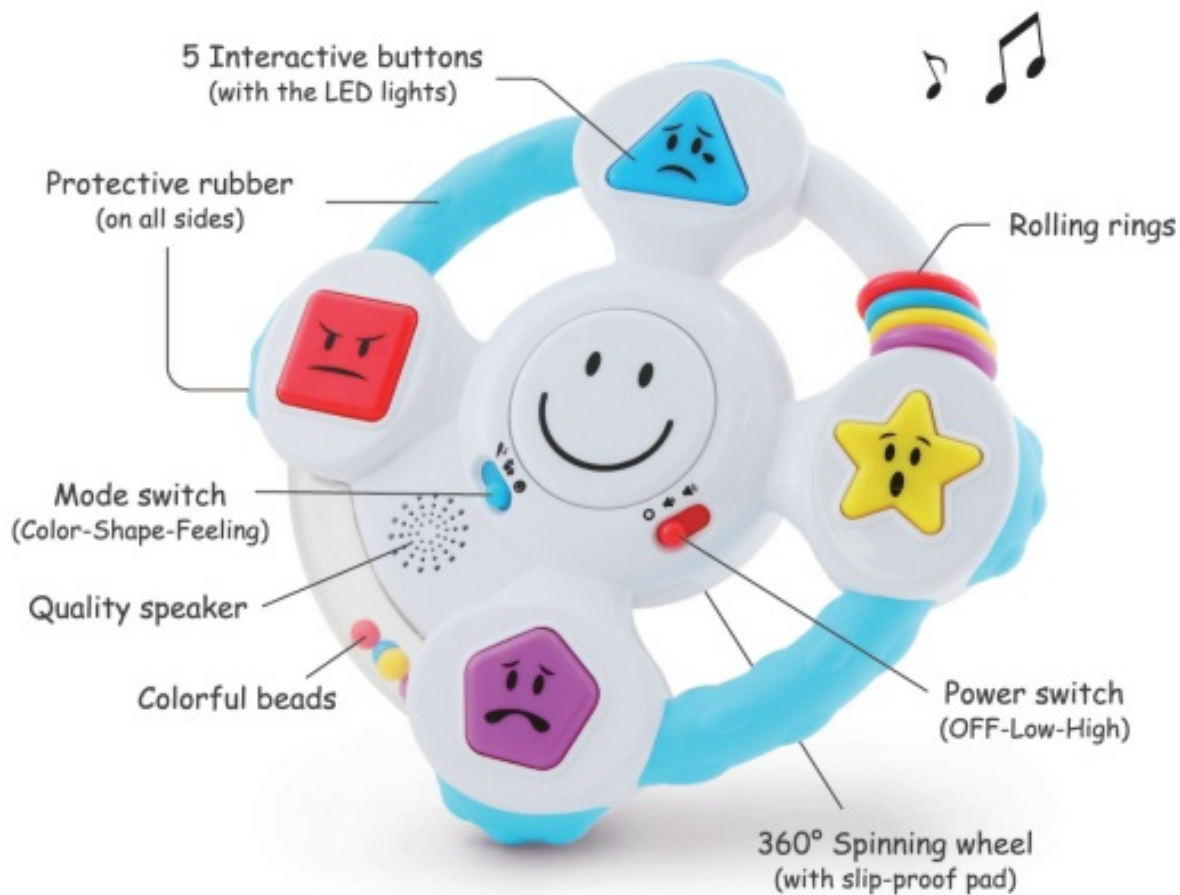 
**BEST LEARNING i-Poster My World Interactive Map**



## INTRODUCTION



Let's spin and learn! An interactive and educational toy intended for babies, infants, toddlers and early learners. Stimulate their hand-eye coordination and dexterity with a simple touch or spin to learn colors, shapes, emotions all together with 15 songs! Plus rolling rings and beads to make little ones busy all the time! (6+ months)



## INCLUDED IN THIS PACKAGE

1 My Spin & Learn Steering Wheel

### ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

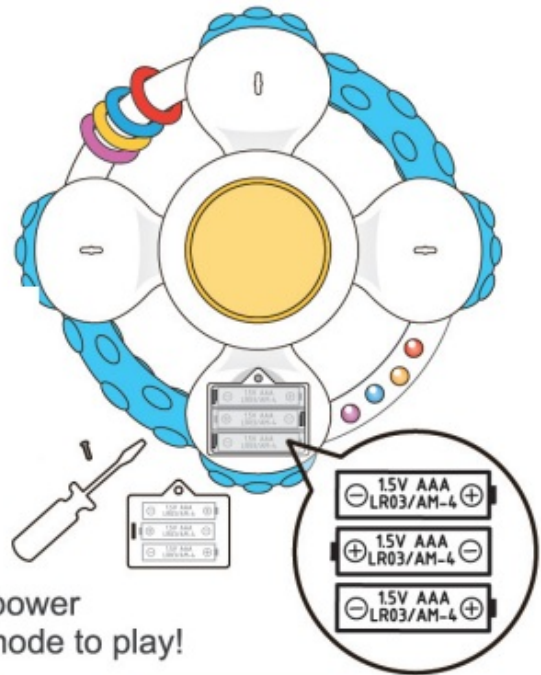 
## GETTING STARTED

Take the steering wheel out of the storage slot.



 
### Battery Installation

The steering wheel operates on 3 AAA LR03) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.



## Start Playing

Once batteries are installed, switch on the power from  to  or . Then select a mode to play!



## SLEEP MODE

1. If the steering wheel is not active for more than 1 minute, it will automatically go into sleep mode to save power.
2. Press any button or spin the wheel to wake it up.
3. We recommend switching the unit OFF ( 0 ) when done playing with it.

## MUSIC & LEARNING FUN!

### Color Mode

Press any of the buttons to learn about the color red, blue, yellow, purple, and white along with the blinking lights! Press the same button again to play its own color song!



### Shape Mode

Press any of the buttons to learn about the shape square, triangle, star, pentagon, and circle along with the blinking lights! Press the same button again to play its own shape song!



## Emotion Mode

Press any of the buttons to learn about the emotion anger sadness, surprise, fear, and joy along with the blinking lights! Press the same button again to play its own emotion song!



anger



sadness



surprise



fear



joy

## HINTS

### Play the song with vocal off

No problem, in each mode, if there is no button lighting, you can spin the wheel to play the song with vocal off.



when no button lighting



spinning the wheel



enjoy the  
instrumental track

### Add sounds to the song

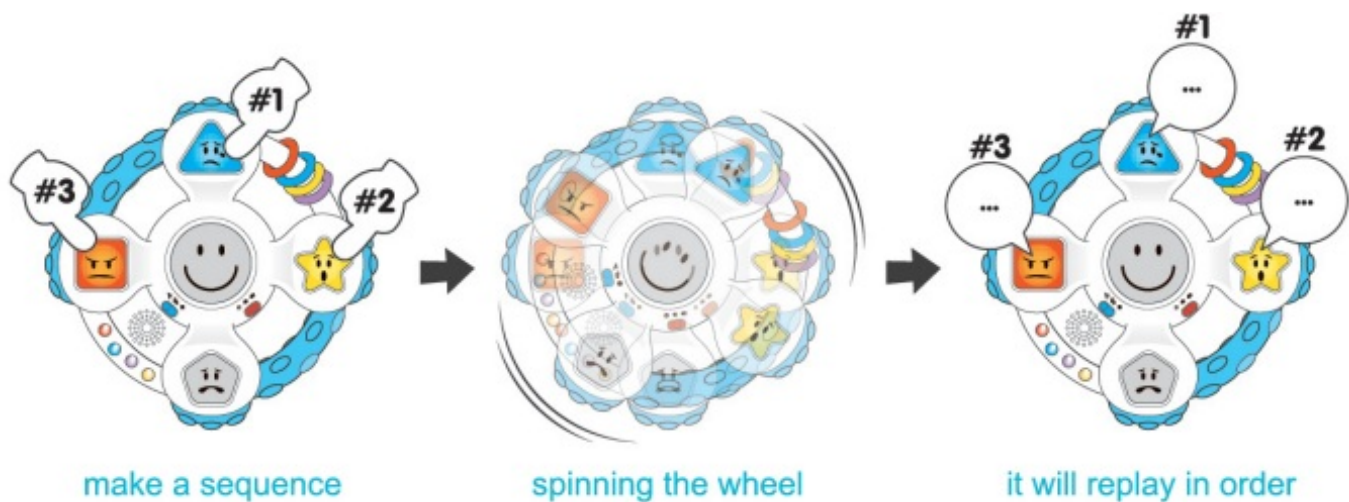 
You can press any of the buttons to add sounds while the song is playing. Let's make the music more fun!



### Spin to sequence

In each mode, just keep the button(s) lighting up then spin the wheel, it will memorize and replay in order.





### Keep them busy

Plus rolling rings and colorful beads to keep little ones busy all the time!



rolling rings



colorful beads

## CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth ( cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

## BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity ( +/ -) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.

- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

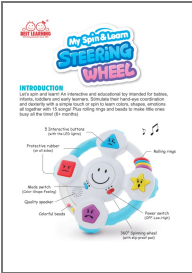 
**TROUBLESHOOTING**

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul style="list-style-type: none"> <li>• Make sure batteries are correctly installed.</li> <li>• Make sure battery cover is secured.</li> <li>• Remove batteries and put them back in.</li> <li>• Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.</li> <li>• Install new batteries.</li> </ul>
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul style="list-style-type: none"> <li>• Clean battery contacts per above instructions.</li> <li>• Install new batteries.</li> </ul>

Item No. 1321



**Documents / Resources**

	<p><a href="#">BEST LEARNING i-Poster My World Interactive Map</a> [pdf] User Manual</p> <p>i-Poster My World Interactive Map, i-Poster, My World Interactive Map, Interactive Map, Map</p>
---	---