



BestFire S03 Switch Wireless Pro Controller Gamepad Instruction Manual

[Home](#) » [BestFire](#) » BestFire S03 Switch Wireless Pro Controller Gamepad Instruction Manual 

Contents

- [1 BestFire S03 Switch Wireless Pro Controller Gamepad](#)
- [2 Handle schematic](#)
- [3 Function Description](#)
- [4 Product Instructions](#)
- [5 Charge/Hibernate/Wakeup function](#)
- [6 Macro settings](#)
- [7 Operational usage](#)
- [8 Precautions](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

BestFire

BestFire S03 Switch Wireless Pro Controller Gamepad



Handle schematic



Function Description

1. This product adopts an ergonomic design and feels comfortable.
2. Using Bluetooth 5.0 EDR/BLE connection, the handle is connected with N-S and other hosts through Bluetooth.

3. This controller is suitable for use on SWITCH, PS3/PS4, Android, iOS MFi/Apple Arcade, PC, Steam and other platforms.
4. Support Shooting Plus V3 APP, APP can be downloaded through various mobile application markets.
5. Support Android and Hongmeng HID standard mode, you can play various arcade games that support HID standard mode.
6. Support iOS 13.0 and above system MFi/Apple Arcade games, MFi games can also be downloaded from the ShanWan MFi app.
7. Support PS3/PS4/SWITCH game console Bluetooth connection to play games, with gyroscope function.
8. Support GamepadSpace APP to set more additional functions for PS3/PS4/SWITCH mode.
9. Support Windows 10 system laptop Bluetooth connection to play X-Input games.
10. Support USB cable, you can play PC/PS3/SWITCH games Due to mobile phone system problems, some mobile phones may no support this device Some games are caused by irresistible factors such as official game platform software upgrades or source code changes Our company is not responsible for the failure to connect with this product. Our company reserves the right of final interpretation

Parameter

1. **Working voltage:** DC3.7V
2. **Working current:** <35mA
3. **Continuous use time:** >10H
4. **Sleep current:** <5uA
5. **Charging voltage/current:** DC5V/500mA
6. **Bluetooth transmission distance:** <=8M
7. **Standby time:** 30 days when fully charged

Product Instructions

SWITCH mode:

On the SWITCH host, select Controllers->Change Grip/order Enter into the SWITCH host pairing mode interface Press L+R on the controller.

Press [ZR key + HOME key] at the same time for 2 seconds to enter the SWITCH mode pairing, the green LED light flashes quickly, and the pairing is successful, the green light No. 1 is on for a long time. It has been successfully connected, you can directly press the HOME button, the green will flash slowly, and the connection will be automatically reconnected.



PS3/PS4/PS5


Connect the handle directly to the PS3/PS4/PS5 host with a TYPE-C USB data cable, and press HOME for pairing. After successful pairing, the 13 indicator light is always on. It has been successfully connected, you can directly press the HOME button, the green flashes slowly, and the connection will be automatically reconnected.



Note:


1. There is no touchpad function under the PS4 and PS5 consoles;
2. Only PS4 games can be played on the PS5 console.

[Android ShootingPlus V3 mode Hongmeng system is the same as Android ShootingPlus V3 mode]

Press the  + HOME button at the same time for 2 seconds to enter the V3 Android mode, the handle 1 indicator light, when the Android phone searches for the “S03” device name, choose to connect. After the connection is successful, the handle indicator light will be on. It has been successfully connected, you can directly press the HOME button, the indicator light will flash slowly, and it will automatically reconnect.



iOS ShootingPlus V3

Press the  + HOME key simultaneously for 2 seconds to enter the V3 iOS mode, the handle indicator light 2 will flash quickly, when the Apple phone searches for the S03 device name, choose to connect. After the connection is successful, the handle indicator 2 will be on for a long time. It has been successfully connected, you

can directly press HOME, the indicator light will flash slowly, and it will automatically reconnect.




Android/Hongmeng/iOS key mapping function:

Follow the official account “ShootingPlus” and check the default operation instructions in the official account. If you need to set the mapping key position, please download and install the “ShootingPlus V3” APP, and perform key mapping and adjustment of the key position in the APP. Shooting Plus V3 App, iOS system can be downloaded from APP Store, Android and Hongmeng system can be downloaded from various mobile application markets.




ShootingPlusV3

Android:

1. Press the  + HOME key at the same time to enter the standard Android mode, the controller indicator light 3 flashes quickly, when the Android/Hongmeng mobile phone searches for the “S03” device name, select connect. After the connection is successful, the handle will light up in green. It has been successfully connected, you can directly press the HOME button, the green light will flash slowly, and the connection will be automatically returned.
2. Android/Hongmeng standard mode game download, you can download various game halls, enter the platform to download the required games.
3. For more additional functions of SWITCH/PS3/PS4, use the GamepadSpace APP to set in this mode.



iOS MFi / Apple Arcade (NO iOS 13.0)

Press the  + HOME button at the same time for 2 seconds to enter the iOS MFi mode, the handle indicator light 4 flashes quickly, when the iPhone searches for the device name of “DUALSHOCK 4 Wireless Controller”, select the connection. After the connection is successful, the LED4 light will be on for a long time It has been successfully connected, you can directly press the HOME button, the green light will flash slowly, and the connection will be automatically returned. MFi games can also be downloaded from the ShanWan MFi app.



PC 2.4G:

Press the Lkey + HOME key simultaneously for 2 seconds to enter the computer mode, the handle indicator light 12 flashes quickly, the PC connection mode The computer receiver is plugged into the computer. After the connection is successful, the indicator lights 1 and 2 of the handle are always on. It has been successfully connected, you can directly press HOME and the green light will flash slowly to automatically reconnect.



USB data line mode:

Automatically identify each system platform in online mode, the supported system platforms are Android, PC (D-input and X-input), PS3 and SWITCH.

1. On the PC, press the HOME button for 2 seconds to switch between PC/PS3 mode and XBOX360 mode.
2. After the connection in wired mode is successful, the green LED indicator will light up.

Bluetooth mode:

At the same time, press the R HOME button for 2 seconds to enter the Bluetooth mode of the computer, and the gamepad light flashes quickly. Open the computer to find the added Bluetooth device, click search, find the Xbox Wireless Cotroller, and click the link. The connection is successful. Has been successfully linked, you can directly press HOME to automatically connect back.

Charge/Hibernate/Wakeup function

1. Handle charging function:

- **A.** When the power is low, the corresponding green indicator 4 lights flash quickly;
- **B.** When charging, the corresponding green indicator light 4 lights flash slowly;
- **C.** When fully charged, the corresponding green indicator light 4 lights up for a long time;

2. Handle sleep/wake up/shutdown function:

- **A.** The handle automatically shuts down and sleeps when there is no key operation within 5 minutes;
- **B.** When you need to use it again, you need to press the HOME button to wake up the handle to connect back;

Macro settings

背部宏扩展设置



1. Press the edit key M1 on the gamepad to enter the edit mode. At this time, the HOME light will flash. To set M2, press the edit key M2



2. Press the edit button on the handle to edit today
There will be a flash under the HOME button

If you want to set the M1 key, press M1

For example: Press A, press B, press x, press Y, and the order of attack is abxy.

[This button is set as an example: the order of other moves can be set up to 12]

[M2 sets the same method as above]



3. After the entry, press M1 to finish the programming

Macro programming cleanup

Press M1 on the gamepad to enter the programming mode. At this time, the Home button will flash. Do not type any key value at this time, press M1 again to eliminate the key value set before M1

Light vibration adjustment







1. The button on the picture is to adjust the LED light
[When the device is connected]
Can control colorful light bar:
Respectively: Dazzling lantern effect
Stop flashing colors
Turn off the lights



1. The MOT button on the picture is to adjust the vibration
Click the motor vibration [100%]
Press again Vibration [75%]
Press again Vibration [50%]
Press again Vibration [Stop]

Operational usage

Bluetooth Mode:

Applicable system	Android		iOS	
Model	ShootingPlus V3	Android	IOSMFi	ShootingPlus V3
Press and hold for 2 seconds	 +HOME键	 +HOME键	 +HOME键	 +HOME键
LED	red	orange	purple	White
To use	android download games	Games in the HID arcade	Play MFi game ShanWan MFiApp can download	Playing games downloaded from the App Store iOS13.4 and above is a single touch

Computer receiver and USB cable:


Operating mode	PC	PS3 / PS4 / PS5	Switch
Press and hold for 2 seconds	L+HOME	USB	ZR+HOME and USB
LED	green	blue	green
To use	X-input	Ps3 / PS4	Switch

[The computer needs to be equipped with a computer receiver]

Precautions

1. Please do not store this product in a humid or high-temperature place.
2. Do not knock, beat, stick, pierce, or try to disassemble the product, so as not to cause unnecessary damage to the product.
3. The product has a built-in battery, please do not throw it away with the garbage.
4. Do not charge the handle near fire or other heat sources.
5. Non-professionals should not disassemble this product, otherwise, it will not be covered by the after-sale warranty.

Documents / Resources

	BestFire S03 Switch Wireless Pro Controller Gamepad [pdf] Instruction Manual S03 Switch Wireless Pro Controller Gamepad, S03, Switch Wireless Pro Controller Gamepad, Wireless Pro Controller Gamepad, Pro Controller Gamepad, Controller Gamepad
---	--