



bESTRON APC1007P Popcorn Maker Machine Instruction Manual

[Home](#) » [bESTRON](#) » **bESTRON APC1007P Popcorn Maker Machine Instruction Manual** 



**1200 Watts
220 Volts
50 60 Hz**



APC1007P INSTRUCTION MANUAL

Contents

- 1 APC1007P Popcorn Maker Machine
- 2 SAFETY INSTRUCTIONS
- 3 ENVIRONMENT
- 4 OPERATION
- 5 Making popcorn
- 6 CLEANING AND MAINTENANCE
- 7 SERVICE
- 8 Documents / Resources
- 8.1 References

APC1007P Popcorn Maker Machine



SAFETY INSTRUCTIONS

- In the unlikely event that the device should become defective, never try to carry out the repair yourself. Always have repairs carried out by a qualified technician.
- This appliance should not be used by children and persons with reduced physical, sensory or mental capacity or lack of experience or knowledge.

- Cleaning and maintenance should not be done by children.
- Keep the device and cable out of reach of children.
- Children must be supervised to ensure that they do not play with the appliance.
- Always place electrical appliances on a stable and flat, heatresistant surface, in a place where it cannot fall.
- Certain parts of an electrical appliance can become warm or even hot. To avoid burns, do not touch these parts of the device.
- Do not allow electrical devices, cables or plugs to come into contact with water, other liquids or other heat sources.
- The appliance must not be operated by means of an external timer switch, or by a separate system with remote control.
- Provide sufficient free space around the device.

ENVIRONMENT



Dispose of packaging materials such as plastic and boxes in the appropriate containers.

- Do not hand this product in as normal household waste at the end of its life cycle, but hand it in at a collection point for reuse of electrical and electronic equipment. Look for the symbol on the product, instructions for use or packaging.
- The materials can be reused as indicated. By helping with reuse, recycling of materials or other forms of use of old equipment, you are making an important contribution to protecting the environment
- Ask the municipality for the correct collection point in your area.

OPERATION

The appliance is intended only for domestic use, not for professional use.

The following description is associated with the image on page 2:

1. Measuring cup
2. Lid
3. Popping chamber
 1. Take the appliance out of the packaging.
 2. Clean the appliance thoroughly to remove any manufacturing residues (see “Cleaning and maintenance”).
4. Motor unit
5. On/Off switch with indicator light

Making popcorn

ATTENTION:

- Always use popcorn maize to prepare popcorn.
- Do not add other ingredients, such as butter or oil, to the popping chamber.
- Do not leave the appliance switched on for more than necessary. If you do so the appliance may overheat and activate the overheating safeguard. Allow the popcorn maker to cool down for 15 minutes before you use the

appliance again.

1. Fill the measuring cup (max 50 gr) with popcorn maize, and sprinkle the popcorn maize into the popping chamber. Do not add more than one measuring scoop of popcorn maize. Do not add any other ingredients to the popping chamber.
2. Fit the lid to the popping chamber, and fit the measuring scoop to the lid. If you so wish, you can put a pat of butter in the measuring scoop to melt it.
3. Put a bowl under the opening in the lid.
4. Put the plug into the wall socket.
5. Switch on the appliance by setting the On/Off switch to 'I'. After a few minutes most maize kernels will pop and fall into the bowl.

TIP: You can flavor your popcorn with, for example, the melted butter, sugar or salt.

6. Switch the appliance off by setting the On/Off switch to '0'.
7. Pull the plug out of the socket.
8. Let the appliance cool down for about 15 minutes before using it again or storing it.
9. Corn kernels may remain in the pop room. Remove it immediately after the appliance has cooled down. That is to prevent caking of food residues.

CLEANING AND MAINTENANCE

Clean the appliance and the loose parts thoroughly after each use:

1. Remove the plug from the wall socket, and allow the appliance to cool down completely for about 15 minutes.
2. Remove any food residues from the popping chamber.
3. Clean the appliance with a damp cloth after each use, and then dry thoroughly.
4. Clean the lid and the measuring scoop with standard washing-up liquid. Rinse with clean water, and dry thoroughly.
5. Keep the appliance in a dry place.

ATTENTION:

- Verify that the appliance is not connected to the power supply before you clean it.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.

SERVICE

If an unexpected problem occurs, please visit www.bestron.com/service for assistance.



ALL YOU WANT TO KNOW ABOUT YOUR UNIQUE 5 YEAR WARRANTY

BESTRON.COM/GUARANTEES



<http://www.bestron.com/whatsapp>




NEED HELP? CHAT WITH US!
WHATSAPP CUSTOMER SERVICE

[BESTRON.COM/WHATSAPP](https://www.bestron.com/whatsapp)

v230509-02

Documents / Resources

| | |
|---|--|
|  | <p>bESTRON APC1007P Popcorn Maker Machine [pdf] Instruction Manual APC1007P Popcorn Maker Machine, APC1007P, Popcorn Maker Machine, Maker Machine, Machine</p> |
|---|--|

References

- [» Guarantee EN](#)
- [» Service EN](#)
- [» Service NL](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.